

Model AS-9050 Owner's Manual

3 Channel Remote Car Starter

 
FEATURES:

- 2 Programmable RF Transmitters
- Three Channel Receiver (capable of accepting 4 transmitters)
- On-Board Start Relay
- On-Board Accessory Relay
- On-Board Ignition 1 Relay
- On-Board Ignition 2 Relay
- Ignition 2 Relay Selectable On or Off During Cranking
- On-Board Parking Light Relay
- Ignition 3 / Shock By-Pass / GM VAT Output (relay required)
- Tach Signal Learning Circuit
- Two (+) and Two (-) Safety Shutdown Circuits
- Alarm By-Pass Output
- Accessory Outputs (Pulse Before & After Start, During Crank & After Shut Down)
- Selectable Steady or Flashing Parking Lights for Run Indication
- ◆ Selectable 5, 10, 15, 20 Minute Run Time

Released: 6/06

128-7749

REMOTE STARTING THE VEHICLE



The vehicle's hood lid is opened.

The gear shift selector is not in Park.

The brake pedal is depressed.

The safety control switch is in the Off position.

1. To start the vehicle, press and release the transmitter button two times within 2 seconds. The vehicle will start and remain running for the pre-programmed 5,10,15,20 minute run cycle. As a visual indication, the parking lights will flash or remain on depending on the setting by your installation center.

2. When you arrive at the vehicle, turn the ignition key to the ON position (not the spring loaded start position), then step on the brake pedal to disengage the remote starter. The vehicle will continue to run, but now on it's own power.

NOTE: The engine will stop running before the pre-programmed run cycle has expired if you perform any one of the following functions;

-Press and the button on the keychain transmitter two times within 2 seconds.

- -Depress the brake pedal.
- -Open the vehicle's hood
- -Move the safety control switch to the Off position.

SAFETY CONTROL SWITCH

The red handle control switch allows you to temporarily disable the remote starting function of the system and moving this switch to the Off position is recommended whenever the vehicle is being serviced. When the system is disabled, the remote door locks and optional accessories will remain operational.

FUNCTION SETTING CHART

To be completed by installer

Run Time	5 Min □	10 Min □	15 Min □	20 Min □

Lights Pulse □ Steady □

	For Customer Service Visit Our Website At WWW. Audiovox.com Product Information, Photos, FAC's, Owner's Manuals
--	--

© 2006 Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

128-7749