USER'S MANUAL

VIDEO/AUDIO RF MODULATOR

RCA MODEL : CRF900

NOTE TO CATV SYSTEM INSTALLER:

INTRODUCTION

Your Video RF Modulator is designed to convert the separate audio and video signals (from a video camera, computer, portable VCR, or satellite receiver, for example) into VHF TV signals that you can view on a TV set.

The FCC Wants You to Know

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your modulator might cause TV or radio interference even when is operating properly. To determine whether your modulator is causing the interference, turn it off. If the interference goes away, your modulator is causing it.

Try to eliminate the interference by:

- · moving your RF Modulator away from the receiver
- connecting your RF Modulator to an outlet that is on a different electrical circuit from the receiver
- · contacting your local store for help

If you cannot eliminate the interference, the FCC requires that you stop using your RF Modulator.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's FCC authorization to operate this equipment.

REQUIRED PARTS

The following items (not supplied) are required to connect your RF Modulator to a video input source and your TV.

- one audio/video shielded cable with three phono connectors at each end, if the video source's audio output is stereo; or one audio/video shielded cable with two phono connectors at each end if the video source's audio output is monaural
- two 75-ohm coaxial cables with F-type connectors
- a 75-ohm-to-300-ohm matching transformer, if your TV does not have a VHF 75-ohm F-connector

Note: The audio signal will be modulated to mono, whether the video source is stereo or monaural.

Note to the CATV System Installer: This reminder is provided to call the CATV system installer's attention to article 820-22 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

CONNECTIONS


Follow these steps to connect your RF Modulator.

1. If your video source is stereo, plug the connectors on one end of a stereo A/V cable into the video and audio input jacks on the RF Modulator. Plug the connectors on the cable's other end into to video and audio output jacks on the video source, using the color coding on the connectors as a guide.

Video Source


| Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video Source | Video


If your video source is monaural, plug the connectors on one end of an A/V cable into the video and audio input jacks on the RF Modulator (using either the AUDIO R or L jack). Plug the cable's other ends into the video and audio jacks on the video source. Connect the 75-ohm coaxial cables to the RF Modulator following these guidelines:

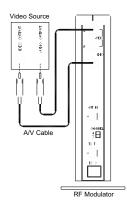

• If your TV is already connected to another VHF input source (such as cable, an antenna, or a VCR, for example), disconnect the VHF input source's 75-ohm cable from the TV's 75-ohm VHF/UHF terminal, and reconnect it to the RF Modulator's ANT IN terminal. Then connect a 75-ohm coaxial cable between the TO TV terminal on the RF Modulator and the 75-ohm VHF/UHF terminal on your TV.

 
• If your TV is not already connected to another VHF source, connect a 75-ohm coaxial cable between to the TO TV terminal on the RF modulator and the 75-ohm VHF/UHF terminal on your TV.

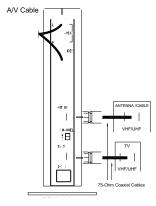



Note: If your TV has only 300-ohm VHF screw terminals, use a 75-ohm-to-300-ohm matching transformer to complete the connection.

 Plug the RF Modulator's power cord into a standard AC outlet. Note: This power unit is intended to be correctly oriented in a vertical or floor mount position.

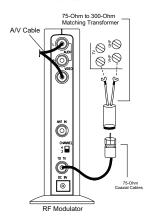


INSTALLATION


Seat the RF Modulator vertically:
 Plug in the seat plate (included) on the bottom of the RF Modulator until The locking tab of the seat plate clicks in to secure the plate to the RF Modulator.



 - 2. Seat the RF Modulator horizontally:
- 2.1 While pulling up the locking tab, remove the seat plate by pushing out the seat plate.




 - 2.2 Attach the four self-adhesive rubber pads (included) to the side face of the RF Modulator.
- 2.3 Lay down the RF Modulator on the side with the rubber pads.



OPERATION

 - 1. Turn on the TV and set it to either Channel 3 or 4. whichever is not used for regular broadcasts in your area.
- 2. Set the RF Modulator's CHANNEL 3/4 switch to the same channel you set the TV (3 or 4).
- Turn on the connected video source and set OHMS 75/1K on the RF Modulator to the position that gives the best picture. The video ON signal indicator on the RF Modulator lights when the modulator is receiving a signal for an A/V source.



CARE

To enjoy your RF Modulator for a long time:

- · Keep the modulator dry. If it gets wet, wipe it dry immediately.
- Use and store the modulator only in normal temperature environments.
- · Handle the modulator gently and carefully. Don't drop it.
- · Keep the modulator away from dust and dirt.
- Wipe the modulator with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the modulator's internal components can cause a malfunction and invalidate its warranty and void your FCC authorization to operate it. If your modulator is not performing as it should, take it to your local store for assistance.

SPECIFICATIONS

Video Carrier Output Level	69dBµV
RF Output Channels	3 or 4
RF Output Impedance	75 Ohms
Audio Input Impedance	13±3K Ohms
TV to ANT Insertion Loss 50 - 806 MHz	2dB
DC Adapter	9 VDC/100mA
Dimensions 5 ²³	
Weight	,

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

12 Month Limited Warranty

Audiovox Electronics Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The Warranty does not extend to the elimination of externally generated static or noise. This Warranty does not apply to costs incurred for installation, removal or reinstallation of the product, or, if in the Company's opinion, the product has been damaged through acts of nature, alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable). This Warranty does not cover damage caused by an AC adapter not provided with the product.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

U.S.A.: Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788

CANADA: Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5

© 2007 Audiovox Accessories Corporation 111 Congressional Blvd., Suite 350 Carmel IN 46032

PCRF900IB Rev0507

Trademark(s) ®Registered

Made in China