


ENGLISH

JENSEN®

three-component universal remote

Battery Installation

Your universal remote requires two AA alkaline batteries (batteries may or may not be included, depending on model). To install the batteries:

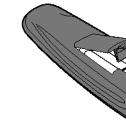

1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Press and push the battery cover back into place.

Note: Reprogramming may be required after batteries are replaced.

Battery Saver

Your universal remote control uses battery power by automatically turning off if a key is pressed for more than 60 seconds. When a key is pressed, it stays in battery mode until the key is released. The OFF key is used in Programming Mode or in Home Mode to turn off the remote.

Illuminated ON-OFF Key

The OFF key powers components on and off. It also lights up to serve as an indicator light, providing feedback for various functions. When a valid key is pressed, the illuminated ON-OFF key blinks, indicating you are in the component key. When the key is released, the OFF key is used in Programming Mode or in Home Mode to turn off the remote.

Backlighting

Backlight illumination (available on selected models) enables you to see the remote control keys better in the dark. Backlight illumination is toggled on or off with successive keypresses of the BACKLIGHT button. The backlighting remains active for approximately 10 minutes after the last keypress. Once the backlight time has expired, any keypress will reactivate the backlight. If the backlight illumination is on, and the BACKLIGHT key is pressed, the backlight turns off.

Programming the Remote

In order for your universal remote to control your components, you need to program the remote with the codes that controls the components (See Code Lists enclosed). These code enable the remote to communicate with your components. Each key and each component key must be programmed individually. You can program the remote with your component keys or with the component codes from the code lists. If you are using the component keys, make sure to keep the remote pointed at the IR sensor of the component you are programming the remote to control.

Programming Methods

Direct Code Entry

To program the remote to control your components using the Direct Code Entry Method, follow the steps below:

1. Manually turn on the component you want the remote to control (TV, VCR, DVD, etc.).
2. Locate the encoded Code Lists. Find the list for the component you wish to program. For your component's brand, you will see a listing of four-digit codes for each brand.

Manual Code Search and Entry

The component search method allows you to have all of the codes for your brand and the remote does not operate your component, try Manual Code Search.

Using the Remote to Control Your Components

Because this remote controls more than one component, you must first "tell" the remote which component you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. If you enter a code number for another component, the remote will change modes. If you enter a valid code that is not in the Code Lists or you do not follow all of the steps above, the remote will not operate the component you desire. If the component key is released, this indicates a programming error. This occurs if step 3 and try the next code listed. 6. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Brand Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Locate the Brand Codes in the Code Lists and keep it open.

Note: If you press an invalid key for the Direct Code Search, the remote does not respond. Turn the remote off and then on again. Turn the remote off and then on again after the last keypress. Once the backlight time has expired, any keypress will reactivate the backlight. If the backlight illumination is on, and the BACKLIGHT key is pressed, the backlight turns off.

GO BACK [TV] To exit without saving at any point in the Brand Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Locate the Brand Codes in the Code Lists and keep it open.

Note: If you press an invalid key for the Direct Code Search, the remote does not respond. Turn the remote off and then on again. Turn the remote off and then on again after the last keypress. Once the backlight time has expired, any keypress will reactivate the backlight. If the backlight illumination is on, and the BACKLIGHT key is pressed, the backlight turns off.

GO BACK [TV] To exit the Remote Retrieval Mode, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. While holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. After the fourth number is entered, the illuminated ON-OFF key blinks briefly, then turns off.

GO BACK [TV] To exit the Remote Retrieval Mode, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.

4. After holding down both keys for three seconds, the illuminated ON-OFF key turns on.

5. To confirm that the component key is programmed with the correct code for

GO BACK

[TV] To exit without saving at any point in the Manual Code search, press and release the GO BACK key.

1. Manually turn on the component you want the remote to control.

2. Press and hold the component key (TV, DVD-VCR, SAT-CBL) you wish to program.

3. While holding the component key down, press and hold the ON-OFF key. The illuminated ON-OFF key blinks.