



A black and white photograph showing the front left corner of a vehicle, featuring a headlight and a wheel. The background is a textured surface, possibly asphalt or gravel.

# ***PROPLM*** ***Owner's Manual***

## ***Keyless Entry Upgrade Security System***

**IMPORTANT NOTE:** The operation of the Security and Convenience System as described in this manual is applicable to most vehicles. However, due to the configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.

## ***Table of Contents***

**Features and Benefits .....** 3

**System Functions .....** 4

- Arming the system
- Disarming the system
- Using valet mode

**When Your Security System is Triggered .....** 4

**When Your Security System is Triggered, Continued .....** 5

- Attempted Intrusion identification

**Emergency Disarm Procedure .....** 5

**Basic Troubleshooting .....** 5

**Warranty .....** 6

## **Features and Benefits**

### **■ Two Easy-to-Use Weather-Resistant Remote Controls**

The upgrade security system utilizes your factory keyless entry remote controls and adds a complete vehicle security system while retaining factory functions.

### **■ All Entrances Protected**

Opening any door or entrance protected by the security system triggers the vehicle's horn and flashes the parking lights.

### **■ Starter Disable**

The PROPLM Security System protects your vehicle from theft by disabling the starter when the system is armed.

### **■ Interior Theft Sensor**

This sensor guards against vehicle body damage, theft of vehicle equipment (such as air bags), and personal belongings inside the vehicle.

### **■ Interior Status Indicator**

The LED warning light is an effective visual deterrent to a would-be thief.

**IMPORTANT NOTE:** The operation of the PROPLM Security System as described in this manual is applicable to most vehicles. However, due to the engine type and configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.

## **System Functions**

### **■ Arming the Security System**

To arm the system, exit the vehicle, close all doors, then press the LOCK button on your keyless entry remote control. The system will flash the parking lights 1 time, indicating the system is armed, and activated the starter disable feature. The status indicator (LED warning light) will blink steadily, once per second.

**NOTE:** If one of the vehicle's doors has been left open the system will chirp 3 times upon arming the security system.

### **■ Disarming the Security System**

To disarm the system press the UNLOCK button. The system will flash the parking lights 2 times.

### **■ Using Valet Mode**

#### **To engage valet mode:**

1. Turn the ignition key ON/OFF, ON/OFF, ON/OFF.
2. The LED will flash 2 times quickly then pause indicating that the system is in valet mode.

When valet mode is activated all security functions will be disabled.

#### **To disengage valet mode:**

1. Turn the ignition key ON/OFF, ON/OFF, ON/OFF.
2. The LED will turn off indicating that the system has exited valet mode.

## **When Your Security System is Triggered**

The PROPLM Security System will trigger if one of the following events occurs while the system is armed:

- Any protected entrance is opened.
- The vehicle ignition is turned on.
- The vehicle is jolted hard enough to signal the impact sensor.

Once the alarm is triggered, the horn will sound and the vehicles parking lights will flash for 30 seconds. The system will then re-arm, awaiting the next intrusion attempt.

## ***When Your Security System is Triggered, Continued***

### ***Attempted Intrusion Identification***

Pressing UNLOCK after a full 30 second trigger cycle has completed, the horn will honk 4 times and the LED will flash a number of times to indicate which input triggered the alarm. Turning on the ignition or pressing the valet/override button will reset the LED flashes, pressing the valet/override button will also honk the horn to match the LED flashes before it resets.

#### **Number of flashes:**

- 1 - Interior Theft Sensor (Shock Sensor)
- 2 - Door Input
- 3 - Hood Input
- 4 - Trunk Input
- 5 - Ignition

## ***Emergency Disarm Procedure***

If your remote control is lost or fails to function, use this procedure to disarm the security system and start your vehicle.

- 1 - Use the keys to enter the vehicle. The alarm will sound once the door is opened.
- 2 - Insert the key into the ignition and turn to the ON position.
- 3 - Locate and press the emergency override button. The alarm will turn off and then you will be able to start the vehicle.

### ***Your Emergency Override Button is Located:***

---

## ***Basic Trouble Shooting***

<b><u>Symptom</u></b>	<b><u>Problem</u></b>	<b><u>Solution</u></b>
Remote does not work:	Weak or dead battery.	Change battery.
System will not arm:	Door or entrance is open. Courtesy light is on. System is in Valet mode.	Close entrance. Turn courtesy light off. Exit Valet mode.



## 60 MONTH LIMITED WARRANTY

Applies to Pursuit Series Control Modules, Sirens, Sensors, and Relays.

AUDIOVOX Electronics Corporation (the Company) warrants to the original purchaser of this product that should this product, (other than transmitters) under normal use and conditions, be proven defective in material or workmanship within 60 months of the date the unit was originally installed, such defect(s) will be repaired or replaced with new or reconditioned product, (at the Company's option) without charge for parts or repair labor. During the first 12 months of the warranty, there will be no charge for removing or reinstalling a product if performed at a participating authorized Travelers Warranty Station. A transmitter is warranted for 12 months from the date of original purchase.

### TRAVELER'S WARRANTY SERVICE 1-800-645-4994

Simply call toll free to our customer service office for reference to the authorized Warranty Station in your area and to obtain an Authorization number. No repairs or replacement will be made without a valid Authorization number.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. This Warranty is not transferable.

This Warranty does not cover damage to the vehicle's electrical system or, except as above provided, costs incurred for removal or re-installation of the product. This Warranty does not cover batteries nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, abuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 72 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT WITHOUT INSTALLATION LABOR.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**TRAVELER'S WARRANTY DEPARTMENT U.S.A. :** Audiovox Electronics Corporation, 150 Marcus Blvd, Hauppauge, New York 11788



**FCC COMPLIANCE**

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

**Warning!**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.