 


DVD DVD  
DVD DVD

 **AUDIOVOX™**

**PVS72901**

## **9" Twin DVD Player**

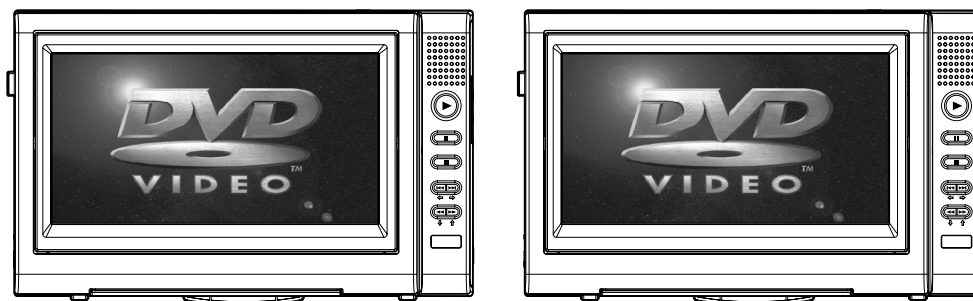

---

**OWNER'S MANUAL**

## SAFETY PRECAUTIONS



The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner's manual.




**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF POWER OUTLET, THEN FULLY INSERT.**

\* SEE REAR OF UNIT FOR GRAPHIC SYMBOLS \*

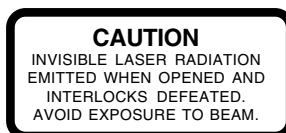

This product contains a low power laser device.

The symbol for Class II (Double Insulation)

### On Placement

- Do not use the unit in places that are extremely hot, cold, dusty, or humid.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting.

### FCC Information

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment, used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

### On Safety

- When connecting or disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long time, disconnect the power adapter.

### On Condensation

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and let the unit dry before use.

### Rating Plate Location

- The rating plate location is on the rear of the unit.



**WARNING:** Should any trouble occur, disconnect the car power adapter and refer servicing to a qualified technician.

### Notes on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission.

Apparatus Claims of U.S. Patent Nos. 4,907,093; 5,315,448; and 6,516,132 licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## TABLE OF CONTENTS

<b>Safety Precautions .....</b>	<b>1</b>	<b>Unit Operation .....</b>	<b>13</b>
<b>Important Safety Instructions .....</b>	<b>2</b>	<b>Inserting a DVD or CD .....</b>	<b>13</b>
<b>Table of Contents .....</b>	<b>3</b>	<b>Playing a Disc .....</b>	<b>13-14</b>
<b>Disc Formats .....</b>	<b>4</b>	Playing a Disc .....	13
<b>Accessories .....</b>	<b>4</b>	Pausing Playback (Still Mode) .....	13
<b>Control Reference Guide .....</b>	<b>5-6</b>	Stopping Playback .....	14
Unit A .....	5	Fast Forward/Fast Reverse .....	14
Unit B .....	6	Skip (Forward/Reverse) .....	14
<b>Power Supply .....</b>	<b>7</b>	Audio Selection .....	14
Using the Supplied Car Power Adapter ....	7	Subtitle Selection .....	14
<b>Connections .....</b>	<b>8-11</b>	Adjust the LCD Screen .....	14
Connecting the Unit to a TV .....	8	<b>Viewing JPG Files .....</b>	<b>15</b>
Connecting to a Stereo Receiver or Amplifier .....	8	<b>Play Modes for CD or JPG Discs ....</b>	<b>15</b>
Connecting Game Systems/Video Equipment .....	9	<b>Customizing the Function Settings .....</b>	<b>16-17</b>
Watching the Same DVD on Both Units ...	9	Language Setup .....	16
Watching a Different DVD on Each Unit ...	10	Video Setup .....	17
Using Unit A with Other Equipment while .....	10	Misc Setup .....	17
Playing DVD on Unit B .....	10	<b>Maintenance .....</b>	<b>18</b>
Using Headphones (not included) .....	11	Cleaning the Disc .....	18
<b>Using the Stand for Desktop Use ....</b>	<b>11</b>	Cleaning the Unit .....	18
<b>Installing in a Vehicle .....</b>	<b>11</b>	Important Note .....	18
<b>Installation Guide .....</b>	<b>12</b>	<b>Troubleshooting Guide .....</b>	<b>18</b>
<b>Screen Viewing Angle Adjustment .....</b>	<b>12</b>		
<b>Sound System .....</b>	<b>12</b>		

## DISC FORMATS

The unit can playback discs bearing any of the following marks:



DVDs  
[8cm / 12cm disc]



Audio CDs  
[8cm / 12cm disc]

**CD-R CD-RW**  
Compatible

### Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVD video discs. If the region number printed on the DVD video disc does not correspond to the region number of this unit, this unit cannot play that disc.


The region number of this unit is 1.

### Disc Function or Operation that is Not Available

When the symbol appears on the TV screen, it indicates that the function or operation attempted is not available at that time. This occurs because the DVD video disc manufacturer determines the specific functions. Certain functions may not be available on some discs. Be sure to read the documentation provided with the disc.

### Icons Used on DVDs

Sample Icons

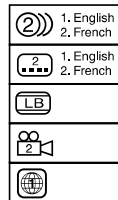

Language selections for audio

Language selections for subtitles

Screen aspect ratio

Multiple camera angles


Region code indicator

#### Note:

- When playing back a CD-G (Graphics) or CD EXTRA disc, the audio portion will be played, but the graphic images will not be shown.

### Title, Chapter and Tracks

- DVDs are divided into “titles” and “chapters”. If the disc has more than one movie on it, each movie would be a separate “title”. “Chapters” are sections of titles.
- Audio CDs are divided into “tracks”. A “track” is usually one song on an Audio CD.

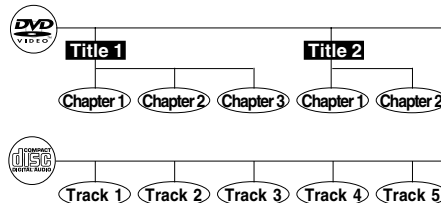

#### Note :

- Numbers identify each title, chapter, and track on a disc. Most discs have these numbers recorded on them, but some do not.

#### Notes on Unauthorized Discs

You may not be able to playback some DVD video discs on this unit if they were purchased from outside your geographic area or made for business purposes.

## ACCESSORIES


### Please check and identify the supplied accessories.

- To order accessories please visit <http://www.1800customersupport.com/audiovox>

- ☐ Car Power Adapter ..... x 2
- ☐ Mounting Strap ..... x 2
- ☐ DC-AV Cable ..... x 1
- ☐ Carrying Bag ..... x 1

## CONTROL REFERENCE GUIDE

### Unit A

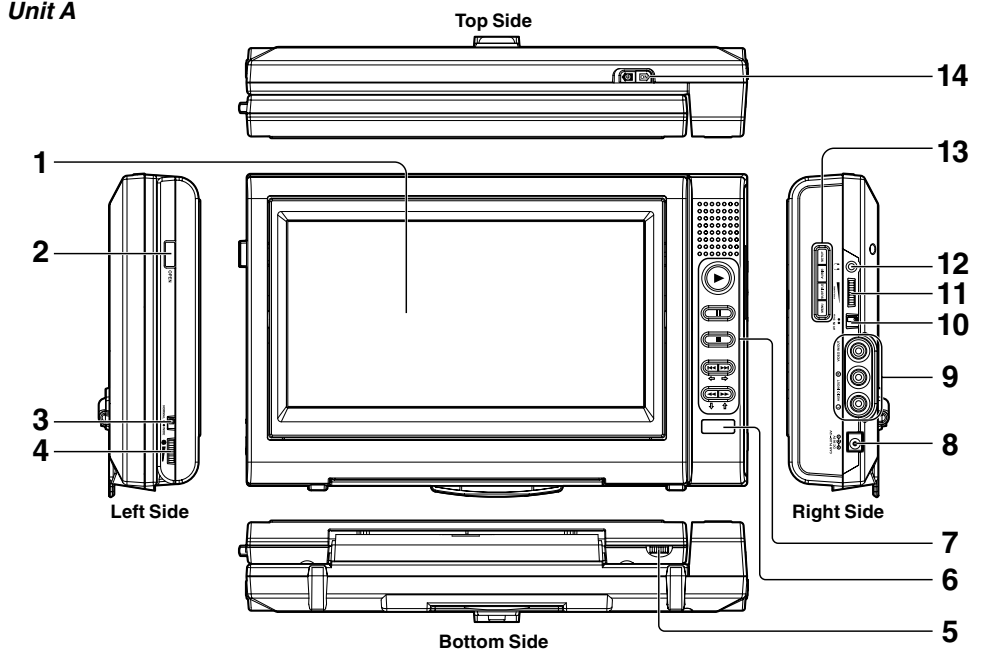

- 1) **LCD screen**
- 2) **OPEN knob**  
Opens the disc door.
- 3) **SCREEN switch**  
WIDE: Wide screen  
NORMAL: Pan screen
- 4) **BRIGHTNESS control**  
Adjust the lightness or darkness of the screen.
- 5) **COLOR control**  
Adjust for color intensity.
- 6) **Remote sensor**  
Receive the remote control unit signals.  
Remote control is optional.  
To order a remote control visit  
<http://www.1800customersupport.com/audiovox>

- 7) **▶ (PLAY) button**  
Start or resume playback of a disc.  
Confirm selections on a menu screen.
- ⏸ (PAUSE) button**  
Pause playback, frame advance.
- (STOP) button**  
Stop playing a disc.
- ⏮ / ⏭ (◀ / ▶) buttons**  
**⏮ (PREVIOUS)**: Press and hold for more than 2 seconds to go back to current or previous chapters/tracks.  
**⏭ (NEXT)**: Press and hold for more than 2 seconds to advance chapters/tracks.  
**◀ / ▶ (LEFT / RIGHT)**: Press to highlight selections on a menu screen and adjust certain settings.

#### ⏮ / ⏭ (⏮ / ⏭) buttons

**⏮ (FAST REVERSE SEARCH)**: Press and hold for more than 2 seconds to perform fast reverse playback.

 
**⏭ (FAST FORWARD SEARCH)**: Press and hold for more than 2 seconds to perform fast forward playback.

**⏮ / ⏭ (UP / DOWN)**: Press to highlight selections on a menu screen and adjust certain settings.

- 8) **CAR PLUG -12V DC-IN plug**
- 9) **VIDEO & AUDIO IN/OUT jacks**
- 10) **AV IN / DVD switch**  
Select between the DVD player or an external video source.
- 11) **VOLUME control**  
Adjust the volume.
- 12) **Headphone jack**
- 13) **SETUP button**  
In stop mode, enter and exit the SETUP menu.  
In play mode, adjust Brightness, Contrast, Color or View Mode of the LCD screen.
- AUDIO button**  
In play mode, select one of the audio sound tracks programmed on a DVD or select the audio output mode on an Audio CD.
- SUBTITLE button**  
In play mode, select one of the subtitle languages programmed on a DVD.
- MENU button**  
In play mode, open and close DVD menu.
- 14) **⏻ (STANDBY) / ON switch**

## CONTROL REFERENCE GUIDE

### Unit B

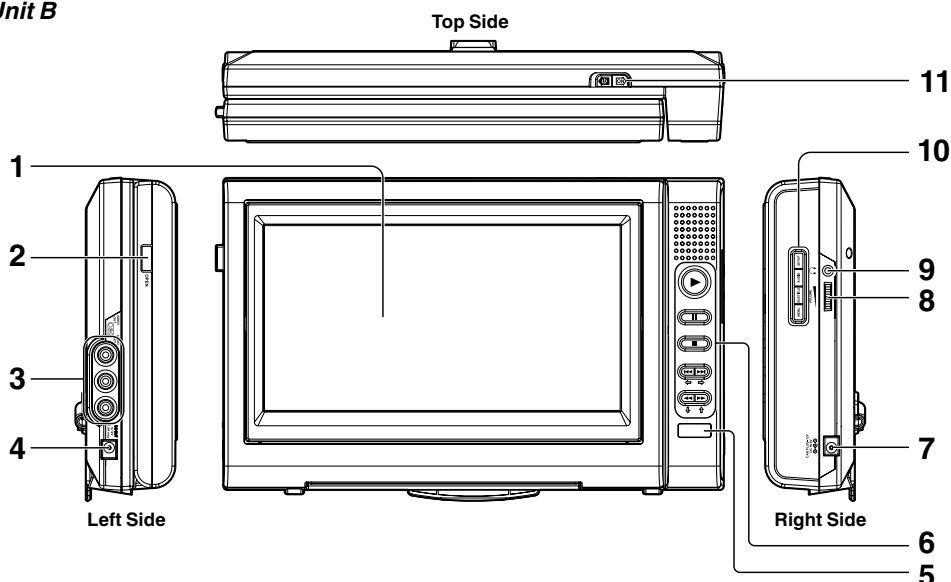


- 1) **LCD screen**
- 2) **OPEN knob**  
Opens the disc door.
- 3) **VIDEO & AUDIO OUT jacks**
- 4) **DC OUT 9-12V 1.5A max. jack**
- 5) **Remote sensor**  
Receive the remote control unit signals.  
Remote control is optional.  
To order a remote control visit  
<http://www.1800customersupport.com/audiovox>
- 6) **▶ (PLAY) button**  
Start or resume playback of a disc.  
Confirm selections on a menu screen.  
**⏸ (PAUSE) button**  
Pause playback, frame advance.  
**■ (STOP) button**  
Stop playing a disc.  
**⏮ / ⏭ (◀ / ▶) buttons**  
**⏮ (PREVIOUS):** Press and hold for more than 2 seconds to go back to current or previous chapters/tracks.  
**⏭ (NEXT):** Press and hold for more than 2 seconds to advance chapters/tracks.  
**◀ / ▶ (LEFT / RIGHT):** Press to highlight selections on a menu screen and adjust certain settings.  
**⏮ / ⏭ (↑ / ↓) buttons**  
**⏮ (FAST REVERSE SEARCH):** Press and hold for more than 2 seconds to perform fast reverse playback.  
**⏭ (FAST FORWARD SEARCH):** Press and hold for more than 2 seconds to perform fast forward playback.  
**↑ / ↓ (UP / DOWN):** Press to highlight selections on a menu screen and adjust certain settings.
- 7) **CAR PLUG -12V DC-IN plug**
- 8) **VOLUME control**  
Adjust the volume.
- 9) **Headphone jack**
- 10) **SETUP button**  
In stop mode, enter and exit the SETUP menu.  
In play mode, adjust Brightness, Contrast, Color or View Mode of the LCD screen.  
**AUDIO button**  
In play mode, select one of the audio sound tracks programmed on a DVD or select the audio output mode on an Audio CD.  
**SUBTITLE button**  
In play mode, select one of the subtitle languages programmed on a DVD.  
**MENU button**  
In play mode, open and close DVD menu.
- 11) **⏻ (STANDBY) / ON switch**

## POWER SUPPLY

 
### Using the Supplied Car Power Adapter

The included 12V car power adapter is designed for use with vehicles that have a 12V, negative ground electrical system.

### Using Unit A and Unit B together

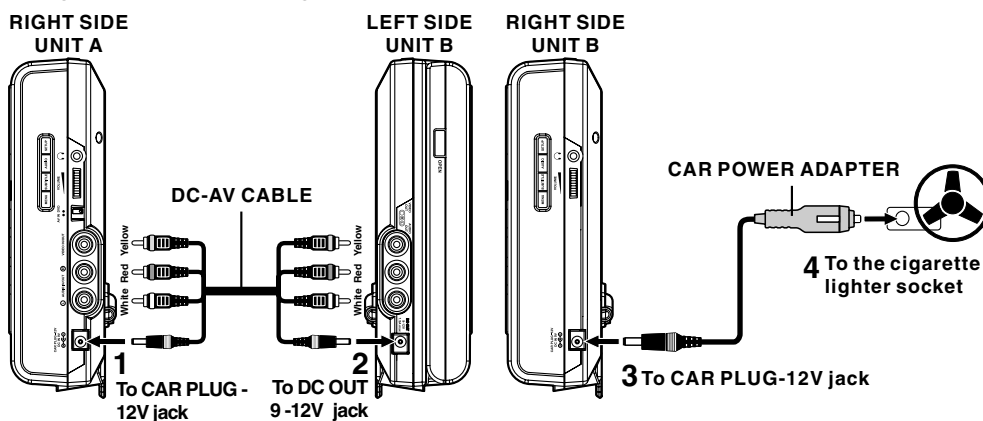

### Using Each Unit in a Different Vehicle

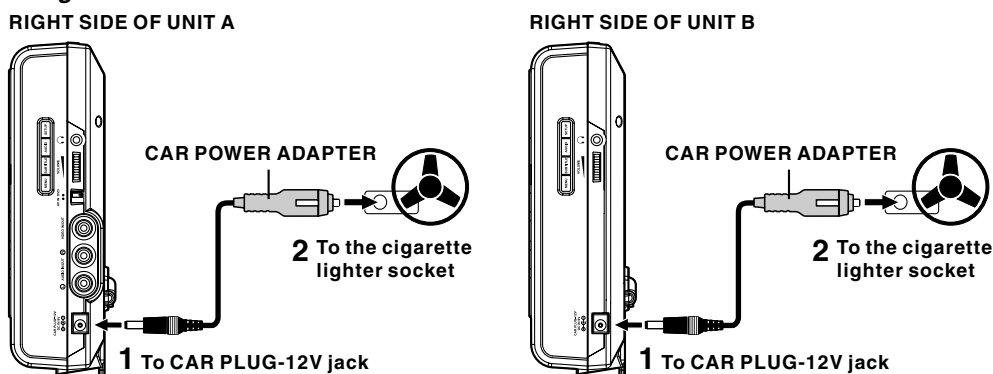


**Note:** With the 2 supplied car power adapters, you can use Unit A and Unit B in 2 vehicles.

**WARNING:**  
Disconnect the car power adapter  
when not in use.  
Not for use in 24V vehicles.

### CAUTION:

For continued protection against  
risk of fire, replace only with  
same type and rating of fuse.

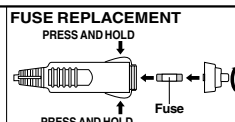

#### Cautions:

- Use this unit only with the included 12V car power adapters. Use with other car adapters could damage the unit, or even your vehicle.
- The included 12V car power adapters are for use with this unit only. Do not use them with any other equipment.
- In the interest of traffic safety, drivers should not operate the unit or view videos while driving.
- When the inside of the 12V car socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the 12V car socket before use.
- After use, disconnect the 12V car power adapter from both Unit A and/or B and from the 12V car socket.
- If the unit is not properly attached to a vehicle, it may become airborne in the event of an accident and cause damage, injury, or death.
- Check your local traffic laws for rules governing the use of video devices in vehicles.




## CONNECTIONS


### A. Connecting the Unit to a TV

This DVD player (Unit A or B) can be used with a TV that has A/V inputs.

#### RIGHT SIDE OF UNIT A

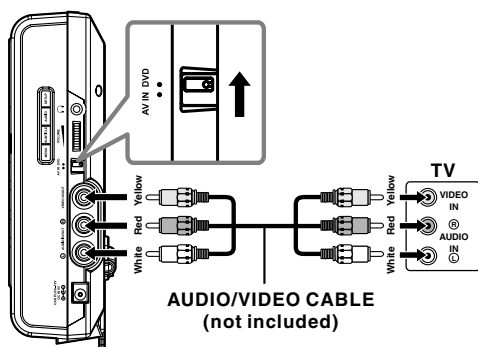

#### LEFT SIDE OF UNIT B

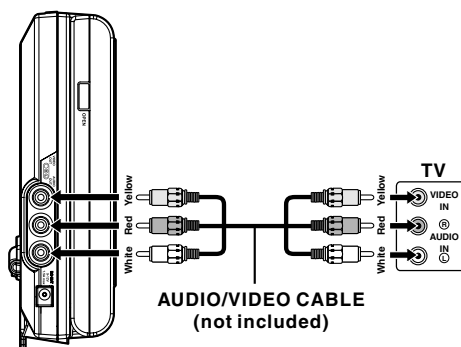

#### Watching a DVD on your TV

1. Turn on the unit. Set the **AV IN / DVD** switch on the Unit to DVD. If you are using Unit B, there is no **AV IN / DVD** switch.
2. Connect the unit to the A/V In jacks on your TV using a standard A/V cable (not included).


#### Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If your TV does not have Audio/Video inputs, you will need to purchase an RF modulator (sold separately) and follow the instructions included with it to connect the unit to your TV.


### B. Connecting to a Stereo Receiver or Amplifier

This DVD player (Unit A or B) can play two channels Dolby Digital.

#### RIGHT SIDE OF UNIT A

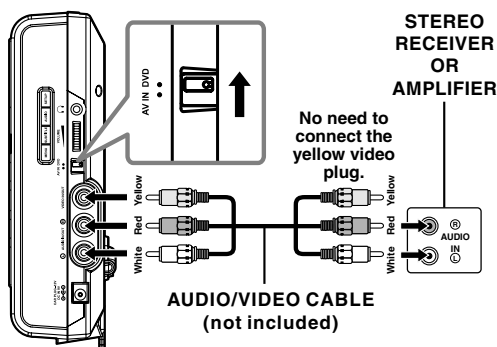

#### LEFT SIDE OF UNIT B

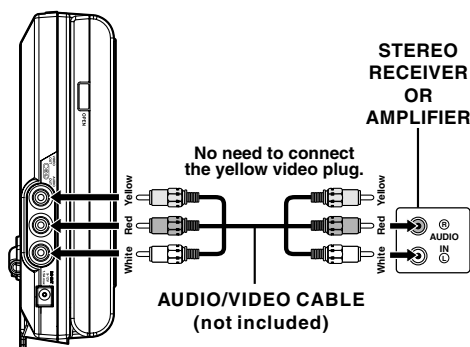

#### Listening on external audio equipment

1. Turn on the unit. Set the **AV IN / DVD** switch on the Unit to DVD. If you are using Unit B, there is no **AV IN / DVD** switch.
2. Connect the unit to the left/right Audio In jacks on the other equipment using a standard Audio cable (not included).
3. Turn on your audio equipment and follow the instructions provided with it to select the AUDIO IN function.


#### Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a stereo VCR, make sure you set it to stereo mode.
- Due to copyright protection, DVD movies cannot be copied. If you copy a DVD movie onto a videotape, the resulting copy will be unclear, with poor sound quality. This is NOT caused by a defective DVD system.

## CONNECTIONS

### C. Connecting Game Systems/Video Equipment

You can connect game systems or other video equipment for playback through Unit A only. You cannot connect these systems to Unit B.

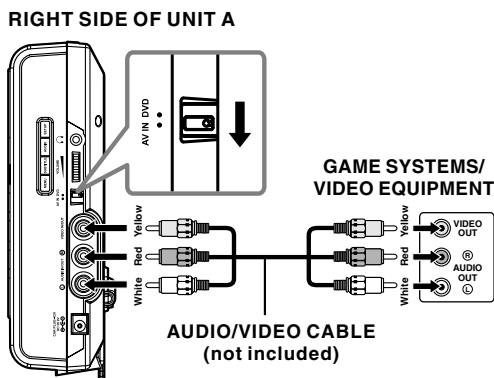

#### Watching video equipment


1. Turn on Unit A. Set the **AV IN / DVD** switch to AV IN.
2. Connect the other equipment to Unit A using a standard AV Cable.
3. Turn on the video equipment and follow the instructions provided with it to playback.

#### Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a mono VCR, the volume level from the speakers will be low.

### D. Watching the Same DVD on Both Units

You can watch the same DVD on both Units.

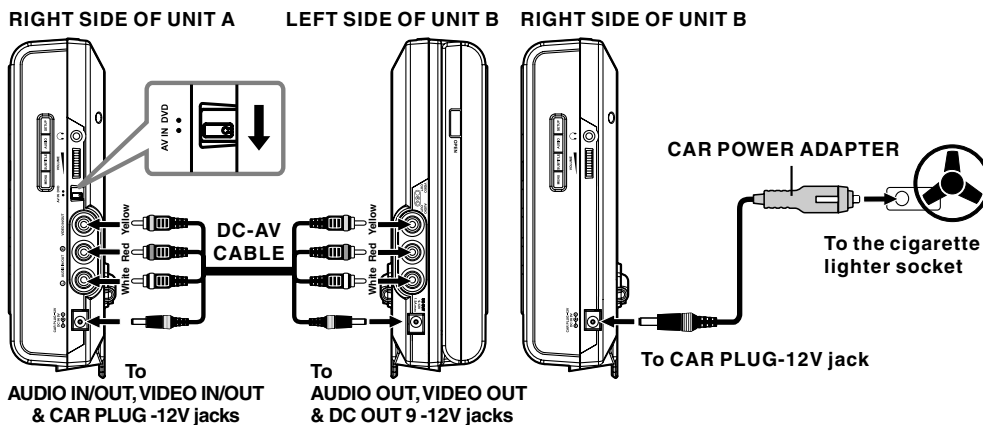

#### Watching the same DVD on both Units

1. Turn on Unit A and B. Set the **AV IN / DVD** switch on Unit A to AV IN.
2. Connect Unit A and B using the included DC-AV Cable.
3. Play a DVD on Unit B; Unit A will play at the same time by AV IN.


#### Note:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.

## CONNECTIONS

### E. Watching a Different DVD on Each Unit

You can watch 2 DVDs on Unit A and B separately.

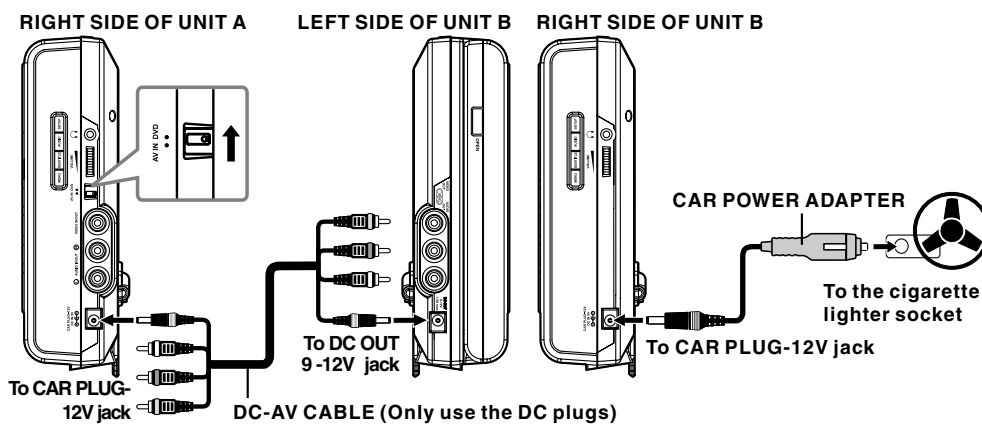


#### Play 2 DVDs on Unit A and B separately

1. Connect only the power connector between Unit A and Unit B. Do not connect the Audio/Video portion of the cable.
2. On Unit A, set the AV IN/DVD switch to DVD.
3. Turn on Unit A and B. Play a DVD on Unit A; play another DVD on Unit B.

### F. Using Unit A with Other Equipment while Playing DVD on Unit B

You can use a game console or other video equipment on Unit A while playing a DVD on Unit B.

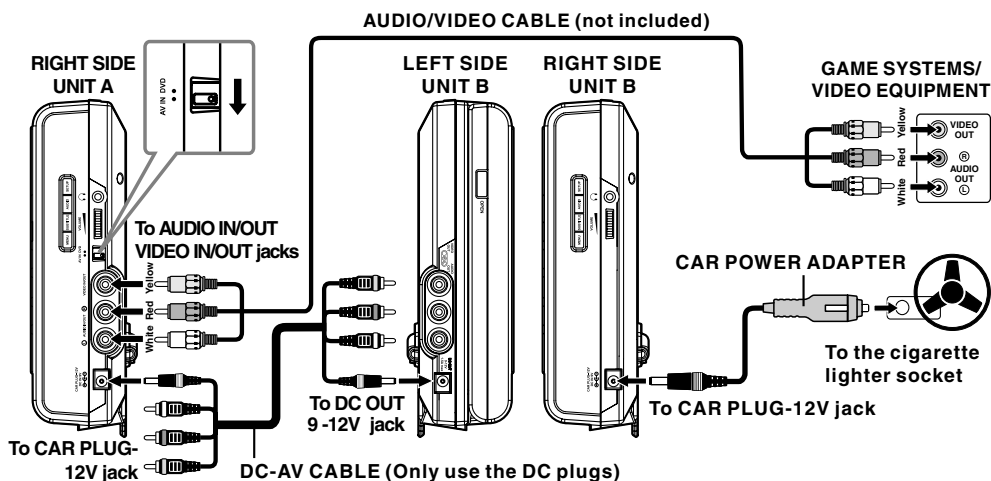

#### Watching Video Equipment on Unit A while Playing DVD on Unit B

1. Connect only the power connector between Unit A and Unit B. Do not connect the Audio/Video portion of the cable.
2. On Unit A, set the AV IN/DVD switch to AV IN.
3. Connect Unit A to the other equipment using a standard AV cable (not included).
4. Turn on both units and the other equipment.
5. Play a DVD on Unit B
6. Use Unit A for the other equipment.


#### Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a mono VCR, the volume level from the speakers will be low.


## CONNECTIONS

### F. Using Headphones (not included)

Turn down the volume before connecting the headphones/earphones. Slowly raise the volume with the headphones on until you reach your desired volume. When headphones are connected, the speaker is automatically disabled.

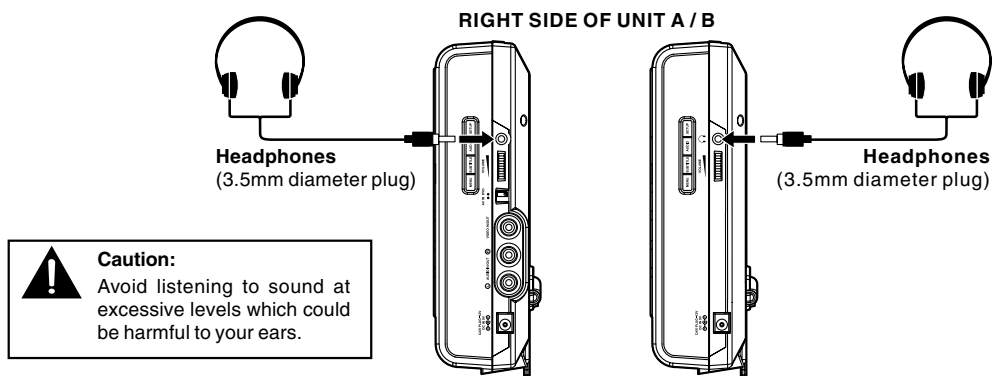


## USING THE STAND FOR DESKTOP USE

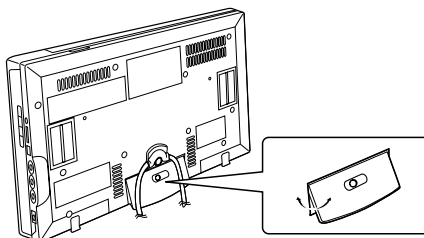


## INSTALLING IN A VEHICLE

Use the supplied mounting straps when installing the unit on the back of the vehicle's headrest.


Elastic  
Safety Band    Mounting Strap

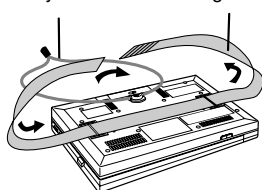

1) Loop the safety band around the headrest.

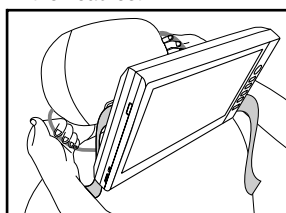


2) Tightly wrap the mounting strap around the headrest.

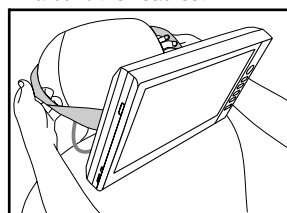

### SAFETY WARNING!

- This unit should never be used by the vehicle's driver or left unsecured in the vehicle while driving.
- If this unit is being used in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device, including air bags or seat belts.
- All passengers should wear seat belts when using this unit in a moving vehicle.
- If in doubt, please contact your vehicle manufacturer for further advice.

## INSTALLATION GUIDE

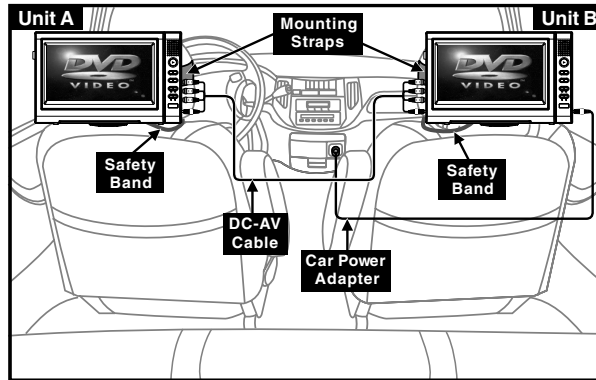


## SCREEN VIEWING ANGLE ADJUSTMENT

This unit is designed to allow users to have a comfortable viewing angle.

- The angle can be adjusted approximately  $+4^{\circ}$  /  $-7^{\circ}$ .
- Gently push the top or bottom of the screen frame to adjust the viewing angle.

**Caution:**

- Do not force the screen frame over its maximum viewing angle settings as stated above. Attempting this will result in damage to the unit.
- Do not push the LCD screen. Gently push the screen frame to adjust.

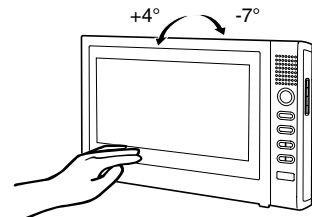


## SOUND SYSTEM

### ***Dolby Digital***

Dolby Digital is a technology developed by Dolby Laboratories. Soundtracks encoded in Dolby Digital can reproduce from one to 5.1 discrete channels of excellent quality audio.

The unit automatically recognizes the Dolby Digital bitstream and provides a downmix suitable for two-channel listening. An additional Dolby Digital decoder is required for reproduction of the discrete multi-channel soundtracks available on many DVDs.


 
 
Manufactured under license from Dolby Laboratories.

'Dolby' and  the double-D symbol are trademarks of Dolby Laboratories.



## UNIT OPERATION


### Turning the Unit On

1. Push the  / ON switch on the top side of the unit to the "ON" position.
2. Set the **AV IN / DVD** switch on the Unit to DVD. (If you are using Unit B, there is no **AV IN / DVD** switch.) The DVD logo (start-up picture) will appear on the screen.
3. After use, push the  / ON switch to the  (STANDBY) position.




## INSERTING A DVD OR CD

1. Open the disc door  
Push and hold the **OPEN** knob to open the disc door.
2. Hold the disc by its sides and carefully place it onto the spindle with the label side facing up; push gently until you hear a "click".

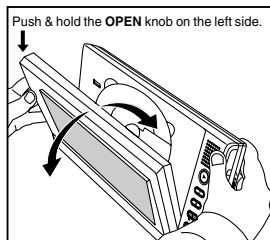

**Note:**  
When gently pulling the LCD screen cover outward, be careful not to touch the screen.

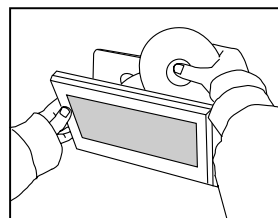



3. Close the disc door.  
It takes a short while for your unit to load the disc. After loading, the unit will automatically bring you to the main menu of the disc or start playing the disc.
4. If the unit does not automatically start playing the disc, press the ► button.




## PLAYING A DISC

 
 
This owner's manual explains the basic instructions for operating this unit. Some DVDs are produced in a manner that allows specific or limited operation during playback. Therefore, this unit may not respond to all operating commands. **THIS IS NOT A DEFECT.** Please refer to the instructions accompanying the specific DVD in question for more information about the options available on that DVD.

“” may appear on the screen during operation. A “” means that the desired operation is not permitted by the unit or disc.

### Playing a Disc

1. Push the  / ON switch on the top side of the unit to the ON position.  
**See CUSTOMIZING THE FUNCTION SETTINGS before proceeding to step 2.**
2. Open the disc door.
3. Hold the disc by its sides and carefully place it onto the spindle with the label side facing up, pushing gently until you hear a “click”.
4. Close the disc door.  
It takes a short while for your unit to load the disc. After loading, the unit will automatically bring you to the main menu of the DVD or start playing the DVD.
5. If the unit does not automatically start playing the DVD, press the ► button.

### Pausing Playback (Still Mode)

Press the  button. To resume normal playback, press the ► button.  
Each time you press the  button, the picture advances one frame.



## PLAYING A DISC

 
### Stopping Playback

Press the **■** button at the location where you want to interrupt playback. To resume playback at the position where the disc was stopped, press the **▶** button.

If you press the **■** button twice, the unit's memory will be cleared and pressing the **▶** button will reset the disc to the beginning.

### Fast Forward / Fast Reverse

1. Press and hold the **▶▶** or **◀◀** button for more than 2 seconds when a disc is playing. Each time you press and hold the **▶▶** or **◀◀** button for more than 2 seconds, the playback speed changes in the following sequence:



2. Press the **▶** button when you reach the desired point to resume normal playback.

#### Notes:

- The DVD player mutes sound and subtitles during reverse and forward scan of DVD video discs.
- The fast playback speed may differ depending on the disc.

### Skip (Forward / Reverse)

Press and hold the **▶▶** button for more than 2 seconds to advance chapters/tracks.

Press and hold the **◀◀** button for more than 2 seconds to go back to current or previous chapters/tracks.

### Audio Selection

On some DVD video discs, the sound is recorded in two or more formats. Follow the directions below to select the preferred language and sound system.

1. While a disc is playing, press the **AUDIO** button to show the current audio format number.

2/4 D 2 Ch Eng

2. Press the **AUDIO** button repeatedly to select the desired audio format.

#### Notes:

- If only one audio format is recorded on the DVD video disc, the number does not change.
- Some DVD video discs allow you to change audio selections only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate language on the disc menu.
- You can select different audio channels (Stereo, Left or Right) on an Audio CD by pressing the **AUDIO** button repeatedly.

### Subtitle Selection

1. While a DVD is playing, press the **SUBTITLE** button to display the current language setting, as shown in the example.

1/4 Eng

2. Press the **SUBTITLE** button repeatedly to select the desired subtitle language. You can turn subtitles off by pressing the **SUBTITLE** button repeatedly until the " Off" is displayed.

#### Notes:

- Some DVD video discs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select your desired scene.
- The number of subtitle languages recorded differs depending on the disc. If only one language is recorded, the language does not change.
- This function can only be used for discs on which subtitles have been recorded in multiple languages.
- Some DVD video discs allow you to change subtitles only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate subtitle on the disc menu.

### Adjust the LCD Screen

In play mode, you can adjust Brightness, Contrast, Color or View Mode of the LCD screen.

1. Press the **SETUP** button when the DVD player is in play mode.

2. Press the **↑ / ↓** button to select Brightness, Contrast, Color or View Mode.

3. Then press the **↔** button to change the setting. (For View Mode, press the **▶** button to change the setting.)

#### Note:


- For the LCD screen of Unit A, you can also adjust Brightness, Color or View Mode by the BRIGHTNESS, COLOR control or SCREEN(WIDE / NORMAL) switch.

## VIEWING JPG FILES

This unit can play JPG files recorded on a CD-R or CD-ROM disc (CD-RW is not recommendable).

### Viewing JPG Files

1. Open the disc door.
2. Hold a JPG file disc by its edge and gently push it onto the spindle with the label side facing up until you hear a "click".
3. Close the disc door. A list of folders/files will appear on the screen.
4. Press the  $\downarrow$  or  $\uparrow$  button to select your desired file, the selected picture will appear at the lower right corner. Press the  $\blacktriangleright$  button to start playback. Press the  $\blacksquare$  button to display a folder list.

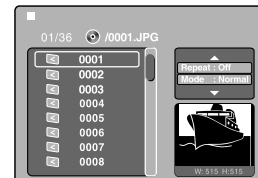

#### Notes:


- You can press the  $\parallel$  button to interrupt playback. Press the  $\blacktriangleright$  button to resume playback.
- You can press the  $\blacksquare$  button to quit playback.
- You can press and hold the  $\blacktriangleleft$  or  $\blacktriangleright$  button for more than 2 seconds to change the picture. Press and hold the  $\blacktriangleleft$  button for more than 2 seconds to view the previous picture. Press and hold the  $\blacktriangleright$  button for more than 2 seconds to view the next picture.
- You can press Cursor buttons ( $\downarrow$ ,  $\uparrow$ ,  $\leftarrow$ ,  $\rightarrow$ ) to rotate direction of the picture.
- Some discs may not permit this operation.

## PLAY MODES FOR CD OR JPG DISCS

### Play Modes for CD or JPG Discs

When playing CD / JPG discs, you can modify the Play Modes through the Toolkit which appears to the right, below the picture on the screen. Press the  $\leftarrow$  /  $\rightarrow$  button to navigate between the windows and the  $\downarrow$  /  $\uparrow$  button to select files/ tracks or play mode items. Then press the  $\blacktriangleright$  button to confirm.

1. In Stop mode, press the Cursor buttons ( $\downarrow$ ,  $\uparrow$ ,  $\leftarrow$ ,  $\rightarrow$ ) to select "Edit mode" then press the  $\blacktriangleright$  button.
2. Use the Cursor buttons ( $\downarrow$ ,  $\uparrow$ ,  $\leftarrow$ ,  $\rightarrow$ ) to select tracks/files shown on the left hand side of the window, then press the  $\blacktriangleright$  button to confirm the selected tracks/files. " $\checkmark$ " will appear in front of the selected tracks/files.
3. Select "Add to program" then press the  $\blacktriangleright$  button. " $\checkmark$ " will disappear from the screen. It means that the tracks/files you have selected are added into the "Program view".
4. Select "Program view" to view programmed files. To add more files by "Browser view" follow above steps.
5. Select "Edit mode" again to exit.
6. Use Cursor buttons ( $\downarrow$ ,  $\uparrow$ ,  $\leftarrow$ ,  $\rightarrow$ ) to select tracks/files on the left hand side of the window, then press the  $\blacktriangleright$  button to start the program playback.

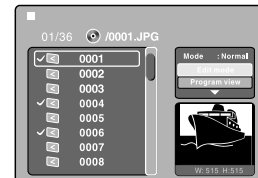

The Toolkit has the following play mode items:

- **Repeat (Off/Single/All):**
  - Off:** Resumes normal playback.
  - Single:** Repeats the current track/file.
  - All:** Repeats all files on the current folder or all tracks on the disc.
- **Mode (Normal/Shuffle):**
  - Normal:** Resumes normal playback.
  - Shuffle:** Playbacks track/file in random order.
- **Edit mode:** Program operation works only when "Edit mode" is selected.
- **Program view:** To view tracks/files in the "Program view" list. It is disabled when the "Program view" list is empty.
- **Add to program:** Add files/tracks to the "Program view" list. It is disabled if the "Edit mode" is not selected.
- **Browser view:** To view files/tracks in the original view list.
- **Clear program:** Delete the files/tracks in the "Program view" list. Select a file/track or more you want to delete in stop mode. " $\checkmark$ " will appear beside the deleted file/track. Select "Clear program" and then press the  $\blacktriangleright$  button. It is disabled if the "Edit mode" is not selected.

**Note:** The program will be deleted if the  $\blacksquare$  button is pressed twice, the disc door is opened, or selected files are deleted by selecting "Clear program".




## CUSTOMIZING THE FUNCTION SETTINGS

### Language


#### OSD Language

1. Press the **SETUP** button in stop mode.
2. Press the ⇨ button to select OSD Language.
3. Press the ► button, then the ↑ / ↓ button to shift and change the Language.
4. Press the ► button.
5. Press the **SETUP** button to exit the menu.

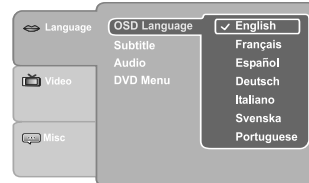

#### Subtitle

1. Press the **SETUP** button in stop mode.
2. Press the ⇨ button, then the ↑ / ↓ button to select Subtitle.
3. Press the ► button, then the ↑ / ↓ button to shift and change the Language.
4. Press the ► button.
5. Press the **SETUP** button to exit the menu.

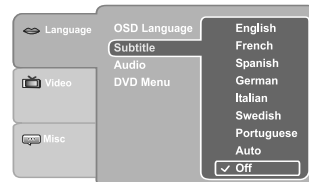


#### Notes:

- Some DVD video discs may be set to display subtitles in a language other than the one you selected. A prior subtitle language may be programmed on the disc.
- Some DVD video discs allow you to change subtitle selections only via the disc menu. If this is the case, press the **MENU** button and choose the appropriate subtitle language from the selection on the disc menu.

#### Audio

1. Press the **SETUP** button in stop mode.
2. Press the ⇨ button, then the ↑ / ↓ button to select Audio.
3. Press the ► button, then the ↑ / ↓ button until your preferred Audio is displayed.
4. Press the ► button.
5. Press the **SETUP** button to exit the menu.

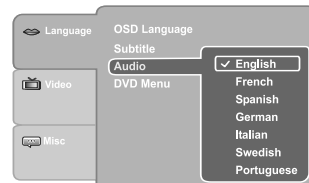


#### Note:

- Some DVD video discs may not play in the language you selected. A prior language may be programmed on the disc.

#### DVD Menu

1. Press the **SETUP** button in stop mode.
2. Press the ⇨ button, then the ↑ / ↓ button to select DVD Menu.
3. Press the ► button, then the ↑ / ↓ button until your preferred DVD Menu language is displayed.
4. Press the ► button.
5. Press the **SETUP** button to exit the menu.

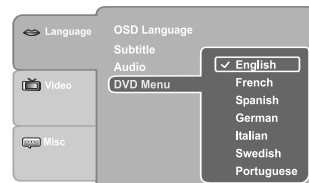

#### Note:

- Some DVD video discs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.

## CUSTOMIZING THE FUNCTION SETTINGS


### Video

#### Aspect Ratio

1. Press the **SETUP** button in stop mode.
2. Press the  $\uparrow / \downarrow$  button to select Video.
3. Press the  $\Rightarrow$  button, then the  $\uparrow / \downarrow$  button to select Aspect Ratio.
4. Press the  $\blacktriangleright$  button, then the  $\uparrow / \downarrow$  button to shift and change the aspect ratio.
5. Press the  $\blacktriangleright$  button.
6. Press the **SETUP** button to exit the menu.

#### Notes:

- The displayable picture size is preset on the DVD video disc. Therefore, the playback picture of some DVD video discs may not conform to the picture size you select.
- When you play DVD video discs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the Aspect Ratio setting.
- Select 16:9 to conform the LCD screen on the unit. Always be sure that your Aspect Ratio conforms to the actual TV in use if you connect the unit to a TV.

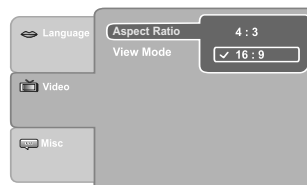

#### View Mode

1. Press the **SETUP** button in stop mode.
2. Press the  $\uparrow / \downarrow$  button to select Video.
3. Press the  $\Rightarrow$  button, then the  $\uparrow / \downarrow$  button to select View Mode.
4. Press the  $\blacktriangleright$  button, then the  $\uparrow / \downarrow$  button to shift and change the View Mode.
5. Press the  $\blacktriangleright$  button.
6. Press the **SETUP** button to exit the menu.

**Fill** Fill the screen with decoded image.

**Original** Display image as it's original size.

**Auto Fit** Automatically fit the decoded image on screen without distortion. Black bars will be present on top/bottom or left/right of screen.

**Pan Scan** Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Sides of the picture are cut off.

#### Note:

- Depending on the DVD video discs, you may not be able to view the mode as selected.

In play mode, you can adjust Brightness, Contrast, Color or View Mode of the LCD screen.

#### Brightness / Contrast / Color / View Mode

1. Press the **SETUP** button when the DVD player is in play mode.
2. Press the  $\uparrow / \downarrow$  button to select Brightness, Contrast, Color or View Mode.
3. Then press the  $\Leftarrow / \Rightarrow$  button to change the setting. (For View Mode, press the  $\blacktriangleright$  button to change the setting.)

### Misc

#### Use Default Settings



1. Press the **SETUP** button in stop mode.
2. Press the  $\uparrow / \downarrow$  button to select Misc.
3. Press the  $\Rightarrow$  button, then press the  $\uparrow / \downarrow$  button to select "Use Default Settings" dialogue box.
4. Press the  $\blacktriangleright$  button then press the  $\Leftarrow / \Rightarrow$  button to select "Yes". Press the  $\blacktriangleright$  button. The original setting will be restored. The unit will exit setting menu automatically and re-load the disc in the disc tray.

#### Note:

- It will take 3-5 seconds to reset the DVD player to the factory default.

#### Screen Saver

1. Press the **SETUP** button in stop mode.
2. Press the  $\uparrow / \downarrow$  button to select Misc.
3. Press the  $\Rightarrow$  button, then press the  $\uparrow / \downarrow$  button to select Screen Saver.
4. Press the  $\blacktriangleright$  button, then press the  $\uparrow / \downarrow$  button to change the On/Off mode.
5. Press the  $\blacktriangleright$  button.
6. Press the **SETUP** button to exit the menu.

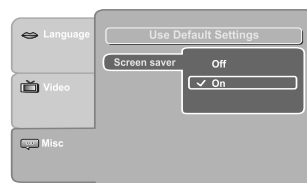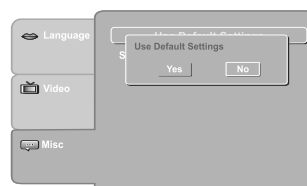

## MAINTENANCE

### ***Cleaning the Disc***

A defective or soiled disc inserted into the unit can cause sound to drop out during playback. Handle the disc by holding its inner and outer edges.

- Do NOT touch the surface of the unlabeled side of the disc.
- Do NOT stick paper or tape on the surface.
- Do NOT expose the disc to direct sunlight or excessive heat.
- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- NEVER use solvents such as benzine or alcohol to clean the disc.
- Do NOT use irregular shaped discs (example: heart shaped, octagonal, etc.). They may cause malfunctions.




### ***Cleaning the Unit***

- Be sure to turn the unit off and disconnect the car power adapter before maintaining the unit.
- Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly. Then wipe with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. Do NOT use compressed air to remove dust.

### ***Important Note***

- Before transporting the unit, remove any disc from the disc compartment.

## TROUBLESHOOTING GUIDE

<b><i>SYMPTOM</i></b>	<b><i>CAUSE (AND REMEDY)</i></b>
No power.	<ul style="list-style-type: none"> <li>• Ensure the car power adapter is connected.</li> <li>• Make sure that the unit is turned on.</li> </ul>
Very little or no sound is coming from a DVD.	<ul style="list-style-type: none"> <li>• Make sure that you select ON mode.</li> <li>• Make sure the unit is not paused. Press the ► button.</li> <li>• Make sure the unit is not in fast-forward or fast-reverse mode. Press the ► button.</li> <li>• Make sure that the AUDIO/VIDEO input/output connections are correct.</li> <li>• The DTS DVD video disc cannot be decoded to have speaker output.</li> <li>• The unit has overheated. Shut it off for 30 minutes to allow it to cool down.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>• The region number of the disc doesn't match the region number of this unit.</li> </ul> 
The picture is not clear.	<ul style="list-style-type: none"> <li>• The DVD is dirty. Gently clean the disc.</li> <li>• The disc is scratched.</li> <li>• Please adjust the LCD's brightness, contrast and color by the <b>SETUP</b> button on the right side of Unit A or B.</li> </ul>
Loud hum or noise is heard.	<ul style="list-style-type: none"> <li>• The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.</li> <li>• Clean the disc.</li> </ul>
The disc does not play.	<ul style="list-style-type: none"> <li>• There is no disc inside the unit ("No Disc" appears on the screen).</li> <li>• Insert the disc correctly with the graphics facing up.</li> <li>• Clean the disc.</li> <li>• A non-NTSC disc has been inserted, or the disc region number does not match the region number of the unit.</li> <li>• Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.</li> </ul>

***Specifications and external appearance are subject to change without notice.***

**Need More Help?**

**DO NOT RETURN THIS TO THE STORE**

Please visit online help at

<http://www.1800customersupport.com/audiovox>

811-729091W010  
Printed in China