



THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

FCC information

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

RCA

RD5016

Tested to Comply
With FCC Standards



FOR HOME OR OFFICE USE

- Move the unit away from the equipment that is receiving interference.
 - Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.
- If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase:

Date of Purchase:

Place of Purchase:

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

- Please respect the environment! Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.




Contents

EN	General controls-----2-3	Recording quality / condition-----11
	The display-----4	Other functions-----12
	Display messages-----5	Erasing file / folder-----13
	Before you begin -----6	Advanced operation -----14-15
	Setting the time-----7	RCA Digital Voice Manager-----16
	Internal/External memory setting-----8	Troubleshooting tips---17
	Basic operation-----9	More information-----18
	Recording mode-----10	Warranty-----19-21

General controls

EN

The Front

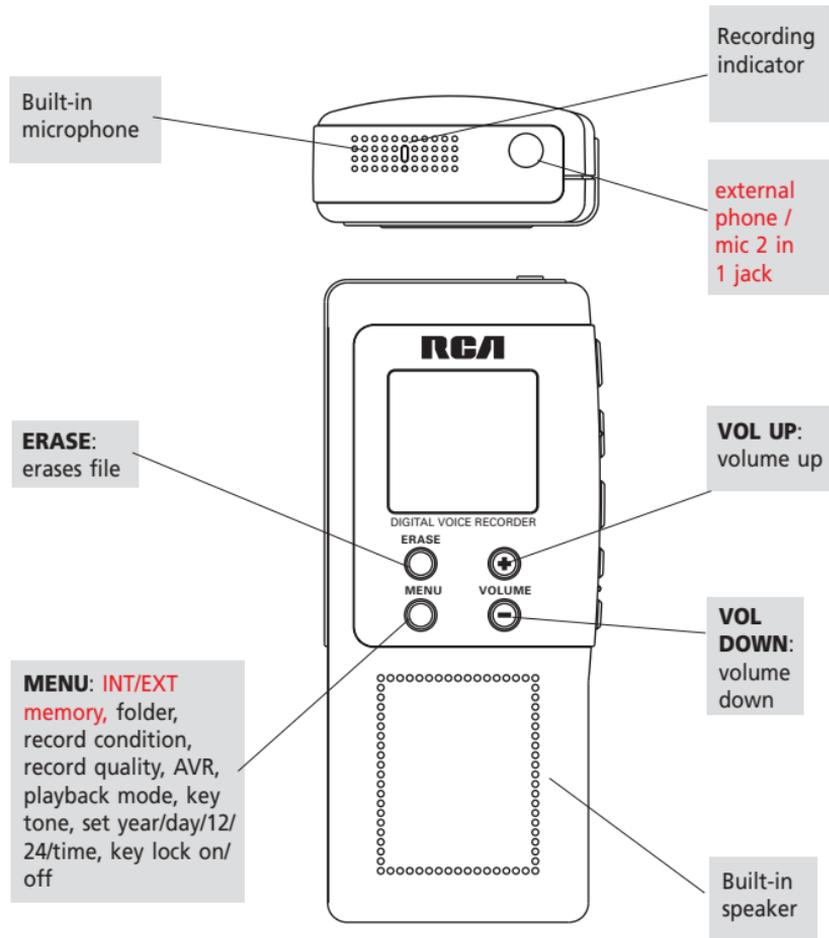

Note: Auto power off- the unit will turn off automatically without key activation in 3 minutes.

General controls

EN


REC: starts/
pauses recording

STOP: stops
playback/
recording. Turns
off the unit.

PLAY: turns the
unit on. Starts/
pauses playback.

FORWARD: skips and
searches forward.
Selects/Browses
under menu mode


REVERSE: skips and
searches backward.
Selects/Browses
under menu mode

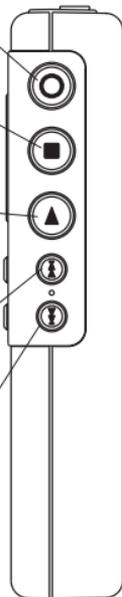

Connects AC/
DC adapter
(3V)

External
Memory Card
slot


USB port

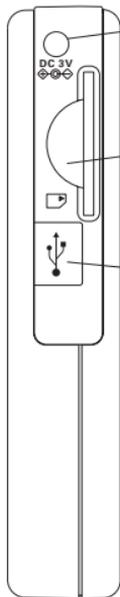

The display

EN

The Display

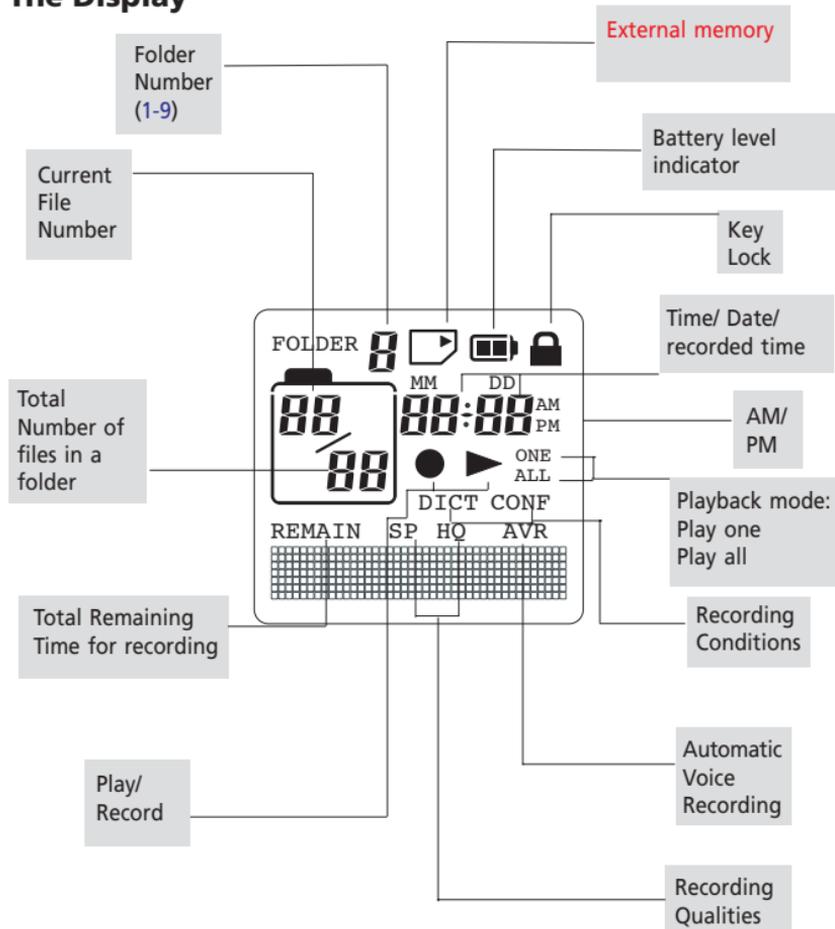

Display messages

EN

ALL	Select all (Introductory Play back & Erasing All Files)
APPEND	Appendix (Adding Appendix)
CUT-E	Cut End (Cutting)
CUT-S	Cut Start (Cutting)
DELETE	Delete (Erasing Selected File)
MM/DD	Month / day entry mode.
12 HOUR	12 hour time display mode.
TIME	Time entry mode
INSERT	Insertion (Inserting New Segments)
INTRO	Introduction (Introductory Playback)
OFF	Off (Automatic Voice Recording)
ON	On (Automatic Voice Recording)
SEN 07	Sensitivity Level (AVR)
TONE	Beeping sound on (Setting Beep Sound)
NO TONE	No beeping sound (Setting Beep Sound)
VOL 15	Volume (Setting Volume)
YEAR	Year (Setting Year)
LOCKED	key locked
FORMAT?	The format of the memory is not valid, need to be formatted into FAT 16.
INT	Select internal memory for recording.
EXT	Select external memory for recording.
PC-LINK	Connected to PC through USB cable.
WAIT...	Unit is busy.

* (-) You can find the mentioned displays as you set/ operate them.

Before you begin

Power supply

This unit can be operated by 2 AAA batteries or 3V DC power supply.

Installing Batteries (not included)

1. Slide the battery compartment door to the bottom and lift up the door to open.
2. Insert 2 AAA batteries with polarities matching indications.
3. Replace the battery compartment door.

Refer to the battery level indicator on display for batteries level. Replace with new batteries when the indicator is empty.



Using AC/DC adaptor (not included)

1. Connect the AC/DC adaptor to the DC jack on the unit.
2. Connect the AC/DC adaptor to the wall outlet.

Auto power shut down

The unit will be automatically turned off if left idle for 3 minutes.

Using 2 in 1 external phone / microphone

- When 2 in 1 phone /microphone connected, sound output from speaker will be muted and no recording can be made from built-in microphone.

Keys lock

This feature avoids accidental key activation during recording or playback.

1. Press and hold **MENU** button for 2 seconds, LOCKED will be shown on display. (LOCK icon  will lit)
2. Press and hold **MENU** button for 2 seconds again to unlock keys.

Tips: keys lock function can be activated in any mode.

Tones

You can activate this feature so that beep sound can be heard whenever you press on any button except during playback and recording.

1. Press **MENU** button repeatedly until **TO NE** shows on display.
2. Press **REVERSE** or **FORWARD** to set beep sound ON/ OFF.
3. Press **MENU** to confirm selection.



Setting the time


EN Year/Date/12/24/Time Setting

With this function, you can always read on the display the recording date and time of your recorded messages. Follow the steps below for time setting.

You can still use this unit for normal recording without setting the time. However, no correct recording date and time can be referred for your recorded messages and the display will keep flashing when the unit is turned off.

1. Turn on the unit.
2. Press **MENU** repeatedly to enter Time setting mode.

3. When "YEAR" flashes, the digits of the year blink (default is 2003). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.

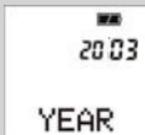


4. Once the year is entered, the digits in the month field will blink (default is 01). Press **REVERSE** or **FORWARD** to increase/decrease



the number, press **MENU** to confirm.

5. Once the month is entered, the digits in the day will blink (while the digits in the month field stop blinking). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.
6. Once the date is entered, you can choose between 12/24 hour clock display by pressing **REVERSE** / **FORWARD**, then press **MENU** to confirm.
7. Once the time is entered, the digits in the hour field will blink (default setting is 12 (12 hour mode) & 0 (24 hour mode). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.

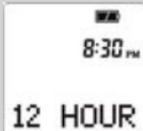

Tips: Press **STOP** to exit to Stop mode.

Internal/External memory setting

You can store the recorded messages in either the built-in (INT) or external (EXT) memory. To select, follow the procedures as follow:

1. Turn on the unit.
2. Press **MENU** repeatedly to enter memory location setting mode.
3. Default setting is INT, press **REVERSE** or **FORWARD** to select between built-in and external memory.



4. If external memory is selected., the  icon will show on display.
5. If the unit detects no external memory card inserted after selecting the external memory, the EXT icon will keep flashing. Switch back to the internal memory or insert external memory card.

CAUTION: Before removing the memory card from the device, follow the procedures shown as below to avoid any data loss.

1. Turn on the unit.
2. Press **MENU** to enter memory location setting mode.
3. Press **REVERSE** or **FORWARD** to select built-in memory.
4. Turn off the unit, then remove the external memory card.

Basic operation

EN

Normal Playback

1. In Stop mode, select folder (1-9).
2. Select file by pressing **REVERSE** or **FORWARD**.
3. Press **PLAY** to start playback.
4. Press **PLAY** to pause playback, press again to resume.
5. You can press **VOL UP (+)** or **VOL DOWN (-)** to adjust listening volume.
6. Press and hold **REVERSE** or **FORWARD** to make quick search within a file.
7. Press **REVERSE** or **FORWARD** once to skip one file forward or backward.
8. Press **STOP** to stop playback.

Manual recording

1. In **STOP** mode, select folder (1-9).
2. Press **RECORD** to start recording. (recording time will be displayed once you press **RECORD**)
3. To pause recording, you can press **RECORD** once, press again to resume recording.
4. To stop recording, press **STOP**.

Tips: To view the remaining time for recording, you may press **PLAY** during recording.

Folder selection

You can select a specific folder (1-9) for recording. Default is folder 1. (Refer to page 12 for details)

Recording quality(SP/HQ)

You can select between two recording qualities. Default is SP. (Refer to Recording quality / condition section (p.11) for details.)

Recording condition (DICT/CONF)

You can select between two recording conditions. Default is DICT. (Refer to Recording quality / condition section (p.11) for details.)

Playback mode

You can select to play one file at a time (Play one) or play all files in the folder continuously (Play all). Default is Play one.

Introscan

You can quick scanning the beginning 3 seconds of each file in a folder. (refer to page 12 for details)

File editing and more...

More advanced editing features for you convenience. (Refer to page 13-14 for details)

Recording mode

EN

Setting Recording Mode

You can select between two recording modes - manual recording and AVR (automatic voice recording).

 
1. Manual Recording

Please refer to page 9.


2. AVR (Automatic Voice Recording)

This feature allows the unit to sense sound and to record only when you are speaking into the microphone. When dictation stops for about 3 seconds, recording will stop and then start again automatically when you resume dictation.

1. Select destination folder (1-9).
2. Press **MENU** four times.
3. Press **REVERSE** or **FORWARD** to toggle between AVR on and AVR off.
4. Press **STOP** to exit to STOP mode.
5. Press **RECORD** to enter AVR mode.

A rectangular display showing the text "ON" in a large, bold, sans-serif font. To the right of "ON" is the label "AVR" in a smaller font.A rectangular display showing the text "OFF" in a large, bold, sans-serif font. To the right of "OFF" is the label "AVR" in a smaller font.

6. During AVR on recording, adjust the sensitivity of the microphone by pressing **VOL UP** and **VOL DOWN**, SEN with

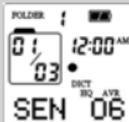

sensitivity value shows on display (e.g. increase sensitivity value when recording source is far from the unit or the recording environment is quiet.).

7. Start dictation. Recording starts automatically.

8. Press **STOP** to end AVR recording.

9. Repeat step 2 and select AVR OFF for de-selection.

Tips:

- The first syllable or two may be lost when you start recording because this 'sound' is used to turn on the AVR feature. It is a good practice to make some 'sounds' or say a short word to activate the AVR before you begin actual dictation.

Recording quality / condition

EN


Setting Recording Quality

You can select between two recording qualities. Default is SP.

Definition

- **SP** (Standard Play) - allows about 760 min recording.
- **HQ** (High Quality) - allows about 530 min recording

1. Press **MENU** button four times, (SP or HQ show on display.)
2. Toggle between SP and HQ by pressing **REVERSE** or **FORWARD**.
3. Confirm selection by pressing **MENU** or **STOP** button.

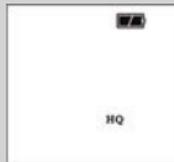

Setting Recording Condition

You can select between two recording conditions. Default is DICT.

Definition

- **CONF** (Conference) - in a more open area and recording source is far from the unit.
- **DICT** (Dictation) - in a more enclosed area and recording source is close to the unit.

1. Press **MENU** three times until DICT or CONF show on display.
2. Select recording condition by pressing **REVERSE** or **FORWARD**.
3. Confirm selection by pressing **MENU** button. (You may press **STOP** to exit from further selection.)



Tips:

- For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient. A built-in automatic recording level control will set record level for optimum recordings during manual recording. Avoid recording near unwanted noise sources, such as air conditioners or fans.

Other functions

IntroScan

This feature allows playback of the beginning 3 seconds of each file in a folder.


1. Select folder (1-9).
2. Press **REVERSE** or **FORWARD** until ALL shows on display.
3. Press **PLAY** to start introductory playback, INTRO shows on display.
4. Press **PLAY** to start playing desired file.
5. Press **STOP** to exit Intro Scan sooner.



Searching folder

You can select a specific folder (1-9) for recording. Default is folder 1.

1. Press **MENU** button in stop mode.
2. The folder number will blink on display.
3. Press **REVERSE** or **FORWARD** to select folder.
4. Press **STOP** to exit to stop mode in the desired folder.

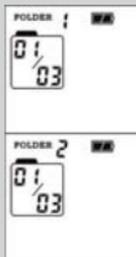

Note: You can record up to 99 files in one folder, not exceeding 891 files in total.

Play one / play all

You can choose to play a specific file or all files in a folder.

1. In **STOP** mode, press **MENU** button repeatedly until **ONE** appears on display..
2. Press **REVERSE** or **FORWARD** to toggle between **ONE** and **ALL**.

Connecting to PC

You can transfer the files between the DVR and PC through the USB cable.

1. Connect the DVR to PC using the USB cable.
2. "PC-LINK" will show on the display.
3. Use the supplied software to transfer the files.

Erasing file / folder

EN

Erasing selected file

You can delete a file by the following steps:

1. Select folder (1-9)
2. Select file.
3. Press **ERASE** once and **DELETE** will blink on the screen.
4. Press and hold **ERASE** to confirm deleting. (or press **STOP** to cancel erasing file)

Tips: file numbers that come after erased one will be moved forward by one automatically.

Erasing all files in a folder

1. Select folder (1-9).
2. Press **ERASE** until **DELETE** appears.
3. Press **ERASE** once and release, "ALL" appears on display.
4. Press and hold **ERASE** for about 3 seconds, all files in the selected folder is erased completely (or press **STOP** to cancel erasing all files).

Advanced operation


CAUTION

- The edit function does not operate when battery power is too low.
- After editing a message, "WAIT" will be displayed. Do not power off the device until "WAIT" disappears.

Insert

You can insert new segments into a file without erasing previously recorded content.

1. Select folder.
2. Select file for inserting new segment.
3. Start playback.
4. Press **RECORD** to start recording new segment, "INS" and elapsed recorded time will be shown on display.
5. Press **STOP** to stop recording.

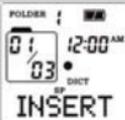

Append

You can add appendix (e.g. reminder, supplementary information) to the end of the file.

1. Select folder.
2. Select file for adding appendix.
3. Start playback.

4. Press **PLAY** to start playback.
5. During playback, press **MENU** once, "APPEND" will be shown on display.



6. Press **RECORD** within 3 seconds to start recording appendix.
7. Press **STOP** to stop recording.

Cut

You can erase unwanted parts from your recording.

1. Select folder.
2. Select file.
3. Start playback of the file with the unwanted part.
4. Press **ERASE** to mark the start of the unwanted part, "CUT-S" shows on display.
5. Press **ERASE** to mark the end of the unwanted part, "CUT-E" shows on display.
6. Press **ERASE** again to confirm cutting (or press **STOP** to cancel)



Tips: Cutting, inserting new segments and adding appendix will only update the recorded time length, without changing recording time and date.

Advanced operation

EN

Format (Caution! All data inside the memory will be erased)

You can format both the internal or external memory when needed. (e.g. compatibility problem, etc.)
The procedures are as follow:

1. Turn on the unit.
2. Press **MENU** repeatedly to select either internal or external memory. (refer to Setting internal / external memory section for more details.)
3. Press **ERASE**, "DELETE" will flash on the display.
4. Press and hold REC for 3 seconds, "FORMAT" will flash on the display.
5. Press and hold **ERASE**, "WAIT" will show on the display, formatting is in process.
6. After the formatting is completed, the remain time of the selected memory will show on the display.



Installation of RCA Digital Voice Manager

RCA Digital Voice Manager should be installed before connecting the unit to PC.

The installation procedures are as follow:

1. Turn on your computer and insert the RCA Digital Voice Manager CD-ROM into your CD-ROM drive, installation screen will appear on the screen.
2. If the SETUP screen does not appear, double click *My Computer*, then your CD-ROM drive icon, and the *INSTALL* icon to begin installation.
3. Select the DVR model in the Startup screen, then click *Install* to start installation.
4. Click the software components you want to install.
5. Click *Install USB driver & System Applications* to install the required driver. (For Windows 98SE / Me user only)
6. Follow the On-screen instructions to install all the necessary files.
7. Click *Finish* to complete installation and return to the startup screen.
8. Click *Install RCA Digital Voice Manager* to run the setup program, it may take a few minutes for the installer to start.
9. Restart your computer.

Computer System Requirements:

- Pentium 233 MHz or higher (Pentium II 300 MHz or higher recommended);
- Windows 98SE, Me, 2000 SP3 and XP;
- Internet Explorer 4.0 or higher Internet access.
- 32 MB RAM (64 MB recommended)
- 50 MB free hard disc space for the software (100 MB recommended);
- CD-ROM drive
- USB port
- Installed sound card

IMPORTANT: For Windows 98SE user, do not connect the DVR to your computer through USB cable before or during the software installation. For Windows 2000 user, SP3 must be installed in order to access DVR memory through USB cable.

CAUTION: Before removing the memory card from the device, follow the procedures shown as below to avoid any date loss.

1. Turn on the unit.
2. Press **MENU** to enter memory location setting mode.
3. Press **REVERSE** or **FORWARD** to select built-in memory.
4. Turn off the unit, then remove the external memory card.

Troubleshooting tips

EN

Unit doesn't turn on

- Check that batteries are properly inserted and not exhausted.
- Make sure battery compartment door is properly closed.
- Make sure **LOCK** function is not activated.

Display keeps flashing when unit is off

- You may not have set the time. Refer to section on Time Setting.

Cannot record

- Make sure **LOCK** function is not activated.
- Make sure memory is not full.
- You have recorded 99 files in one folder. Try record in a new folder.
- If you select external memory, please ensure that an external memory card is properly inserted.

Cannot show recording date and time during playback

- You may have not set the date and time before recording. Refer to section 'Time Setting'.

No sound from speaker during playback

- Make sure volume is not set to 0.
- Headphones should not be connected.

Cannot edit

- Make sure **LOCK** function is not activated.

Cannot activate the unit after pressing on keys

- There may be software problems. Press and hold **RESET** to reset the unit.

Recordable time becomes shorter

- You may have set the recording quality to 'High Quality', refer to section 'Setting Recording Quality'.

Cannot perform playback

- Make sure you have selected folder with recorded messages.
- Make sure **LOCK** function is not activated.

Cannot erase recorded file(s)

- Make sure you follow each step under section "Erasing Selected File" carefully.

Cannot stop recording when AVR ON

- If AVR ON sensitivity is too high (e.g. 8 - 10), recording may not be stopped in noisy environment.

Cannot keep the saved setting

- If the batteries are removed, saved settings may be removed.

Precautions for the Unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problem may be resulted.
- Avoid shock to the unit especially during recording. Recorded data can be damaged.
- Do not store the unit near fire, places with high temperature or places with direct sunlight.
- Do not operate or store unit in places with frequent static electricity or electrical noise (e.g. speaker, TV set).
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.
- Do not expose this appliance to rain or moisture.

Precautions for Batteries

 
- If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.
- When installing batteries, be sure that the polarities are correct. Reversing polarity may cause personal injury and damage to the batteries.
- Never mix new batteries with old ones. Do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Do not dispose of in fire.
- Do not charge batteries which are not intended to be recharged.

Precautions for AC power

- Before operating the unit in a new area for the first time, it is absolutely necessary to check that the operating voltage of your unit is identical to the voltage of your local power supply.
- Remove the power jack from the unit if battery power is being used.
- If the unit is not used for a period of time, remove the plug from the AC mains.
- AC/DC adapter is for indoor use in dry rooms only.

Power Supply

- (battery power) AAA x 2,
- (AC/DC power) 3V 200mA.



U.S. limited warranty

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.
Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927**

- Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

U.S. limited warranty

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

This warranty does not apply. Contact your dealer for warranty information.

Canadian limited warranty

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.

6200 Edwards Blvd.,

Mississauga, Ontario,

L5T 2V7

Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.

P.O. Box 0944

Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE