



Audio Amplifiers	GE	0078
Audio Amplifiers	JVC	0331
Audio Amplifiers	Sony	0689
Audio Amplifiers	Soundesign	0078
Audio Amplifiers	Victor	0331
Audio Amplifiers	Wards	0078
Audio Amplifiers	Yamaha	0354
Audio Receivers	ADC	0531
Audio Receivers	Aiwa	1089 1405 0158 0121
Audio Receivers	Capetronic	0531
Audio Receivers	Carver	1089 1189 0042 0360
Audio Receivers	Casio	0195
Audio Receivers	Clarinette	0195
Audio Receivers	Denon	1104 1160
Audio Receivers	Fisher	0042 0360 0219
Audio Receivers	Garrard	0463
Audio Receivers	Harman/Kardon	0110
Audio Receivers	JBL	0110
Audio Receivers	JVC	0074
Audio Receivers	Kenwood	1313 1027 1570 1569 0186 0042
Audio Receivers	Lloyd's	0195
Audio Receivers	MCS	0039
Audio Receivers	Magnavox	1089 1189 0531 0195 0391
Audio Receivers	Marantz	1089 1189 0039
Audio Receivers	Modulaire	0195
Audio Receivers	NAD	0320
Audio Receivers	Nakamichi	0097 0347
Audio Receivers	Onkyo	0135
Audio Receivers	Optimus	1023 0531 0670 0186 0042 0219
Audio Receivers	Panasonic	1518 0039
Audio Receivers	Penney	0195
Audio Receivers	Philips	1089 1189 1269 1120
Audio Receivers	Philips	0391
Audio Receivers	Pioneer	1023 0531 0630
Audio Receivers	Proscan	1254
Audio Receivers	Quasar	0039
Audio Receivers	RCA	1023 1254 0531 0360 0530
Audio Receivers	Realistic	0195
Audio Receivers	Sansui	1089
Audio Receivers	Sanyo	0219

Audio Receivers	Sharp	0186
Audio Receivers	Sherwood	0491 0502
Audio Receivers	Sony	1058 1158 1258 0158 0474
Audio Receivers	Soundesign	0670
Audio Receivers	Sunfire	1313
Audio Receivers	Teac	0463
Audio Receivers	Technics	1308 1309 1518 0039
Audio Receivers	Thorens	1189
Audio Receivers	Victor	0074
Audio Receivers	Wards	0158
Audio Receivers	Yamaha	0176 1176 0186
Audio Receivers	Yorx	0195
Cable	Allegro	0153 0315
Cable	Antronix	0022
Cable	Archer	0153 0797 0022
Cable	Cabletenna	0022
Cable	Cableview	0022
Cable	Century	0153
Cable	Citizen	0153 0315
Cable	Colour Voice	0025 0031
Cable	Comtronics	0040
Cable	Contec	0019
Cable	Eastern	0002
Cable	Emerson	0797
Cable	Everquest	0015 0040
Cable	Focus	0400
Cable	Garrard	0153
Cable	Gemini	0015 0797
Cable	General Instrument	0476
Cable	GoldStar	0040
Cable	Goodmind	0797
Cable	Hamlin	0020
Cable	Jasco	0015 0153 0315
Cable	Jerrold	0476 0012 0015
Cable	Magnavox	0027
Cable	Memorex	0000
Cable	Motorola	0476
Cable	Movie Time	0063
Cable	NSC	0063
Cable	Novaplex	0618
Cable	Oak	0019
Cable	Optimus	0021
Cable	Panasonic	0000 0021
Cable	Paragon	0000

Cable	Philips	0305 0153 0025 0031 0027
Cable	Pioneer	0877 0533
Cable	Pioneer	0533
Cable	Popular Mechanics	0400
Cable	Pulsar	0000
Cable	Quasar	0000
Cable	RCA	0021
Cable	Radio Shack	0015 0315 0797 0883
Cable	Recoton	0400
Cable	Regal	0020
Cable	Regency	0002
Cable	Runco	0000
Cable	SL Marx	0040
Cable	Samsung	0040
Cable	Scientific Atlanta	0477 0877
Cable	Signal	0015 0040
Cable	Sprucer	0021
Cable	Starcom	0015
Cable	Stargate	0015 0040 0797
Cable	Starquest	0015
Cable	TV86	0063
Cable	Teleview	0040
Cable	Timeless	0418
Cable	Tocom	0012
Cable	Toshiba	0000
Cable	Tusa	0015
Cable	Unika	0153 0022
Cable	Universal	0153 0022
Cable	Viewmaster	0883
Cable	Viewstar	0063 0027
Cable	Zenith	0525 0000
Cable	Zentek	0400
CD	Aiwa	0157 0124
CD	Burmester	0420
CD	California Audio Labs	0029 0303
CD	Carver	0157 0179
CD	DKK	0000
CD	Denon	0003
CD	Emerson	0305
CD	Fisher	0179
CD	Garrard	0420
CD	Genexxa	0032 0305
CD	Harman/Kardon	0157 0173

CD	Hitachi	0032
CD	JVC	0072
CD	Kenwood	0826 0626 0028 0037 0190
CD	Krell	0157
CD	LXI	0305
CD	Linn	0157
CD	MCS	0029
CD	MTC	0420
CD	Magnavox	0157 0305
CD	Marantz	0626 0029 0157 0180
CD	Mission	0157
CD	NSM	0157
CD	Onkyo	0101
CD	Optimus	1063 0032 0000 0179 0305 0037 0420 0145 0468
CD	Panasonic	0029 0303
CD	Parasound	0420
CD	Philips	0626 0157
CD	Pioneer	1063 0032 0305 0468
CD	Polk Audio	0157
CD	Proton	0157
CD	QED	0157
CD	Quasar	0029
CD	RCA	0032 0179 0305 0053 0468
CD	Realistic	0179 0420 0180
CD	Rotel	0157 0420
CD	SAE	0157
CD	Sansui	0157 0305
CD	Sanyo	0179
CD	Scott	0305
CD	Sears	0305
CD	Sharp	0861 0037 0180
CD	Sherwood	1067 0180
CD	Sonic Frontiers	0157
CD	Sony	0490 0000 0185
CD	Soundesign	0145
CD	Tascam	0420
CD	Teac	0420 0180
CD	Technics	0029 0303
CD	Victor	0072
CD	Wards	0157 0053
CD	Yamaha	0888 0036 0187
DVD	Apex	0672
DVD	Denon	0490

DVD	Fisher	0670
DVD	GE	0522
DVD	GPX	0769
DVD	Gradiente	0651
DVD	Hitachi	0573 0664
DVD	Hiteker	0672
DVD	JVC	0558 0623
DVD	Kenwood	0534
DVD	Konka	0711 0719
DVD	Magnavox	0503
DVD	Magnavox	0675
DVD	Marantz	0539
DVD	Mitsubishi	0521
DVD	Onkyo	0503
DVD	Optimus	0571
DVD	Oritron	0651
DVD	Panasonic	0490 0677 0632
DVD	Philips	0503 0539
DVD	Pioneer	0525 0571 0632
DVD	Proscan	0522
DVD	RCA	0522 0571
DVD	Samsung	0573
DVD	Sony	0533
DVD	Technics	0490
DVD	Theta Digital	0571
DVD	Toshiba	0503
DVD	Yamaha	0490 0545
DVD	Zenith	0503 0591
Misc Audio	Aiwa	0159 0010
Misc Audio	JVC	0073
Misc Audio	Sony	0159 0010
Satellite	AlphaStar	0772
Satellite	Echostar	0775 1005
Satellite	Expressvu	0775
Satellite	GE	0566
Satellite	General Instrument	0361 0627 0869
Satellite	HTS	0775
Satellite	Hitachi	0819
Satellite	Hughes Network Systems	0749
Satellite	JVC	0775
Satellite	Jerrold	0361 0627
Satellite	Magnavox	0724 0722
Satellite	Memorex	0724
Satellite	Mitsubishi	0749

Satellite	Next Level	0869
Satellite	Panasonic	0701
Satellite	Philips	0749 0724 0722 1076
Satellite	Primestar	0361 0627
Satellite	Proscan	0392
Satellite	RCA	0566 0143 0855 0392
Satellite	Radio Shack	0869
Satellite	Samsung	1109
Satellite	Sony	0639
Satellite	Star Choice	0869
Satellite	Toshiba	0749 0790
Satellite	Uniden	0724 0722
Satellite	Zenith	0856
TV	AOC	0030 0019
TV	Admiral	0093 0463
TV	Aiko	0092
TV	Akai	0030
TV	Alaron	0179
TV	America Action	0180
TV	Anam	0180
TV	Audiovox	0451 0180 0623 0092
TV	Baysonic	0180
TV	Belcor	0019
TV	Bell & Howell	0154 0016
TV	Bradford	0180
TV	Brockwood	0019
TV	Broksonic	0236 0463
TV	CXC	0180
TV	Candle	0030 0056
TV	Carnivale	0030
TV	Carver	0054
TV	Celebrity	0000
TV	Cineral	0451 0092
TV	Citizen	0060 0030 0056 0092
TV	Concerto	0056
TV	Contec	0180
TV	Craig	0180
TV	Crosley	0054
TV	Crown	0180
TV	Curtis Mathes	0047 1147 1347 0054 0154 0051 0451 0093 0060 0030 0056 0145 0016 0166
TV	Daewoo	0451 0019 0623 0624 0092
TV	Daytron	0019

TV	Denon	0145
TV	Dumont	0017 0019
TV	Durabrand	0003 0171 0178 0180 0463 1034
TV	Electroband	0000
TV	Emerson	0154 0236 0463 0180 0178 0179 0019 0623 0624
TV	Envision	0030
TV	Fisher	0154
TV	Fujitsu	0179
TV	Funai	0180 0179 0171
TV	Futuretech	0180
TV	GE	0047 1147 1347 0051 0451 0093 0178 0021
TV	Gibraltar	0017 0030 0019
TV	GoldStar	0030 0178 0056 0019
TV	Gradiente	0053 0056
TV	Grunpy	0180 0179
TV	Hallmark	0178
TV	Harley Davidson	0179
TV	Harman/Kardon	0054
TV	Harvard	0180
TV	Hitachi	0056 0145 0016
TV	Infinity	0054
TV	Inteq	0017
TV	JBL	0054
TV	JCB	0000
TV	JVC	0053
TV	KEC	0180
TV	KTV	0180 0030
TV	Kenwood	0030 0019
TV	Konka	0707 0628 0632 0638 0703
TV	LG	0056
TV	LXI	0047 0054 0154 0156 0178
TV	Logik	0016
TV	Luxman	0056
TV	MGA	0150 0030 0178 0019
TV	MTC	0060 0030 0056 0019
TV	Magnavox	0054 1254 0030 0179
TV	Majestic	0016
TV	Marantz	0054 0030
TV	Matsushita	0250
TV	Megatron	0178 0145
TV	Memorex	0154 0250 0463 0150 0178 0179 0056 0016

TV	Midland	0047 0017 0051
TV	Minutz	0021
TV	Mitsubishi	0093 0150 0178 0019
TV	Motorola	0093
TV	Multitech	0180
TV	NAD	0156 0178 0166
TV	NEC	0030 0056 0019
TV	NTC	0092
TV	Nikko	0030 0178 0092
TV	Onwa	0180
TV	Optimus	0154 0250 0166
TV	Optonica	0093
TV	Orion	0236 0463 0179
TV	Panasonic	0051 0250
TV	Penney	0047 1347 0156 0051 0060 0030 0178 0021 0056 0019
TV	Philco	0054 0463 0030 0145 0019
TV	Philips	0054
TV	Pilot	0030 0019
TV	Pioneer	0166
TV	Portland	0019 0092
TV	Prism	0051
TV	Proscan	0047
TV	Proton	0178
TV	Pulsar	0017 0019
TV	Quasar	0051 0250
TV	RCA	0047 1047 1147 1247 1347 1447 0090 0051 0093 0019
TV	Radio Shack	0047 0154 0180 0030 0178 0056 0019
TV	Realistic	0154 0180 0030 0178 0056 0019
TV	Runco	0017 0030
TV	SSS	0180 0019
TV	Sampo	0030
TV	Samsung	0060 0030 0178 0056 0019
TV	Sansei	0451
TV	Sansui	0463
TV	Sanyo	0154
TV	Scimitsu	0019
TV	Scotch	0178
TV	Scott	0236 0180 0178 0179 0019
TV	Sears	0047 0054 0154 0156 0178 0179 0056 0171
TV	Semivox	0180

TV	Semp	0156
TV	Sharp	0093
TV	Shogun	0019
TV	Signature	0016
TV	Sony	0000
TV	Soundesign	0180 0178 0179
TV	Squareview	0171
TV	Starlite	0180
TV	Supreme	0000
TV	Sylvania	0054 0030
TV	Symphonic	0180 0171
TV	TMK	0178 0056
TV	TNCi	0017
TV	Tandy	0093
TV	Technics	0051 0250
TV	Technol Ace	0179
TV	Techwood	0051 0056
TV	Teknika	0054 0180 0150 0060 0179 0056 0019 0016 0092
TV	Telefunken	0056
TV	Toshiba	0154 0156 0060
TV	Toshiba	1256
TV	Vector Research	0030
TV	Victor	0053
TV	Vidikron	0054
TV	Vidtech	0178 0019
TV	Wards	0054 0030 0178 0021 0179 0056 0019 0016
TV	White-Westinghouse	0463 0623 0624
TV	Yamaha	0030 0019
TV	Zenith	0017 0463 0624 0016 0092
VCR	Admiral	0048 0209
VCR	Adventura	0000
VCR	Aiko	0278
VCR	Aiwa	0037 0000 0307
VCR	Akai	0041
VCR	America Action	0278
VCR	American High	0035
VCR	Asha	0240
VCR	Audiovox	0037
VCR	Beaumark	0240
VCR	Bell & Howell	0104
VCR	Broksonic	0184 0121 0209 0002 0479
VCR	CCE	0072 0278

VCR	Calix	0037
VCR	Canon	0035
VCR	Capehart	0020
VCR	Carver	0081
VCR	Cineral	0278
VCR	Citizen	0037 0278
VCR	Colt	0072
VCR	Craig	0037 0047 0240 0072 0271
VCR	Curtis Mathes	0035 0060 0162 0041
VCR	Cybernex	0240
VCR	Daewoo	0045 0278 0020 0561
VCR	Daytron	0020
VCR	Denon	0042
VCR	Dynatech	0000
VCR	Electrohome	0037
VCR	Electroponic	0037
VCR	Emerex	0032
VCR	Emerson	0037 0184 0000 0121 0043 0209 0002 0278 0479 0561 0208
VCR	Fisher	0047 0104
VCR	Fuji	0035 0033
VCR	Funai	0000
VCR	GE	0035 0060 0048 0240
VCR	Garrard	0000
VCR	Go Video	0432 0526 0643
VCR	GoldStar	0037 0038
VCR	Gradiente	0000 0008
VCR	HI-Q	0047
VCR	Harley Davidson	0000
VCR	Harman/Kardon	0081 0038
VCR	Harwood	0072
VCR	Headquarter	0046
VCR	Hitachi	0000 0042 0041
VCR	Hughes Network Systems	0042
VCR	JVC	0067 0041 0008
VCR	Jensen	0041
VCR	KEC	0037 0278
VCR	KLH	0072
VCR	Kenwood	0067 0041 0038
VCR	Kodak	0035 0037
VCR	LXI	0037
VCR	Lloyd's	0000 0208
VCR	Logik	0072

VCR	MEI	0035
VCR	MGA	0240 0043
VCR	MGN Technology	0240
VCR	MTC	0000 0240
VCR	Magnasonic	0278
VCR	Magnavox	0035 0039 0081 0000
VCR	Magnin	0240
VCR	Marantz	0035 0081
VCR	Marta	0037
VCR	Matsushita	0035 0162
VCR	Memorex	0035 0037 1037 0048 0039 0047 0162 1162 1262 0000 0240 0104 0209 0479 0046 0307
VCR	Minolta	0042
VCR	Mitsubishi	0048 0067 0043
VCR	Motorola	0035 0048
VCR	Multitech	0000 0072
VCR	NEC	0067 0104 0041 0038
VCR	Nikko	0037
VCR	Noblex	0240
VCR	Olympus	0035
VCR	Optimus	0037 0048 1048 0162 1062 1162 1262 0104 0432
VCR	Orion	0184 0209 0002 0479
VCR	Panasonic	0035 0162 1062 1162 1262 1362 0616
VCR	Penney	0035 0037 0042 0240 0038
VCR	Pentax	0042
VCR	Philco	0035 0209 0479
VCR	Philips	0035 0081 1081 1181 0618
VCR	Pilot	0037
VCR	Pioneer	0067
VCR	Polk Audio	0081
VCR	Portland	0020
VCR	Profitronic	0240
VCR	Proscan	0060
VCR	Protec	0072
VCR	Pulsar	0039
VCR	Quarter	0046
VCR	Quartz	0046
VCR	Quasar	0035 0162 1162
VCR	RCA	0035 0060 0048 0042 0240
VCR	RCA	0060
VCR	Radio Shack	1037 0000
VCR	Radix	0037

VCR	Randex	0037
VCR	Realistic	0035 0037 0048 0047 0000 0104 0046
VCR	ReplayTV	0614 0616
VCR	Runco	0039
VCR	STS	0042
VCR	Samsung	0045 0240
VCR	Samtron	0643
VCR	Sanky	0048 0039
VCR	Sansui	0000 0067 0209 0041 0479 0271
VCR	Sanyo	0047 0240 0104 0046
VCR	Scott	0184 0045 0121 0043
VCR	Sears	0035 0037 0047 0000 0042 0104 0046
VCR	Semp	0045
VCR	Sharp	0048
VCR	Shintom	0072
VCR	Shogun	0240
VCR	Singer	0072
VCR	Sony	0035 0032 1032 0000 0636 0033
VCR	Sylvania	0035 0081 0000 0043
VCR	Symphonic	0000
VCR	TMK	0240 0208
VCR	Tatung	0041
VCR	Teac	0000 0041
VCR	Technics	0035 0162
VCR	Teknika	0035 0037 0000
VCR	Thomas	0000
VCR	Tivo	0618 0636
VCR	Toshiba	0045 0043
VCR	Totevision	0037 0240
VCR	Unitech	0240
VCR	Vector	0045
VCR	Vector Research	0038
VCR	Video Concepts	0045
VCR	Videosonic	0240
VCR	Wards	0035 0060 0048 0047 0081 0000 0042 0240 0072
VCR	White-Westinghouse	0209 0072 0278
VCR	XR-1000	0035 0000 0072
VCR	Yamaha	0038
VCR	Zenith	0039 0000 0209 0479 0033 0637