

# XMp3i

## User Guide



**SIRIUS**  | **((XM))**  
S A T E L L I T E R A D I O



# Table of Contents

<b>Introduction</b> . . . . .	<b>5</b>	Category Lists . . . . .	45
Features . . . . .	6	Replay Live XM . . . . .	46
Safety and Care Information . . . . .	7	Favorite Channels . . . . .	47
Important Battery Information . . . . .	10	TuneSelect and GameSelect . . . . .	48
What's in the Box? . . . . .	12	Info Extras . . . . .	49
XMP3i Buttons and Connectors . . . . .	13	Recording . . . . .	52
Home Dock . . . . .	14	Bookmarks . . . . .	56
Remote Control Functions . . . . .	15	Blocking Explicit Channels . . . . .	57
Installing and Charging the Battery . . . . .	16	<b>My Music Library</b> . . . . .	<b>59</b>
MicroSD™ Memory Card . . . . .	17	Introduction . . . . .	60
<b>Home Installation</b> . . . . .	<b>19</b>	The My Music Library Main Display	
Step 1: Connect the Home Dock . . . . .	20	Screens . . . . .	61
Step 2: Install the Indoor/Outdoor		Listening to My Music Library . . . . .	63
Antenna . . . . .	24	Playlists . . . . .	66
<b>Activation</b> . . . . .	<b>29</b>	<b>Auto Recordings</b> . . . . .	<b>71</b>
<b>Using Your XMP3i</b> . . . . .	<b>31</b>	Introduction . . . . .	72
The Four XMP3i Menu Options . . . . .	32	<b>Settings</b> . . . . .	<b>77</b>
Docked and Portable Use of Your		Introduction . . . . .	78
XMP3i . . . . .	33	EQ Settings . . . . .	79
Navigation Buttons . . . . .	35	Change Display . . . . .	80
Display Icons . . . . .	37	Edit Alerts . . . . .	82
Using the Control Wheel . . . . .	39	Info Extras . . . . .	84
<b>Live XM</b> . . . . .	<b>41</b>	Channel Access . . . . .	86
Introduction . . . . .	42	Auto Recordings . . . . .	88
The Live XM Main Display . . . . .	43	Vehicle Settings . . . . .	89
Tuning a Channel . . . . .	44	Line Out Level . . . . .	93

# Table of Contents

Antenna Aiming.....	94
Restore Defaults .....	97
Memory Usage.....	99
<b>Using your XMp3i with a PC . . . .</b>	<b>101</b>
Introduction .....	102
My Music.....	104
Record XM .....	105
Bookmarks .....	106
napster.com .....	107
My Books .....	108
audible.com/xm.....	109
Updating the XMp3i Firmware.....	111
Disconnecting the XMp3i from a PC...	112
<b>Troubleshooting.....</b>	<b>113</b>
<b>Product Specifications.....</b>	<b>119</b>
Patent Information .....	121
Environmental Information .....	121
Owner's Record .....	124
<b>Indoor/Outdoor Antenna</b>	
<b>Template.....</b>	<b>125</b>



# Introduction

## Features

### **Congratulations on your purchase of the XMp3i™!**

The XMp3i has these exciting features to enhance your overall experience:

- Live or recorded XM content at your fingertips. Spin the Control Wheel to quickly tune to your favorite XM channels.
- Have to step away for a few minutes? Pause and replay up to 30 minutes of XM programming.
- Record songs while you listen, or schedule recordings of your favorite shows.
- Set XMp3i to record up to five of your favorite XM channels automatically so you'll always have something to listen to.
- TuneSelect and GameSelect find your favorite artists or sports events on any XM channel.
- Upload MP3 files, WMA tracks, and Audible.com books from your PC. Manage your collection and playlists with the XM2go Music Manager software.
- Store MP3 or WMA files on a removable microSD memory card (sold separately).

**Please read the entire User Guide before using your XMp3i!**

## Safety and Care Information



**IMPORTANT!** Always read and understand all the instructions to avoid injury to yourself and/or damage to your device. SIRIUS XM Radio Inc. disclaims all responsibility for damage from data loss due to breakdown, repair, or other causes.

- Do not expose to extreme temperatures, outside the recommended temperature range of 32° to 95°F (0° to 35°C).
- Do not expose to moisture. Do not use device near or in water. Do not touch the device with wet hands.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight for a prolonged period of time, and do not expose to fire, flame, or other heat sources.
- Do not try to disassemble and/or repair device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.
- If the LCD screen is damaged, do not touch the liquid crystal fluid.

# Introduction

## Warning!

- Opening the case may result in electric shock.
- If the liquid crystal fluid comes in contact with your skin, wipe the skin area with a cloth and then wash the skin thoroughly with soap and running water. If the liquid crystal fluid comes into contact with your eyes, flush the eyes with clean water for at least 15 minutes and seek medical care. If the liquid crystal fluid is ingested, flush your mouth thoroughly with water. Drink large quantities of water, and induce vomiting. Seek medical care.
- Use only the provided Home Power Adapter.
- Insert the Home Power Adapter all the way into the electrical outlet. Be careful not to overload the outlet with too many electrical devices, and keep metallic objects away from the power plugs.
- When using this product, stay aware of your surroundings when enjoying your XMp3i. If you're a pedestrian, keep your eyes and ears open. If you're driving, keep your eyes on the road and your hands on the wheel. Not doing so could result in personal injury, death, and/or damage to your device, accessories, and/or to your vehicle or other property.
- Radio functions should not be performed while driving. Park your vehicle in a safe location before using the Radio.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Your device should be placed in your vehicle where it will not interfere with the function of safety features, e.g., deployment of airbags. Failure to correctly place device may result in injury to you or others, if the unit becomes detached during an accident and/or obstructs the deployment of an airbag.

## Protect Your Ears and Yourself

- Always follow traffic safety directions. Do not use earbuds or headphones while operating a bicycle, automobile, or motorcycle. Not only is it dangerous, it may be illegal.
- Make sure the earbud or headphone cable does not get in the way of your arms or other surrounding objects while you're walking or exercising.
- Maintain a moderate volume when walking or exercising. Always be aware of what is happening around you.
- Using earbuds or headphones for a long time and/or at high volume can cause serious damage to your hearing. If you hear ringing in your ears, STOP listening immediately.

Sound can be deceiving. Over time, your hearing “comfort level” adapts to higher and higher volumes. What sounds “normal” may be dangerously loud.

**TO ESTABLISH A SAFE LEVEL:** Start the volume control at a low setting. Slowly increase the volume until you can hear comfortably, without distortion, and still be aware of your surroundings.

**ONCE YOU ESTABLISH A COMFORTABLE SOUND LEVEL:** Leave the volume at that level; do not increase it over time. SIRIUS | XM and the Consumer Electronics Association recommend that you avoid prolonged exposure to excessive noise. Sustained sound levels above 85 decibels can be dangerous without hearing protection. (For reference, a garbage disposal or loud shouting at 3 feet are about 80 decibels; a food blender or gas lawn blower at 3 feet are around 90 decibels.) SIRIUS | XM disclaims all liability for hearing loss, bodily injury, or property damage as a result of use or misuse of this product.

# Introduction

## Important Battery Information

Your XMP3i's battery should be charged before you use it. The amount of charge is indicated by the battery level meter in your XMP3i's display. When you're charging the battery you will see . When the battery is exhausted you will see a red battery icon.

When you use your XMP3i for the first time, charge the battery until the battery icon turns green. Then use your XMP3i until the battery is exhausted. This charge/discharge cycle calibrates the battery level meter so that it accurately reports the state of the battery.

## Important Battery Safety Information

- Exposure to extreme temperatures can seriously degrade your battery's performance and useable life and may result in permanent damage.
- Do Not leave your XMP3i battery in an unattended vehicle (even the glove box) because temperatures in parked vehicles can become extreme and extreme heat will degrade your battery's performance the most.
- Use and store your XMP3i and battery within the recommended temperature range of 32° to 95°F (0° to 35°C).
- Do not place or store your radio and battery in direct sunlight, or near a heat source.
- Do not use your battery if it swells, leaks, or malfunctions.

- Do not use your battery if it is dropped or damaged.
- Charge your XMP3i battery only with Sirius XM approved charger.
- Risk of Explosion if battery is replaced with an non XM approved battery.
- To Prevent Injury Do Not Drop, Disassemble, Crush, Puncture, or Dispose of in Fire or Water or Allow Metal to Touch Battery Terminals.
- Your XMP3i's rechargeable battery should be disposed of properly and should be recycled. Contact your local recycler for details.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate) (Applicable to California, U.S.A.)
- Replacement batteries can be ordered online at [www.xmradio.com/accessories](http://www.xmradio.com/accessories) or by calling 800-XM RADIO (800-967-2346)

# Introduction

## What's in the Box?



XMp3i Radio



Remote Control



Earbuds



Stereo Audio Cable




Home Dock



Indoor/Outdoor Antenna



Battery

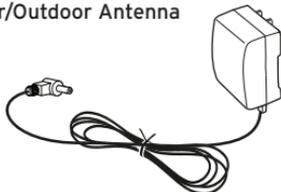

Home Power Adapter



USB Cable

## XMp3i Buttons and Connectors

**Power/Lock Switch**  
Slide down to turn XMp3i on or off, slide up to lock buttons.

**Menu**  
Go to Live XM, My Music Library, Auto Recordings, or Settings.

**Back**  
Return to previous screen. Press and hold to return to the previous channel.

**30-Minute Replay**  
Pause and replay live XM or navigate your recorded content.

**USB Jack**

**Universal Connector**

**Record**  
Record a song or a channel. Also schedule a recording and set channel to auto record.

**Headphone Jack and microSD Card Slot**


**Volume/Mute**

**Keypad**  
Enter a channel number to tune to the channel.

**Options**  
Displays options available for the displayed screen.

**Select Button**  
Press to confirm highlighted selections.

**Control Wheel**  
Rotate to highlight selections.

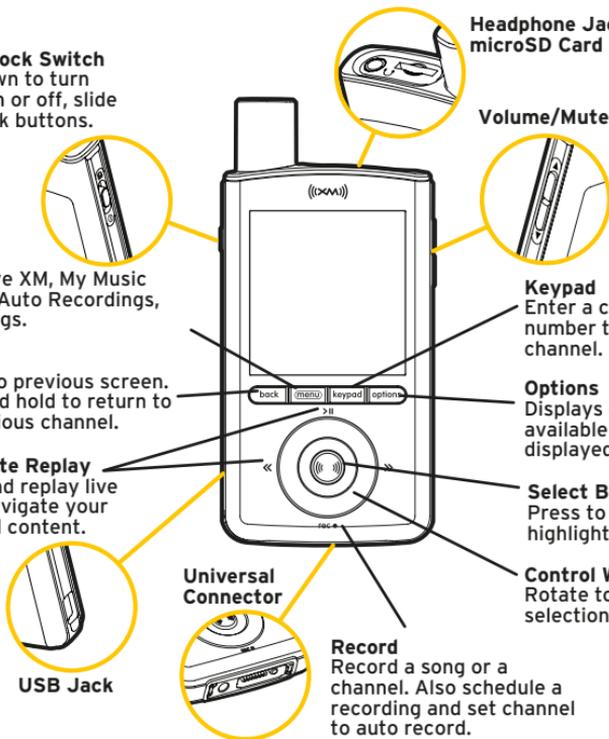


# Introduction

## Home Dock

### Color-Coded Connections

The color-coded Home Dock makes it simple to connect. Just match the colors on the cable ends to the colors on the dock to see what goes where.

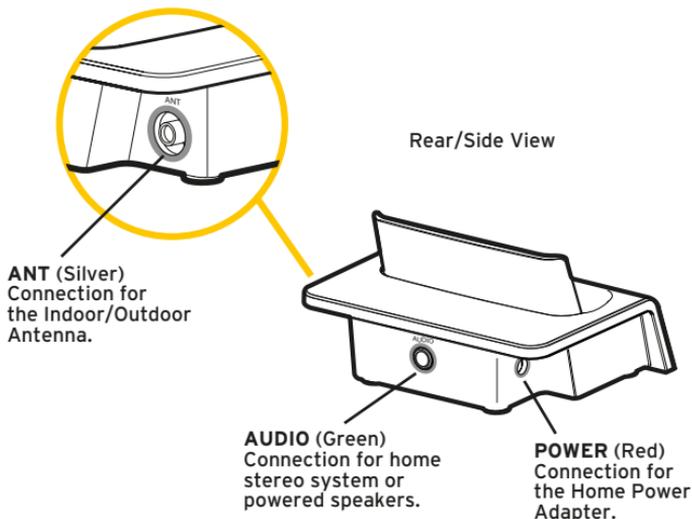

## Remote Control Functions

### Power Button

Turn Radio on/off.

### Replay Buttons

Pause and replay live XM programming and navigate your recordings.

### Select Button

Press to confirm highlighted selections; press and hold to access FM channel presets.

### Menu


Go to the main menu.

### Number Keys

Enter a channel number to tune directly to the channel.

### Jump

Switches between current channel and previously tuned channel.

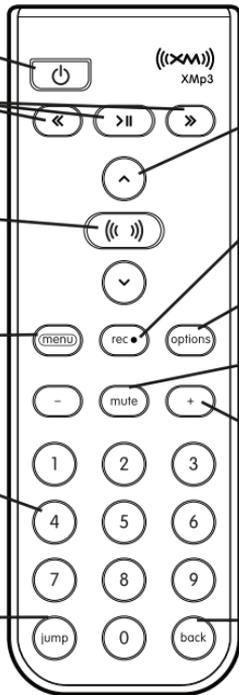

### Arrow Buttons

Tune channels and navigate lists.

### Record

Press to record songs, channels or schedule a recording.

### Options

Displays available options for current display.

### Mute

Silences the audio.

### + and -

Change channels or control volume for audio system (sold separately).

### Back


Return to previous screen.

# Introduction


## Installing and Charging the Battery

The battery is shipped partially charged. Charge the battery for at least 3 hours before using your XMp3i for the first time, or if you have not used it for several months.


Insert the battery into the XMp3i as shown.

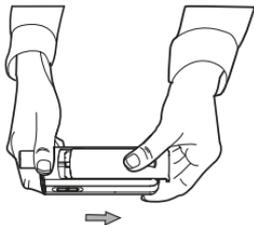


1. Open battery compartment.

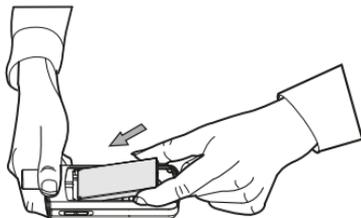

2. Insert the battery into the XMp3i.

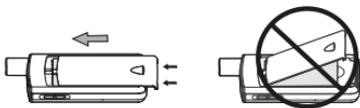

3. Carefully replace the battery door, sliding in place.

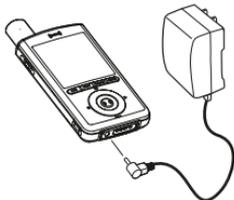

4. Charge the battery for at least 3 hours.

## MicroSD™ Memory Card

You can add removable microSD memory to store more of your personal MP3 and WMA music files. The microSD memory card is sold separately, and may be purchased at most electronics retailers.



**NOTE!** You cannot store any recorded XM content on your microSD card.


### Installing and Removing the microSD Memory Card

Turn your Xmp3i off before inserting or removing the microSD memory card.

To insert the memory card, press it down until it clicks into place. To remove it, press down and release and it will eject. Do not remove the card if you see this icon  in red on the display.



**WARNING!** Do not remove microSD memory card during scanning.

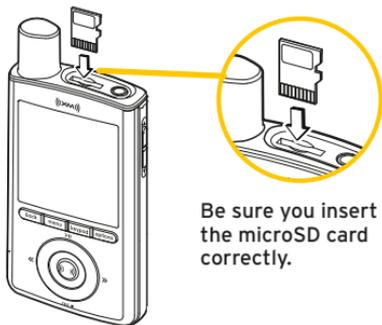



# Home Installation

# Home Dock Installation

There are two steps to installing your Home Dock. First, connecting the Home Dock to the AC Power Adapter, the Indoor Outdoor Antenna, and to your stereo or powered speakers, and second, placing and aiming the Indoor/Outdoor Antenna.


## Step 1: Connect the Home Dock

When installing the Home Dock in your home, choose a location in close proximity to your home stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will affect the visibility of the display screen.

You will also need to decide whether you will be connecting your Home Dock to your home stereo system using the provided Stereo Audio Cable, or directly to powered speakers.


### Connect the Indoor/Outdoor Antenna

Once you have selected a location, connect the antenna to the **silver ANT** connector at the right side of the Home Dock. (After completing a few additional steps, we will work on the location of the antenna.)

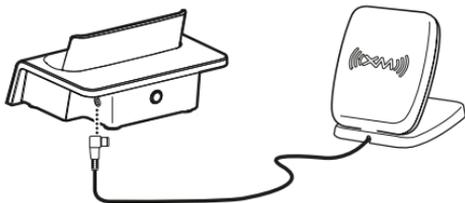

## Connect the Home Power Adapter

Connect the Home Power Adapter to the **red POWER** connector at the left side of the Home Dock, and plug it into a wall outlet.

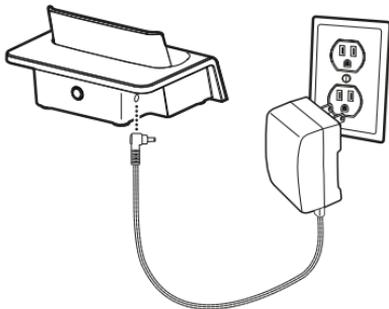

## Connect the Home Dock to a Home Stereo System or Powered Speakers

The Home Dock can be connected to your home stereo system, or to a pair of powered speakers. If you are connecting to a home stereo system, see the following section. If you are connecting to a pair of powered speakers, refer to "To Connect the Home Dock to Your Powered Speakers" on page 23.


### *To Connect the Home Dock to Your Home Stereo System*

The Home Dock can be connected to your home stereo system through the

# Home Dock Installation

AUX In or LINE In connection of your home stereo system, using the provided Stereo Audio Cable.

- 1 Take the provided Stereo Audio Cable and connect the single 1/8" (3.5 mm) connector to the **green AUDIO** connector at the rear of the Home Dock.
- 2 Connect the white left and red right Stereo Audio Cable connectors ("L" and "R" are also on each respective tip) to any available input other than PHONO on your home stereo system. (If your stereo's inputs are marked red and black, simply connect the white plug to the black input.)

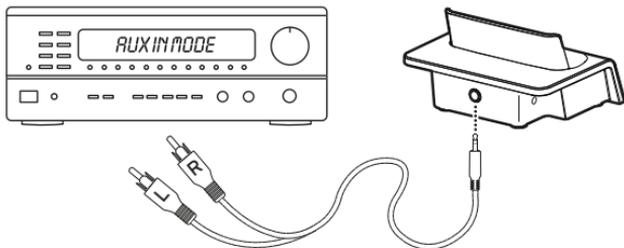


- 3 Turn the home stereo system On, and make sure you select the correct input on your stereo system for the **AUX In** or **LINE In** connection, or whatever input you have selected.

### To Connect the Home Dock to Your Powered Speakers

The Home Dock can be connected directly to a pair of speakers. The speakers will need to be powered for amplification.

- 1 Connect the 1/8" (3.5 mm) connector from the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.

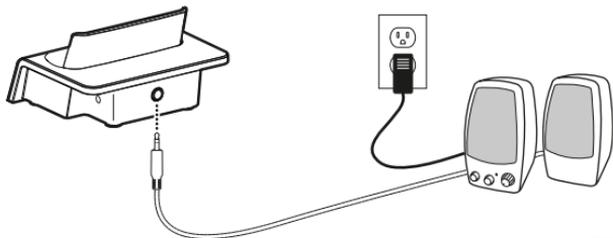

- 2 Plug the AC Power Adapter for the speakers into an AC outlet.
- 3 Turn the speakers On.

### Dock Your XMP3i

Place the XMP3i into the Home Dock as shown, and turn it On by sliding the **Power/Lock** switch down.



**IMPORTANT!** Allow the XMP3i to charge the battery for a minimum of three hours before removing from the Home Dock.



# Home Dock Installation

## Step 2: Install the Indoor/Outdoor Antenna

Proper installation of the Indoor/Outdoor Antenna is necessary to insure good and consistent signal reception. To begin, try experimenting with the antenna to get a feel for the reception in your location. Move the antenna around the room or from room to room. Aim it from different windows. In major metropolitan areas, you might find that you get great reception in several locations without worrying too much about aim and placement.

Access the Antenna Aiming screen of your XMp3i to see a visual indication of signal strength. Press **menu**, turn the **Control Wheel** to highlight **Settings**. Press **Select**. Turn the **Control Wheel** to highlight **Antenna Aiming**. Press **Select**. If you're receiving a good Satellite and Terrestrial signal strength, you're done. If not, try some of the suggestions which follow.



### *Other Indoor/Outdoor Antenna Installation Suggestions*

If you find you are getting a signal, but it's inconsistent, try moving the Indoor/Outdoor Antenna closer to a window, ideally one that is facing due south.



Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Move the antenna closer to the window.




**TIP!** Still not sure which way is south or where to place your Indoor/Outdoor Antenna? Look up your location on an online mapping website that offers satellite views of street addresses where you can easily see which way is south, and what window may offer an unobstructed view of the sky.

Another easy method is to start at any window, then work from window to window in a simple pattern to find the window gives the best signal strength. Note that the antenna must also have an unobstructed view, with no trees or buildings blocking its aim. If the antenna is aimed through a window, be aware that blinds, screens, or any other non-glass elements such as thermal insulation can sometimes cause reception issues. If this is the case, you may want to use another window or place the antenna outside of the window.

If you find a window that gives you good signal strength, you can place the antenna on the windowsill. The antenna may need to be placed on something to raise it above the level of the window frame.

If you don't have a window where you receive a consistent signal, or placing the antenna in a window is not a practical solution for you, **BETTER** reception can be achieved by placing the antenna outside

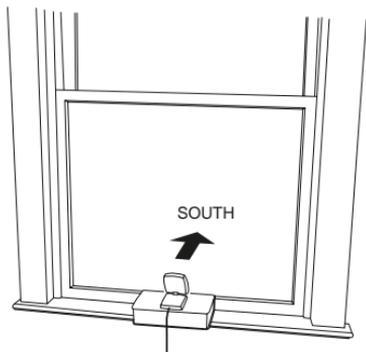



# Home Dock Installation

on a window ledge, porch, table, or patio. The location you choose should provide the antenna with a clear view of the southern sky.

If none of the previous solutions work for you, then the **BEST** reception can be achieved by mounting the antenna outdoors, with a clear view of the southern sky.


Note that you will want to consider any potential hazards when you choose the mounting location, and possibly consider professional installation. SIRIUS XM Radio Inc. is not liable for any damages.

To mount the antenna, you will need four screws (not included) with a 1/4" head (e.g., an M3 screw), and that are suitable for the material onto which you are affixing the antenna, (e.g., wood, metal, etc.). The screws should be spaced 1-3/8" apart horizontally and 1-1/8" vertically. Refer to the template "Indoor/Outdoor

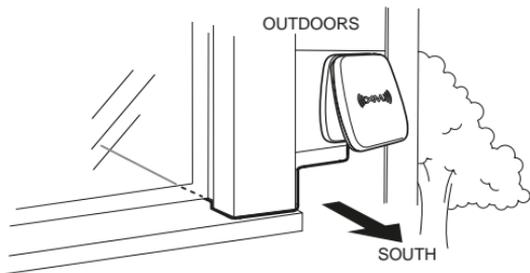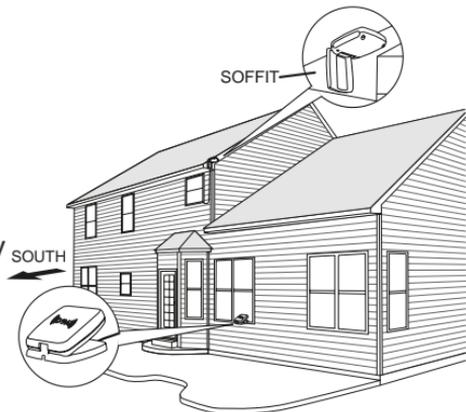

Antenna Template” on page 126.

Once you have found a suitable location for the antenna, route the antenna cable to the Home Dock. Be sure you avoid any obstructions that could crimp, kink, or twist the cable. Use protective grommets wherever rough openings are encountered. If the antenna is installed outdoors, route the cable from the antenna location to the interior of the home, working the cable through the basement, under a window sill, etc., and make adjustments to take up cable slack as necessary.

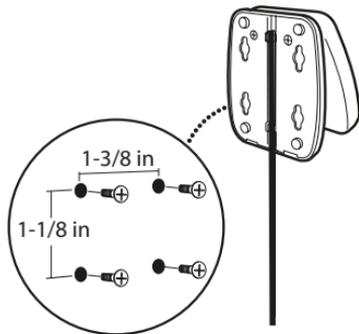

**TIP!** If your Indoor/Outdoor Antenna's cable isn't long enough, visit [xmradio.com/accessories](http://xmradio.com/accessories), or your favorite retailer, and consider a 50 ft. Indoor/Outdoor Antenna Extension Cable or a Wireless Home Signal Repeater.


If the signal is good for either Satellite or Terrestrial (or both), and you are hearing the audio from the Radio, the installation is complete.

If the signal reception is low, or intermittent, try another location for the antenna. Verify that the antenna is pointed south, and that the antenna's view of the sky is not blocked by a tree, a building, a bridge, or anything else. Adjust until you are receiving a good signal.

The Indoor/Outdoor Antenna's reception can also be tweaked by opening or closing the antenna clamshell, and turning the antenna. While observing the

# Home Dock Installation

signal strength, make small adjustments to the angle of tilt of the clamshell until the highest possible signal strength is achieved. If you have not wall-mounted the antenna, turn the antenna slightly to the right or left and observe if the signal strength increases. For each tweak, allow a few seconds in each position to determine if the signal strength increases.

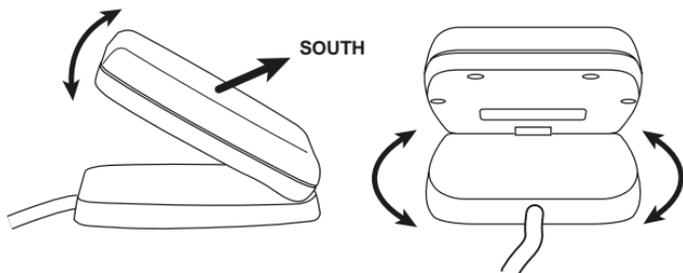

If the signal reception is good, but there is no audio, verify your audio connection.

- If you are connected to a home stereo system, be sure the system is set to the auxiliary input source, and you have connected the Stereo Audio Cable to the auxiliary input connectors.
- If you are connected to powered speakers, be sure the speakers are plugged into an outlet, and are turned On.

The Line Out level of your Radio can also be increased. Refer to “Line Out Level” on page 93.

# Activation

# Activation

Before you can enjoy Commercial-Free Music, plus Sports, News, Talk & Entertainment, you need to activate your XMp3i.

- 1 Make sure your XMp3i is properly installed, turned on, and receiving the XM signal so that you can hear the audio on channel 1.
- 2 Make a note of your XM Radio ID. You can find it on channel 0, on a label on the bottom of the gift box, and on the label on the back of your XMp3i.



**NOTE!** The XM Radio ID does not use the letters I, O, S, or F.

- 3 Activate your service:
  - Online: Go to [www.xmradio.com](http://www.xmradio.com) and click on "ACTIVATE RADIO" in the top right corner  
OR
  - By phone: Call 1-800-XM-RADIO (1-800-967-2346)
- 4 When your service is activated, your XMp3i will receive all channels to which you have subscribed. At this time, you use the **Control Wheel** or Remote Control to tune other channels. Activation usually takes 10 to 15 minutes, but may take up to an hour. We recommend that your XMp3i remain on until activated.

# Using Your XMp3i

# Using Your XMP3i

## The Four XMP3i Menu Options

The XMP3i has four menu options which can be selected after pressing the **menu** button. These menu options are summarized here, and are explained in detail in the four following chapters of this User Guide.



**Live XM:** Listen to Live XM, browse channels or categories of channels such as Pop, Rock, Country, etc., and set up scheduled recordings.



**My Music Library:** Access (or Browse) and playback your XM recordings, downloaded MP3 and WMA music files, and downloaded audio books.



**Auto Recordings:** Listen to content from your favorite XM channels that your XMP3i has automatically saved for you.



**Settings:** Make adjustments to the XMP3i's behavior, such as display brightness, audio equalizer settings, and channel access. Select **Info Extras** to display scrolling stock ticker or sports scores.

## Docked and Portable Use of Your XMp3i

Your XMp3i comes with everything you need to listen to your XM programming and personal music collection at home or on the go.

### *At Home/Office*


Place your XMp3i in the Home Dock to listen to live XM through your home stereo or powered speakers. Use the Remote Control to tune channels, play tracks from your music library or record new content from across the room. The Home Dock will also charge your Radio's battery so its always ready to go.

The Home Dock is also the best place to record your favorite XM programming. As long as your docked Radio is powered and receiving a good signal, you can record programming from up to 5 channels at once. Even when your Radio is powered off, it will wake up for scheduled recordings and store them in My Music Library.

### *Portable*


Use the XMp3i as a portable Radio to listen to Live XM, recorded XM programming, or your downloaded MP3 and WMA music files wherever you go.

To listen to Live XM, your XMp3i needs to have

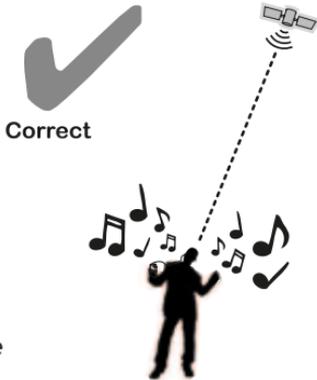

# Using Your XMp3i

a clear view of the sky to receive the satellite signal. Trees, buildings and even your own body can block this signal causing audio interruption. If you lose the satellite signal, XMp3i will prompt you to listen to content from My Music Library or Auto Recordings.

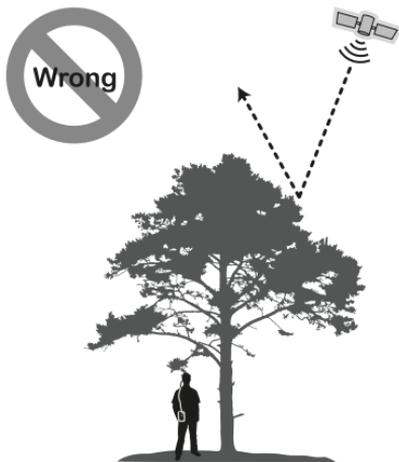

## Navigation Buttons

### Power/Lock Switch

Sliding the **Power/Lock** switch down turns the XMp3i On or Off. Sliding the **Power/Lock** switch up locks the buttons on the XMp3i to prevent the accidental pressing of a button. Slide back to the center position to unlock the buttons.



### Volume +/-


Pressing + or - on the volume button increases or decreases the audio volume, when you are listening to the XMp3i with the Earbuds.



### Control Wheel

The **Control Wheel** on the XMp3i is multifunctional. Turn it clockwise or counter-clockwise to browse and highlight channels and list items.

The **Control Wheel** can also be pressed at the north, south, east, or west positions to select **Play/Pause >II**, **Record rec ●**, **Fast-Forward >>**, or **Rewind <<** respectively.

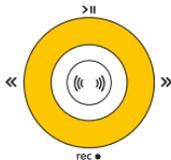

# Using Your XMp3i

## Select Button



Pressing the **Select** button selects a highlighted item in a list and confirms settings. Pressing and holding accesses the FM channel presets when docked in the XMp3i Vehicle Dock (sold separately).

## Back Button

Pressing **back** returns you to the previous display screen. Repeatedly pressing **back** will return you to the channel or recording to which you are listening.

Pressing and holding **back** returns to the previous channel to which you were listening.

## Menu Button

The **menu** button lets you access the four XMp3i modes, Live XM, My Music Library, Auto Recordings, and Settings.

## Keypad Button

The **keypad** button displays an on-screen keypad allowing you to directly tune any XM channel by entering the channel number.

## Options Button

The **options** button shows a list of available options in the context of the currently displayed screen. If no options are available, nothing is displayed.

## Display Icons

The following is a list of the icons that are displayed by the XMp3i.

Icon	Explanation
	Live XM mode
	My Music Library mode
	Auto Recordings mode
	Settings mode
	Battery Charging
	Battery Charged (green)
	Battery Low (red)
	Lock - buttons locked. To unlock, slide the <b>Power/Lock</b> switch down to the middle position
	Mute - to unmute, press both volume up and volume down buttons at the same time
	Repeat
	Shuffle
	MP3 or WMA song loaded onto the microSD card

# Using Your XMp3i

Icon	Explanation
	(Green) microSD card is in the device
	Song included on a playlist
	MP3 or WMA file loaded onto the microSD card that has been added to a playlist
	TuneSelect set to alert on artist's name
	TuneSelect set to alert on song title
	No alert is set for the TuneSelect or Channel is skipped in channel list
	XM signal strength
	(Red) MicroSD card is being read. Do not remove the microSD card until this icon turns green
	GameSelect set to alert or Channel is added to channel list
	Scheduled recording via "Schedule Recording"

## Using the Control Wheel

The **Control Wheel** on the XMp3i is multifunctional. Use your finger to spin the wheel clockwise or counter-clockwise to browse and highlight XM channels and menu lists.

Select highlighted items by pressing the **Select** button in the center of the **Control Wheel**.

The **Control Wheel** can also be pressed at the north, south, east, or west positions to select **Play/Pause >II**, **Record rec ●**, **Fast-Forward >>**, or **Rewind <<** respectively.








# Live XM

## Introduction

Live XM is where you listen to Satellite Radio, browse channels and tune to your favorite XM programs.

To listen to Live XM with your XMP3i from any screen:

- 1 Press **menu**. The **Live XM** icon is highlighted.
- 2 Press **Select**.

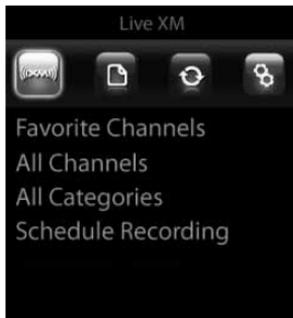

## The Live XM Main Display

When listening to a channel, information about the channel and XMp3i are displayed.



Other icons may be displayed on the screen depending upon what you are doing. Refer to "Display Icons" on page 37 for an explanation of the various icons.

## Tuning a Channel

Tune a channel to listen to Live XM programming. You can tune by browsing channels and selecting, or by directly entering the channel number.

### *Browsing Channels*

To select a channel to listen to:

- 1 Turn the **Control Wheel** to display the list of channels.
- 2 Turn the **Control Wheel** to highlight the channel to which you'd like to listen and press **Select**.

If the last channel tuned was selected from a category list, when you turn the **Control Wheel** only channels from the last category list are displayed. If you want to view all channels, scroll to the end of the channel list and select **>View All Channels**.

### *Direct Channel Number Entry*

If you know the number of the channel you want to listen to:

- 1 Press the **keypad** button.
- 2 Turn the **Control Wheel** to highlight a digit and press **Select**. Repeat for each digit in the channel number.
- 3 When complete, either wait 2 seconds for the channel to be tuned, or turn the **Control Wheel** to highlight **enter** and press **Select**.



## Category Lists

Channels are grouped into categories such as Pop, Rock, Comedy, Talk/News, etc., to make it easier to find channels of similar genre.

### *To display a list of categories*

- 1** Press **menu**. The **Live XM** icon is highlighted. Press **Select**.
- 2** Turn the **Control Wheel** to highlight **All Categories**. Press **Select**.
- 3** Turn the **Control Wheel** to highlight a category and press **Select**.

# Live XM

## Replay Live XM

You don't need to miss any XM programming with the XMp3i. If you're temporarily interrupted while listening to a channel, just pause the channel to enter Replay. When you're ready to listen again, set the channel to play. A paused channel will save up to the last 30 minutes of the programming for replay. If you tune to a different channel, the replay memory is cleared.

### *To play, pause, rewind, or fast-forward in Replay*

- **Play/Pause >II:** Press to pause Live XM and enter Replay. A time-line will be displayed near the bottom of the screen which shows your position in the replay content. Tick marks in the time-line indicate replay content changes such as the start of a new song.
- **Rewind << and Fast-Forward >>:** Pressing and holding moves in 5 second increments through the replay content to the previous or next content change. Pressing and releasing jumps to the previous or next content change.



You can view a list all the content saved in the replay content by turning the **Control Wheel** while in Replay. Replay content can be selected from the list.

### *To Exit Replay*

- 1 Either tune to a different channel, or turn the **Control Wheel**.
- 2 Turn the **Control Wheel** to highlight **>Go to Live XM** and press **Select**.

## Favorite Channels

Saving favorites is an easy way to quickly browse and tune only those XM channels you listen to frequently. You can save up to 99 channels as favorites.

### *To save a favorite channel*

- 1 While listening to any channel press **options**.
- 2 Turn the **Control Wheel** to highlight **Add to Favorites** and press **Select**.

Remove a favorite channel using the same procedure, and select **Remove Favorite**.

### *To tune a favorite channel*

- 1 Press **menu**. The **Live XM** icon is highlighted. Press **Select**.
- 2 Turn the **Control Wheel** to highlight **Favorite Channels** and press **Select**.
- 3 Turn the **Control Wheel** to highlight a favorite channel from the list and press **Select** to tune to the channel.

## TuneSelect and GameSelect


TuneSelect and GameSelect alerts you whenever your favorite artists, songs or sports teams are playing on any XM channel.

When a match is found for an entry in your TuneSelect or GameSelect list, you'll be prompted with audio and a displayed alert. Press **Select** to immediately tune the channel on which the song or game is playing.

### *To save a TuneSelect or GameSelect*

While you are listening to a song or sports game:

- 1 Press **options**.
- 2 Turn the Control Wheel to highlight **TuneSelect Song** to select the song, or **TuneSelect Artist** to select the artist, or **GameSelect** for a sports game. Press **Select**.

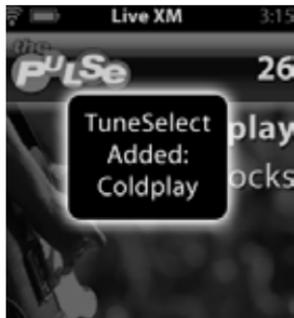

## Info Extras

Game scores for up to 60 teams or up to 30 stock quotes can be displayed at the bottom of the display screen. The game scores or stock quotes will scroll in a ticker fashion if there are too many to display at once.

### *To turn Info Extras On or Off*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Change Display** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Show Info Extras** and press **Select**.
- 5 Press **Select** to sequence through the choices: **None** to turn off the display of Info Extras, or **Stocks** to display stock quotes, or **Scores** to display game scores.

## Stocks

### *To add stock quotes to be displayed*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.

- 4 Turn the **Control Wheel** to highlight **Stocks** and press **Select**.
- 5 If this is the first time you are adding a stock, the **Add Stocks** screen will be displayed, otherwise press **Select** to select **Add Stocks**.
- 6 Turn the **Control Wheel** until the first letter of the stock symbol is displayed and press **Select**. Repeat for each additional letter of the stock symbol. If there is no fourth letter in the stock symbol, leave it blank and press **Select**.

## *To remove stock quotes*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Stocks** and press **Select**.
- 5 Turn the **Control Wheel** to highlight **Erase Stocks** and press **Select**.
- 6 Turn the **Control Wheel** to highlight the stock symbol you wish to delete and press **Select**.

You can also remove all stocks from your list by selecting **Erase All Stocks** in step 5.

## Game Scores

### *To add sports teams for game score updates*

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.
- 4** Turn the **Control Wheel** to highlight **Sports** and press **Select**.
- 5** From the list of sports categories displayed, turn the Control Wheel to highlight the category of your team and press **Select**
- 6** From the list of team names displayed, turn the Control Wheel to highlight a team for game scores and press **Select**. A check mark ✓ will appear next to the team name to indicate that the team is selected.

You can continue to add teams until you are finished. Press **back** to return to the sports category list to select another sport.

## Recording

The XMp3i allows you record XM programming in different ways. While listening to any channel, press **Record** (rec ●) to see the options available.

- **Record Song:** Record the song to which you are currently listening. You can save up to 10 hours of individual songs.
- **Record Channel:** Record the channel to which you are listening for up to 6 hours or until you tell it to stop.
- **Schedule Recording:** Schedule a recording to start and end at a specific time in the future.
- **Set to Auto Record:** Select the channel to which you are listening for Auto Recordings. Refer to “Auto Recordings” on page 72 for more information about automatic recordings.



The XMp3i can record from five separate channels simultaneously, so you can set multiple scheduled recordings to occur at the same date and time on different channels.

To complete a Song recording, however, your Radio must remain on the channel until the song ends.

For recordings to happen and finish, the XMp3i must be receiving the XM signal and be in Live XM mode. Additionally, for Scheduled Recordings and Auto Recordings, the XMp3i must be docked in a Home Dock or Vehicle Dock which is connected to a power source.

### *To record a song*

- 1 Press and hold **Record** rec ● until rec ● is shown in red at the top of the display screen.

To stop recording a song while it's recording:

- 1 Press **Record** rec ●.
- 2 **Stop Rec Song** will be highlighted. Press **Select**.

### *To record a channel*

The channel to which you are listening can be recorded in a block of 1, 2, 3, 4, 5, or 6 hours.

- 1 Press **Record** rec ●.
- 2 Turn the **Control Wheel** to highlight **Record Channel** and press **Select**.
- 3 Turn the **Control Wheel** to highlight and select the desired length of time, **1 Hour**, **2 Hours**, etc., and press **Select**.



To stop recording a channel while it's recording:

- 1 Tune to the channel being recorded.
- 2 Press **Record** rec ●.
- 3 **Stop Rec Channel** will be highlighted. Press **Select**.

## *To schedule a recording*

A scheduled recording lets you capture programs that you either can't listen to when they are broadcast, or may want to listen to again. XMp3i makes it easy to set up a schedule recording.

Scheduled recordings can also be created, edited, and deleted using the XM2go Music Manager software. Refer to "Using your XMp3i with a PC" on page 102 for more information.


## To set a scheduled recording

While listening to a program, you can set up a schedule to record the program one time or on a recurring basis:

- 1 Press **Record** rec ●.
- 2 Turn the **Control Wheel** to highlight **Schedule Recording** and press **Select**.
- 3 If you have already scheduled other recordings, **New Session** will be highlighted. Press **Select**.
- 4 Enter **When** the recording should take place. Turn the **Control Wheel** and highlight your choice and press **Select**:
  - **Today**: Record today only, at the time specified
  - **Everyday**: Record every day, at the time specified
  - **Date**: Record only on the date specified, at the time specified
  - **Weekly**: Record every week, on the specified day of the week, at the

time specified

- 5 Set the **Start Time** hour by turning the **Control Wheel**. Press **Select**.
- 6 Set the **Start Time** minutes by turning the **Control Wheel**. Press **Select**.
- 7 Set the **End Time** hour by turning the **Control Wheel**. Press **Select**.
- 8 Set the **End Time** minutes by turning the **Control Wheel**. Press **Select**.
- 9 Set the Channel by turning the **Control Wheel**. Press **Select**.
- 10 Press **Select** to schedule the recording.

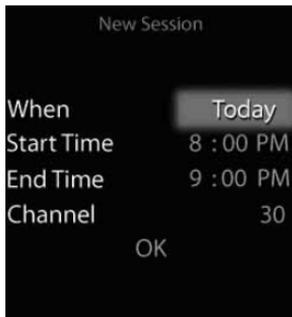

To edit or cancel a scheduled recording:

- 1 Press **Record** rec ●.
- 2 Turn the **Control Wheel** to highlight **Schedule Recording** and press **Select**.
- 3 Turn the **Control Wheel** to highlight the recording from the list and press **Select**.
- 4 Turn the **Control Wheel** to highlight to select **Edit Session** or **Cancel Session**.

## Bookmarks

Bookmarks remember artist and title information of songs. You can view and manage bookmarks when using the XM2go Music Manager software, and use the information to easily purchase bookmarked songs. Songs may be purchased from compatible online music services.

To bookmark a song that is currently playing, press **options** → **Bookmark**.

Refer to "Using your XMp3i with a PC" on page 102 for more information about the XM2go Music Manager software.

## Blocking Explicit Channels

A channel logo that contains “xL” means that you may hear frequent explicit content and language. If you do not want these channels to appear in the channel lists, you can block them.

Blocked channels can still be selected by entering the channel number using the **keypad** button.

To select whether to block (omit) or display xL channels:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Channel Access** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **xL Channels** and press **Select** to toggle between **On** and **Off**:
  - **On** to display explicit channels in channel lists
  - **Off** to block (omit) explicit channels in channel lists





# My Music Library


## Introduction

My Music Library is where you listen to and manage XM recordings and music stored on your XMP3i.

- **Recorded XM:** Songs and scheduled recordings which you have recorded from Live XM.
- **MP3s and WMAs:** Stored MP3 and WMA files you've downloaded to XMP3i memory or loaded onto a microSD card from your PC
- **My Books:** Audio books that you have downloaded to your XMP3i from your PC.

Within My Music Library, you can browse the recorded and downloaded content by song, artist, channel, category, or album, and more. My Music Library gives you options to shuffle songs, create playlists, and manage your recordings.


To listen to anything in My Music Library, simply highlight the name and press **Select**. Remember, if you leave the Live XM mode and enter the My Music Library mode, any recordings currently taking place will be cancelled, and scheduled recordings will not occur.

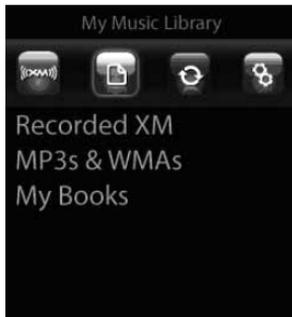

## The My Music Library Main Display Screens

When listening to recorded or downloaded content, information about the song and XMp3i are displayed.


### When you are listening to a recorded song (Recorded XM):

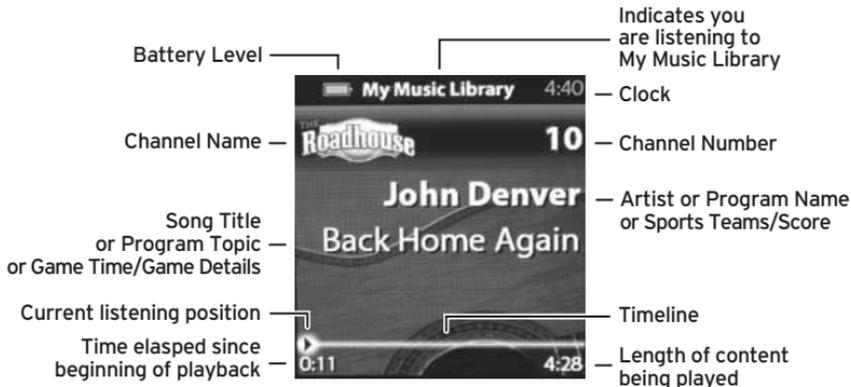

Other icons may be displayed on the screen depending upon what you are doing. Refer to "Display Icons" on page 37 for an explanation of the various icons.

# My Music Library

When you are listening to a downloaded content (MP3s & WMAs or My Books):

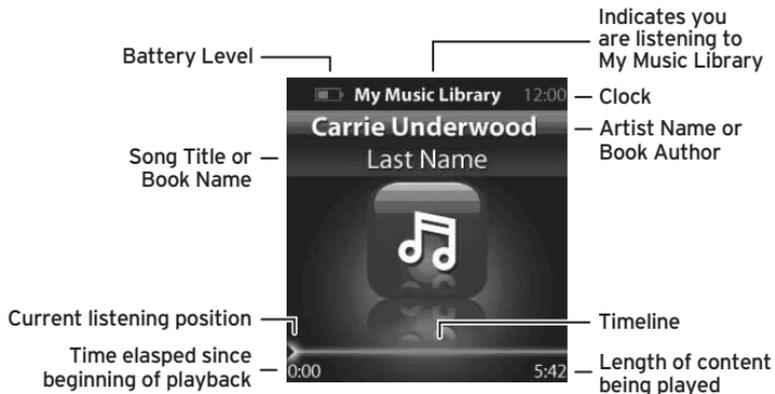


## Listening to My Music Library

### Recorded XM

To listen to Recorded XM:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Recorded XM** and press **Select**. You'll be presented with several options for viewing and selecting the Recorded XM content:
  - **All Songs:** View all the XM recordings by song name or title.
  - **Artists:** View all the Recorded XM by artist name.
  - **Auto Recordings:** View Auto Recordings that the XMP3i has automatically saved for you.
  - **Categories:** View Recorded XM by category (genre).
  - **Channel Names:** View Recorded XM by the channel from which it was recorded.
  - **Date & Time:** View Recorded XM by the date and time of the recording.

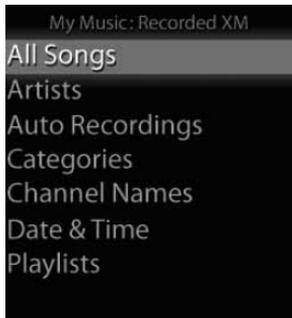

# My Music Library

- **Playlists:** View Recorded XM by the playlist in which it appears.
- 4 Turn the **Control Wheel** to highlight your choice and press **Select**.

## MP3s & WMAs

To listen to your downloaded MP3 and WMA files:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **MP3s & WMAs** and press **Select**. You'll be presented with several options for viewing and selecting the content:
  - **All Songs:** View all the MP3s and WMAs by song title.
  - **Albums:** View all the MP3s and WMAs by album.
  - **Artists:** View all the MP3s and WMAs by artist name.
  - **Genres:** View all the MP3s and WMAs by genre
  - **Playlists:** View MP3s and WMAs by the playlist in which they appears.
- 4 Turn the **Control Wheel** to highlight your choice and press **Select**.

## My Books

To listen to your downloaded MP3 and WMA files:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **My Books** and press **Select**. You'll be presented with several options for viewing and selecting the content:
  - View all My Books by book title.
  - View all My Books by author.
- 4 Turn the **Control Wheel** to highlight your choice and press **Select**.

# My Music Library

## Playlists


A playlist is a collection of songs (or other content) which you create. The playlist can then be selected to play all the songs contained in the playlist. You can make multiple playlists, and songs can be in more than one playlist. An existing playlist can also be added to another playlist.

Separate playlists are created for downloaded MP3 and WMA content, content from a microSD card, and content recorded from XM programming. Content from Auto Recordings, or timed recordings, cannot be added to playlists.

### To create a new playlist

- 1 Turn the **Control Wheel** to highlight a song (or other content) from the list of songs and press **options**.
- 2 Turn the **Control Wheel** to highlight **Add to Playlist** and press **Select**.

Playlist name —

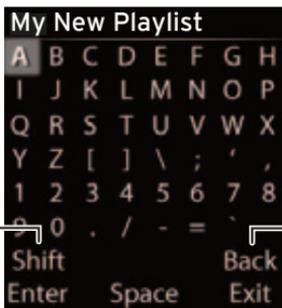

Shift toggles between uppercase and lowercase

Select Enter when you've entered the playlist name

Back erases the last entered letter in the playlist name

Exit cancels the new playlist creation

- 3 If you already have created a playlist, and are adding another playlist, select **New Playlist**.
- 4 If you haven't yet created a playlist, you'll be prompted to create a playlist title.
- 5 Turn the **Control Wheel** to select the first character of the playlist name and press **Select**.
- 6 Continue for each additional character of the playlist name until complete. Select **Shift** to toggle between upper and lowercase letters, **Back** to erase a character, or **Space** to enter a blank space.

### *To add content to a playlist*

- 1 Turn the **Control Wheel** to highlight a song (or other content) from the list of songs and press **options**.
- 2 Turn the **Control Wheel** to highlight **Add to Playlist** and press **Select**.
- 3 Turn the **Control Wheel** to highlight the playlist you want the song to appear in and press **Select**.



**TIP!** You can add a song to a playlist while you're listening to the song. Press **options** → **Add to Playlist**.

# My Music Library

## *To delete content from a playlist*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight either **Recorded XM** or **MP3s & WMA**s and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Playlists** and press **Select**.
- 5 Turn the **Control Wheel** to highlight a playlist and press **Select**.
- 6 Turn the **Control Wheel** to highlight the content you want to delete from the playlist and press **options**.
- 7 Turn the **Control Wheel** to highlight **Remove from Playlist** and press **Select**.

## *To delete a playlist*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight either **Recorded XM** or **MP3s & WMA**s and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Playlists** and press **Select**.
- 5 Turn the **Control Wheel** to highlight a playlist and press **options**.

- 6** **Delete** will be highlighted. Press **Select**.
- 7** Turn the **Control Wheel** to highlight **Yes** and press **Select**.

*To rename a playlist*

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3** Turn the **Control Wheel** to highlight either **Recorded XM or MP3s & WMA**s and press **Select**.
- 4** Turn the **Control Wheel** to highlight **Playlists** and press **Select**.
- 5** Turn the **Control Wheel** to highlight a playlist and press **options**.
- 6** Turn the **Control Wheel** to highlight **Rename Playlist** and press **Select**.
- 7** Turn the **Control Wheel** to select the first character of the new playlist name and press **Select**.
- 8** Continue for each additional character of the playlist name until complete. Select **Shift** to toggle between upper and lowercase letters, **Back** to erase a character, or **Space** to enter a blank space.

# My Music Library

## *To add a playlist to another playlist*

Adding one playlist to another playlist will cause all the content contained in the first playlist to be added to the second playlist.

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3** Turn the **Control Wheel** to highlight either **Recorded XM** or **MP3s & WMAs** and press **Select**.
- 4** Turn the **Control Wheel** to highlight **Playlists** and press **Select**.
- 5** Turn the **Control Wheel** to highlight a playlist and press **options**.
- 6** Turn the **Control Wheel** to highlight **Add to Playlist** and press **Select**.
- 7** Turn the **Control Wheel** to highlight a second playlist and press **Select**. All content from the first playlist will be added to the second playlist.

# Auto Recordings

# Auto Recordings

## Introduction


Auto Recordings is where you find content that your XMP3i records automatically for you. The XMP3i records auto recordings from channels you have specifically selected, or have listened to for at least 30 minutes. XMP3i may record up to 6 hours from as many as 5 different channels, for a total of up to 30 hours of auto recordings.

Your XMP3i manages the auto recordings, deleting content that you have listened to, and replacing it with fresh content so you always have something new to listen to. While you cannot delete the content, you can designate which channels are eligible for Auto Recording.

To preserve memory, the default setting for Auto Recordings is Off.

To enable Auto Recordings with your XMP3i:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Auto Recordings** and press **Select** so Auto Recordings shows On.

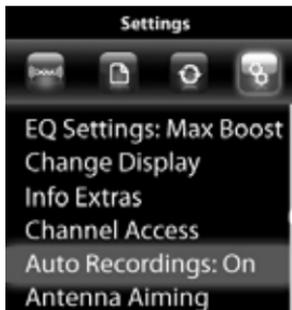

To select specific channels for auto recording:

- 1** While listening to the channel you wish to select for auto recordings, press **options**.
- 2** Turn the **Control Wheel** to highlight **Set to Auto Record** and press **Select**.
- 3** You will receive a confirmation that the channel has been set to auto record.


To remove a specific channel from auto recording:

- 1** While listening to the channel you wish to remove from auto recordings, press **options**.
- 2** Turn the **Control Wheel** to highlight **Remove Auto Rec.** and press **Select**.
- 3** You will receive a confirmation that the channel has been removed from auto recording.

# Auto Recordings

To listen to Auto Recordings with your XMP3i:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **My Music Library** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Auto Recordings** and press **Select**.
- 4 You'll be shown one or more auto recording sessions. Select the auto recording you want to listen to by turning the **Control Wheel** to highlight the channel and pressing **Select**.
- 5 A list of all the songs (or other content) from the channel will be displayed. Select a song/content from the list you want to listen to by turning the **Control Wheel** to highlight the song/content and pressing **Select**.

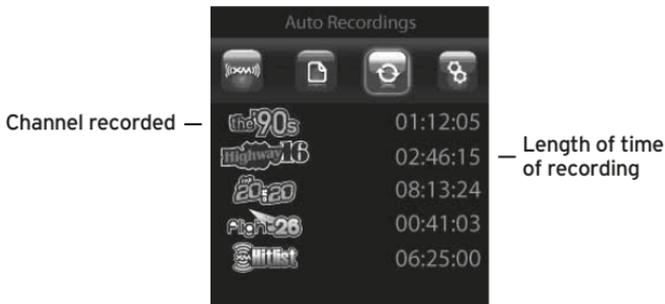

While listening to an auto recording you may press **Play/Pause >||**, **Rewind <<**, and **Fast-Forward >>** to move forward and backward through the recorded songs or segments.



**NOTE!** You can not manually delete any auto recordings. However, auto recordings will be deleted automatically when space is needed for new recordings.






# Settings

## Introduction

Settings is where you manage the XMP3i configuration options such as display brightness, editing alerts, setting your time zone, etc.

To manage your XMP3i's configuration:

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.

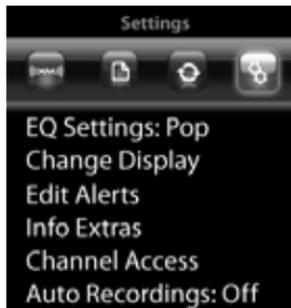

## EQ Settings

The equalization profile of the XMP3i (EQ) is adjustable for the type of music you are listening to, and for your listening pleasure. Possible selections are:

- Max Boost
- Pop
- Rock
- Talk
- Vocal
- Bass Boost
- Classical
- Flat
- Jazz

To adjust the EQ setting:

- 3** Press **menu**.
- 4** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 5** Turn the **Control Wheel** to highlight **EQ Settings** and press **Select**.
- 6** Each press of **Select** will sequence to the next possible EQ setting. Your XMP3i immediately changes to the new EQ profile so you can hear how it sounds.

# Settings

## Change Display

In Change Display, you can change the brightness of the display screen, set the duration of the display backlight, and turn Info Extras on or off.

### *To change the display brightness*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Change Display** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Brightness** and press **Select**.
- 5 Each press of **Select** will sequence through the choices, **Low**, **Medium**, or **High**. The dimmer the brightness is set, the longer the battery will last before requiring recharging.

### *To change the duration of the display backlight*

The display backlight can be set to be Always On, or on for 1 minute, 30 seconds, or 15 seconds. The less time the backlight is on, the longer the battery will last before requiring recharging.

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Change Display** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Backlight** and press **Select**.

- 5 Each press of **Select** will sequence through the choices, **Always On**, or on for **1 minute**, **30 seconds**, or **15 seconds**. The less time the backlight is on, the longer the battery will last before requiring recharging.

*To turn Info Extras on or off*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Change Display** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.
- 5 Each press of **Select** will sequence through the choices, **None**, or set to display either **Stocks** or **Sports**.

# Settings

## Edit Alerts

In Edit Alerts, you can manage your TuneSelect, GameSelect, and Program alerts. You can also turn alerts On or Off.

### *To configure TuneSelect and GameSelect*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Edit Alerts** and press **Select**.
- 4 Turn the **Control Wheel** to highlight the desired alert and press **Select**:
  - **TuneSelect** to configure alerts for songs and artists
  - **GameSelect** to configure alerts for sports games
- 5 The list of alerts is displayed. The icon next each item indicates what kind of an alert is set for each entry. Turn the **Control Wheel** to highlight an item in the list and press **Select**.
- 6 Turn the **Control Wheel** to highlight your choice from the list and press **Select**:
  - **Alert On Artist** or **Alert On Song**. These choices allow you to change an artist alert to a song alert and vice versa.
  - **Do Not Alert**. This choice keeps the alert in the TuneSelect list, but turns the alert off.
  - **Delete**. This choice deletes the alert from the TuneSelect list.

To learn how to add TuneSelect or GameSelect alerts, refer to “TuneSelect and GameSelect” on page 48.

***To turn all alerts On or Off***

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Edit Alerts** and press **Select**.
- 4** Turn the **Control Wheel** to highlight **All Alerts** and press **Select**.
- 5** Each press of **Select** will toggle On or Off.

# Settings

## Info Extras

In Info Extras, you can add stocks to be displayed, and remove a stock from your list of stocks. You also can add and remove sports teams.

### *To manage stocks*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Stocks** and press **Select**.
- 5 Turn the **Control Wheel** to highlight your choice and press **Select**:
  - **Add** to add a stock to your list of stocks
  - **Erase Stocks** to delete a stock from your list of stocks
  - **Erase All Stocks** to delete your entire list of stocks

To learn how to add or delete stocks, refer to “Info Extras” on page 49.

### *To manage sports teams*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Info Extras** and press **Select**.

- 4 Turn the **Control Wheel** to highlight **Sports** and press **Select**.
- 5 You can then select or remove sports teams for Info Alerts.

To learn how to add or remove sports teams, refer to “Info Extras” on page 49.

# Settings

## Channel Access

In Channel Access, there are three options to configure:

- **Direct Tune:** When you highlight a channel name in a list, select whether to have the channel tuned as soon as you highlight the channel, or whether you need to press **Select** to tune the channel.
- **Channel Skip/Add:** Select channels to be skipped (omitted) from lists of channels, or add skipped channels back to the channel list.
- **xL Channels:** Select whether to block (omit) or display channels in the channel list which contain explicit content or language.

### *To configure Direct Tune*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Channel Access** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Direct Tune** and press **Select**.
- 5 Each press of **Select** will toggle the choices, **Off** (to tune a channel from the channel list by pressing **Select**), or **On** (to have the channel tuned when it is highlighted in the channel list).

### *To skip or add channels*

You can designate channels to be skipped if you don't want them appear in any channel lists. You can add back the skipped channels if you change your mind. Skipped channels can still be selected by entering the channel number using the

keypad button.

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Channel Access** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Channel Skip/Add** and press **Select**.
- 5 A list of channels will be displayed. Turn the **Control Wheel** to highlight the channel to be skipped or added and press **Select**. **Select** will toggle between skipping the channel (⊖) or adding the channel (✓).

#### *To configure xL Channels*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Channel Access** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **xL Channels** and press **Select**.
- 5 Each press of **Select** will toggle the choices, **Off** (to display explicit channels in channel lists), or **On** (to block (omit) explicit channels in channel lists).

# Settings

## Auto Recordings

Auto Recordings are content that your XMp3i can record automatically for you. When the feature is turned on, the XMp3i learns your listening habits and automatically records XM programming from the five channels you listen to most frequently, or records from specific channels that you designate.

### *To turn Auto Recordings On or Off*

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Auto Recordings** and press **Select**.
- 4** Each press of **Select** will toggle between **Off** and **On**.

## Vehicle Settings



**NOTE!** The Vehicle Settings menu item only appears if the XMp3i is in a Vehicle Dock. The settings apply only when the XMp3i is in a Vehicle Dock.

In Vehicle Settings, there are three options:

- **FM Channels:** Set and select FM channel presets. When using the PowerConnect™ Vehicle Dock, this option is enabled if there is no connection to the AUDIO connector on the Vehicle Dock.
- **Automatic Power:** When Automatic Power is set to On, the XMp3i will turn on when power to the vehicle dock is detected. Some vehicle power sockets are switched on when the vehicle ignition is turned on, while others remain powered on at all times. This feature does not work with a power adapter socket which is always powered on.
- **Power Off:** Some vehicle power sockets are powered on at all times, which means you could turn the vehicle off and the XMp3i will remain on. Using the Power Off feature, you can set the XMp3i to turn off automatically after a specified period of time. Should you forget to turn the XMp3i off before exiting the vehicle, it will turn itself off automatically.

### *To set and select an FM channel preset*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Vehicle Settings** and press **Select**.

# Settings

- 4** **FM Channels** will be highlighted. Press **Select**.
- 5** Turn the **Control Wheel** to highlight the storage location (FM 1 to FM 5) you want to set and press **Select**. You can choose among the following options:
  - If the chosen storage location is empty (denoted by “---”), or if the storage location contains the FM preset currently being used (denoted by a ✓), then the FM channel tuning screen is displayed.
  - If the chosen storage location has an FM preset that is not currently being used, and you want to edit it, **Edit Channel** is highlighted. Press **Select**. The FM channel tuning screen is displayed.
  - If the chosen storage location has an FM preset that is not currently being used, and you want to start using it, turn the **Control Wheel** to highlight **Start Using** and press **Select**. Skip to step 8.
- 6** Turn the **Control Wheel** to tune the desired FM channel and press **Select** to select the FM channel.
- 7** If you are editing the storage location that has the “current” FM preset, skip to step 8. Otherwise, **Start Using** will be highlighted. Press **Select**.



**NOTE!** You can also preset an FM channel in a storage location without having to start using it right away. Just press menu and exit the screen.

- 8** The chosen FM channel will be confirmed on the display screen and the XMp3i will tune to that FM channel.
- 9** Set your vehicle's FM radio to same FM channel.



**IMPORTANT!** You'll first need to find a suitable FM channel that is unused or available in your area.

***To quickly select an FM channel from the preset list:***

- 1** Press and hold **Select**. You will be prompted to set your vehicle radio to the displayed FM channel.
- 2** If you want to select a different FM channel preset, Press and hold **Select** again. Repeat until the desired FM channel preset is selected.

***To turn Automatic Power On or Off***

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Vehicle Settings** and press **Select**.
- 4** Turn the **Control Wheel** to highlight **Automatic Power** and press **Select**.
- 5** Each press of **Select** will toggle between **Off** and **On**.

***To configure Power Off***

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.

# Settings

- 3** Turn the **Control Wheel** to highlight **Vehicle Settings** and press **Select**.
- 4** Turn the **Control Wheel** to highlight **Power Off** and press **Select**.
- 5** Each press of **Select** sequences through the choices, **Off**, **60 Minutes**, **90 Minutes**, **120 Minutes**, and **180 Minutes**.

## Line Out Level



**NOTE!** The Line Out Level setting option only appears when the XMp3i is docked, and an audio cable is connected.

Line Out Level is used to adjust the volume level of the XMp3i's vehicle or home dock to match the volume of other audio sources you may use, such as a CD player, other FM stations, a TV, or an MP3 player.

Do not use the Line Out Level as a volume control. Use the volume control on the device that the XMp3i is connected to instead.

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Line Out Level** and press **Select**.
- 4** Use the **Control Wheel** to increase or decrease the level and press **Select** to confirm the new setting.

# Settings

## Antenna Aiming

Your XMp3i can display the received strength of the satellite and terrestrial signals being received. This is useful if you are troubleshooting signal reception problems.

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Antenna Aiming** and press **Select**.
- 4 The Antenna Aiming screen will remain displayed until you dismiss it by pressing **back**.



## Set Time

In Set Time there are three options:

- **Time Zone:** Select the time zone you are in for an accurate clock.
- **Daylight Savings:** Select whether Daylight Savings Time is observed in your location.
- **Hour Mode:** Select whether the clock is displayed in 12-hour or 24-hour mode.

### *To select your Time Zone*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Set Time** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Time Zone** and press **Select**.
- 5 Each press of **Select** sequences through the choices: **Atlantic, Eastern, Central, Mountain, Pacific, Alaska, and Newfoundland**.

### *To select whether Daylight Savings Time is observed*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Set Time** and press **Select**.

# Settings

- 4 Turn the **Control Wheel** to highlight **Daylight Savings** and press **Select**.
- 5 Each press of **Select** will toggle between **Off** and **On**.

## *To select a 12 or 24 Hour Mode for the clock display*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Set Time** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Hour Mode** and press **Select**.
- 5 Each press of **Select** will toggle between **12** hour display mode and **24** hour display mode.

## Restore Defaults

In Restore Defaults, there are two options:

- **Restore Settings:** This erases all personal settings on your XMp3i and restores the factory defaults, but does not delete your recorded or downloaded content. Personal settings include TuneSelects, Favorite Channels, Scheduled Recordings, and Info Extras.
- **Restore and Erase:** This option erases all personal settings, XM recordings, and stored content. Use this with caution as you will not be able to retrieve stored content once it has been erased.

### *To Restore Settings*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3 Turn the **Control Wheel** to highlight **Restore Defaults** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Restore Settings** and press **Select**.
- 5 Turn the **Control Wheel** to highlight **Yes** and press **Select**.

### *To Restore and Erase*

- 1 Press **menu**.
- 2 Turn the **Control Wheel** to highlight **Settings** and press **Select**.

# Settings

- 3 Turn the **Control Wheel** to highlight **Restore Defaults** and press **Select**.
- 4 Turn the **Control Wheel** to highlight **Restore and Erase** and press **Select**.
- 5 Turn the **Control Wheel** to highlight **Yes** and press **Select**.

## Memory Usage

Memory usage displays how much of the memory in your XMp3i is currently being used:

- **XM Singles:** This is the songs you have recorded from XL Live.
- **Other Content:** These are channel recordings from Live XM, scheduled recordings from Live XM, and MP3, WMA, and audio book files you have downloaded to your XMp3i using the XM2go Music Manager software.
- **SD Card:** This is the MP3 and WMA files stored on the microSD card in your XMp3i.

### *To display the Memory Usage*

- 1** Press **menu**.
- 2** Turn the **Control Wheel** to highlight **Settings** and press **Select**.
- 3** Turn the **Control Wheel** to highlight **Memory Usage** and press **Select**.

The Memory Usage screen will remain displayed until you dismiss it by pressing **back**.



# Using your XMp3i with a PC

# Using your XMp3i with a PC

## Introduction

The XM2go Music Manager runs on Microsoft® Windows®-based personal computers and allows you to:

- Manage your music: create and customize playlists of XM recordings or your personal MP3 or WMA files on your XMp3i.
- Schedule recordings on your XMp3i.
- View XM's Online Program Guide: discover new music and programs by seeing what's available on all XM channels for the next week.
- Rip CDs to MP3 or WMA files so you can download them to your XMp3i.
- View your XMp3i bookmarks and purchase songs from compatible online music services including Napster®.
- Listen to and purchase audio books from Audible.com®.
- Manage up to 5 compatible XM Radios.

## System Requirements

PCs running Microsoft Windows XP® must meet the following requirements:

- Service Pack 2 (SP2) or higher
- CPU: 400 MHz or higher
- Hard drive: at least 100 MB free disk space
- RAM: at least 256 MB
- High-speed Internet connection
- Windows Media Player 11 (loaded at time of installation if not present)

PCs running Microsoft Windows Vista® must meet the following requirements:

- CPU: 800 MHz or higher for Vista Home; 1 GHz or higher for other Vista editions
- Hard drive: at least 100 MB free disk space
- RAM: at least 512 MB for Vista Home; at least 1 GB for other Vista editions
- High-speed Internet connection
- Windows Media Player 11 (loaded at time of installation if not present)

## Setup and Installation


Download the XM2go Music Manager software and installation instructions from:

<http://www.xmradio.com/xm2gomusicmanager>

# Using your XMp3i with a PC

## My Music

The XM2go Music Manager helps you organize recorded XM content, your MP3 and WMA files, and audio book files on your XMp3i.

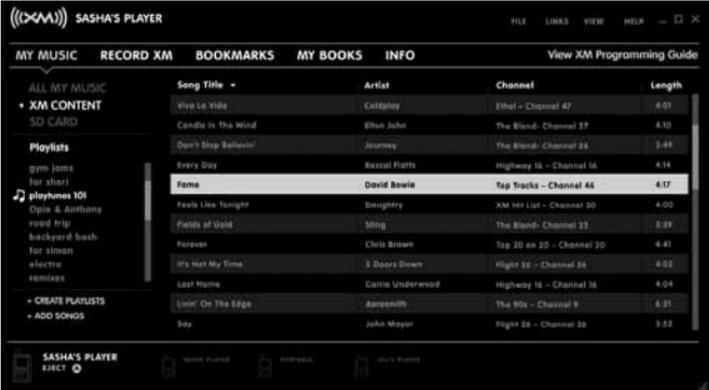


The screenshot shows the SASHA'S PLAYER application window. The interface includes a menu bar (FILE, LINKS, VIEW, HELP), a navigation bar (MY MUSIC, RECORD XM, BOOKMARKS, MY BOOKS, INFO), and a "View XM Programming Guide" link. The main area displays a table of music recordings with columns for Song Title, Artist, Channel, and Length. A sidebar on the left contains options for "ALL MY MUSIC", "XM CONTENT", "SD CARD", "Playlists", "playhines 101", "CREATE PLAYLISTS", and "ADD SONGS".

Song Title	Artist	Channel	Length
Vote Le Vie	Catapult	Ethel - Channel 47	4:01
Candle in the Wind	Elton John	The Band - Channel 27	4:10
Don't Stop Believin'	Journey	The Band - Channel 28	3:49
Every Day	Keasal Flatts	Highway 16 - Channel 16	4:14
<b>Fame</b>	<b>David Bowie</b>	<b>Top Tracks - Channel 46</b>	<b>4:17</b>
Feels Like Younger	Dougherty	XM Hit List - Channel 30	4:00
Fields of Gold	Sting	The Band - Channel 25	3:39
Forever	Clivie Brown	Top 20 on 20 - Channel 20	4:41
It's Not My Time	3 Doors Down	Night 26 - Channel 26	4:03
Last Name	Carris Underwood	Highway 16 - Channel 16	4:04
Under On The Edge	Aerosmith	The 80s - Channel 7	4:31
Say	John Mayer	Night 26 - Channel 26	3:53

- View your XM recordings, including the artist name, song title, the channel it was recorded from, and song length.
- View your personal music (MP3 and WMA file) collection, including the artist name, song title, album, and song length.
- View, create, and modify playlists, and add songs to playlists.
- View XM's Online Programming Guide to see what's playing on XM.

## Record XM

Schedule Recordings of XM content on your XMp3i, using the XM2go Music Manager.

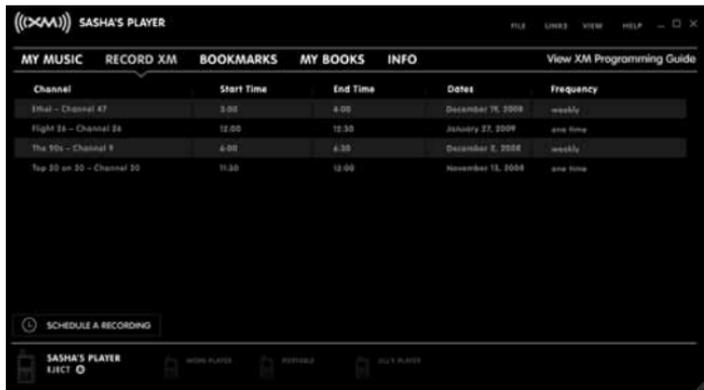


- Save time by recording up to five channels at the same time.
- View all scheduled recordings, including the duration of the recording.
- View XM's Online Programming Guide to see what's playing on XM.

# Using your XMp3i with a PC

## Bookmarks

Bookmarks are an easy way to flag your favorite songs for later reference while listening to your XMp3i.

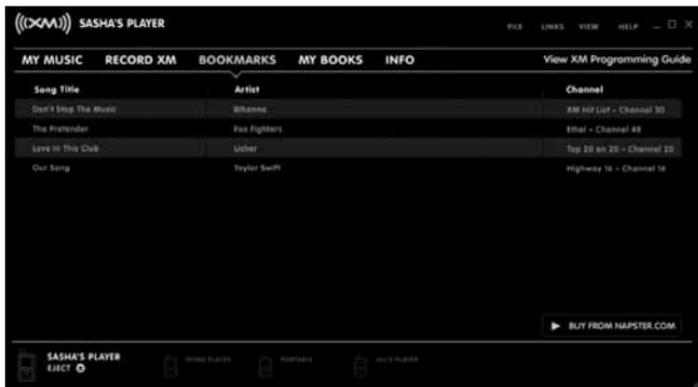


- View songs you have bookmarked on your XMp3i and link to Napster.com to purchase them.
- Add your music library to the XMp3i with a standard or high capacity microSD card. We recommend storing your MP3 files on a microSD card since you can only record XM content to the XMp3i. Recorded content cannot be transferred to a microSD card.
- View XM's Online Programming Guide to see what's playing on XM.



# Using your XMp3i with a PC

## My Books

View the authors, titles, and length of audio books saved on your XMp3i.

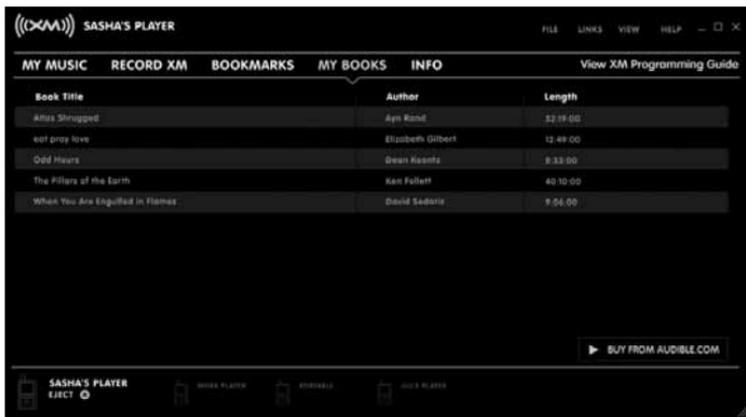

- Link to <http://www.audible.com/xm> to see available audio books.

## audible.com/xm

Audible.com is your source for the internet's largest selection of premium digital audio.




- Link to <http://www.audible.com/xm> to see available audio books.
- Choose from over 40,000 downloadable audio books, including the latest best sellers and timeless classics.
- Download audio books to your XMP3i (or other compatible devices) and listen at the gym, on your commute, anywhere, anytime.

# Using your Xmp3i with a PC

## Info

View Information about your Xmp3i such as model and Radio ID.

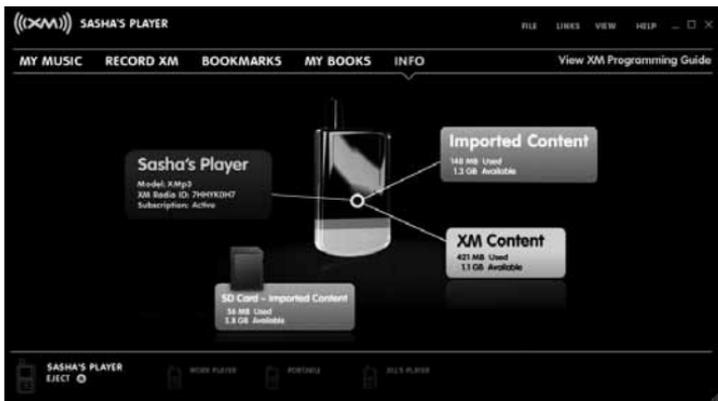

- Personalize the name of your Xmp3i.
- View the amount of XM content storage used/available, and personal music storage used/available on your Xmp3i.
- View the amount of personal music storage/used on your microSD card.
- View XM's Online Programming Guide to see what's playing on XM.

## Updating the XMp3i Firmware

Occasionally we make improvements to the XMp3i's software to add features or improve performance. To be sure your XMp3i is taking advantage of the latest software it is recommend you attempt to update your XMp3i at least once a year.

Updating the software can be done two ways:

- 1 Visiting <http://xmradio.com/XMp3update> and following the directions there.
- 2 Using the XM2go Music Manger Software. Click on the **HELP** option, and then click **Check for Updates**.

Remember that:

- Your XMp3i must be docked and with the Power Adapter plugged in, and must be connected to your PC.
- You should not attempt updating the firmware if your XMp3i is not connected to an external power source.
- Your PC must be connected to the Internet.

## Disconnecting the XMp3i from a PC

To disconnect your XMp3i from your PC, you must follow these steps:

- 3 Click on “Eject” on the lower left-hand corner of the XM2go Music Manager screen.
- 4 XM2go Music Manager will sync with your XMp3i, and then inform you that you can disconnect your XMp3i.
- 5 Unplug the USB cable from either the PC or your XMp3i.



**NOTE!** Do not use Windows’ “Safely Remove Hardware” button as it does not properly sync the XM2go Music Manager with your XMp3i.

# Troubleshooting

# Troubleshooting

XMp3i has been designed and built to be trouble-free but if you experience a problem, try this:

- Check that all connections are firm and secure.
- Make sure you have installed the XMp3i as described in this User Guide.

<b>If you see this on the screen:</b>	<b>Try this:</b>
No signal	Make sure the XM antenna is not obstructed.
Check Antenna	Make sure that the antenna cable is firmly and securely plugged into the Home Dock. Make sure the cable is not bent or broken. Turn XMp3i off, then on, to reset this message.
Off Air	The channel you've selected is not currently broadcasting. Tune to another XM channel.
- - -	No program information, such as artist name, song title, or channel exists.
Loading	Your XMp3i is acquiring audio or program information from the XM signal. This message usually goes away in a few seconds. You may also see this message if the channel you're tuning to is blocked. Try another channel.
Updating	XM is updating your XMp3i with the latest encryption code. Wait until the update is done. You may be trying to tune to a channel that is blocked or unavailable. Tune to another channel.
Channel Unavailable	Tune to another channel. The one you're trying to access is not available.

<b>If you see this on the screen:</b>	<b>Try this:</b>
All Recording Features Not Available	Activate your XM subscription to be able to record XM programming on your XMp3i.
This Channel Not Available for Recording	Do nothing. Recording is restricted by the content owners.
This Program Not Available for Recording	Do nothing. Recording is restricted by the content owners.
Connect to XM Antenna Within 30 Days to Avoid Interruption in Listening to XM Recordings	You must receive a live XM signal for at least 8 hours a month to authenticate your XM subscription.
Please Connect to XM Antenna to Confirm Valid Subscription	Select "Live XM" and make sure you get a strong signal.
Activation Required for Playback	Activate your XM subscription.
SD Card Error	Check to see whether the microSD card is too full; if so, delete files so that at least 32 MB of memory is available. Check whether the microSD has been formatted correctly; if not, reformat the microSD card using your PC.
<b>If this happens:</b>	<b>Try this:</b>
XMp3i shuts off unexpectedly.	If you're in a vehicle, check whether the Power Off feature is set, and set it to "Off", if desired.

# Troubleshooting

If this happens:	Try this:
There is no power or the XMp3i shuts off quickly.	Check the battery level, it may be low. Charge the battery for 8 hours.
You do not receive all the XM channels you subscribed to.	Check that you have not skipped any channels. If you still do not receive all channels, your XMp3i may not be properly activated. Contact XM Listener Care.
No audio or poor audio.	Check all cables and secure connection between connectors on your XMp3i and your stereo system or powered speakers for a firm and secure connections.
No song title or artist name is displayed.	The information may not be available or updates may be in progress.
Buttons do not respond.	Check whether the <b>Power/Lock</b> switch is in the "lock" position. If so, slide it to the center position to unlock the buttons.
The buttons still refuse to respond, the display does not change, or the backlight does not turn off as expected.	To reset your XMp3i, slide and hold the <b>Power/Lock</b> switch down for 3 seconds. If this doesn't work remove and re-insert the battery.
XM Instant Traffic and Weather channels sound different from other channels.	Do nothing. These channels use a different audio technology than the other XM channels.
Battery level meter does not match the expected charge or playback time.	Fully charge the battery, then use your XMp3i until the battery is exhausted. This calibrates the battery level meter.

<b>If this happens:</b>	<b>Try this:</b>
Your XMp3i cannot see any files on the microSD card.	Check that the microSD card is unlocked.
Your XMp3i still cannot see any files on the microSD card.	Check whether the microSD card is too full. There must be at least 32 MB of free space available on the microSD card for XMp3i to use it successfully.
Your XMp3i does not save any Auto Recordings.	You need to turn the Auto Recordings feature on. Refer to "Auto Recordings" on page 88.
Your XMp3i does not communicate with your PC.	Check power and USB connections between your XMp3i and your PC. Be sure to use the supplied USB cable. Remove your XMp3i from the Home Dock, then re-insert.



# Product Specifications

# Product Specifications

## XMp3i Radio

Power Requirements	5.2 V DC, 1.6 A (max)
Temperature Range	32°F to 95°F (0°C to 35°C)
Audio Output	2 x 12mW @ 32 Ohm
Dimensions	2 in (width) x 3.6 in (height) x 0.6 in (depth) 51 mm (width) x 92 mm (height) x 15 mm (depth)
Weight:	3.1 oz (88 g) with battery 2.4 oz (69 g) without battery
Storage Capacity	2 GB internal microSD™ removable (up to 16 GB)
Audio Connector	3.5 mm female
Power Connector	4.8 mm female

## Battery

Type	3.7 V Lithium Ion rechargeable
Capacity	920 mAh 3.6 hr live / 16.5 hr playback / 30 day standby

## Music File Formats

MP3 and WMA. Fixed Bitrates: 32, 48, 96, 128, 160, 192, 256, 320 kbps. Variable Bitrates: 64-128, 128-256, 160-320 kbps.

## Home Dock

Dimensions	2.7 in (W) X 1.4 in (H) X 2.1 in (D) 69.6 mm (W) X 35.1 mm (H) X 53.2 mm (D)
Weight	2.5 oz (71 g)
Audio Connector	1/8 in (3.5 mm) female
Antenna Connector	SMB male
Power Connector	3.0 mm female

## Remote Control

Dimensions:	1.5 in (width) x 4.7 in (height) x 0.60 in (depth) 40 mm (width) x 119 mm (height) x 15.4 mm (depth)
Weight:	2.4 oz (69 g)
Battery:	CR2032, 3 V

# Patent and Environmental Information

## Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. Furthermore, the AMBE™ voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof ) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SIRIUS | XM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

## Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances.

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate) (Applicable to California, U.S.A.)

Your Radio is packaged with cardboard, polyethylene, etc., and does not contain any unnecessary materials.

# FCC Statement

The user is cautioned that changes or modifications not expressly approved by SIRIUS XM Radio Inc. can void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the SIRIUS | XM equipment and the affected receiver.
- Connect the SIRIUS | XM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING!** The FCC and FAA have not certified this Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, SIRIUS XM Radio Inc. cannot support this type of application or installation.

# Copyrights and Trademarks

©2009 SIRIUS XM Radio Inc. "SIRIUS", "XM" and all related marks and logos are trademarks of SIRIUS XM Radio Inc. and its subsidiaries. "BBC" and "Radio One" are trademarks of the British Broadcasting Corporation and are used under license. BBC logo © BBC 1996. Radio 1 logo © BBC 2001. Cosmopolitan™ is a registered trademark of Hearst Communications, Inc. Elvis Radio logo © EPE Reg. U.S. Pat & TM off. IndyCar (and Design) are registered trademarks of Brickyard Trademarks, Inc., used with permission. Major League Baseball trademarks and copyrights are used with permission of Major League Baseball Properties, Inc. Visit the official website at MLB.com. Games subject to availability and change and may not include all spring training games. All rights reserved. NASCAR™ is a registered trademark of the National Association for Stock Car Auto Racing, Inc. The NBA identifications are the intellectual property of NBA Properties, Inc. and the respective NBA member teams. © 2009 NBA Properties, Inc. © 2009 NFL Properties LLC. All NFL-related trademarks are trademarks of the National Football League. NHL and the NHL Shield are registered trademarks of the National Hockey League. © NHL 2009. All NHL logos and marks and NHL team logos and marks depicted herein are the property of the NHL and the respective teams and may not be reproduced without the prior written consent of NHL Enterprises, L.P. The Home Ice® channel is a registered trademark of XM Satellite Radio Inc. The Swinger Golfer logo is a registered trademark of PGA TOUR, Inc. Visit [xmradio.com/xmlineup](http://xmradio.com/xmlineup) for updates. All programming/channel lineup/XM service subject to change or preemption. All other marks and logos are the property of their respective owners. All rights reserved. Hardware, subscription and activation fee required. Other fees and taxes may apply. Month-to-month subscriptions must be activated via telephone. Hardware and subscription sold separately. Subscription governed by XM Customer Agreement, which can be found at [xmradio.com/serviceterms](http://xmradio.com/serviceterms). Prices and programming are subject to change. **XM Radio U.S. service only available in the 48 contiguous United States and the District of Columbia.**

# Owners Record

## Owner's Record

The Radio model number is located below and the XM Radio ID is located on the label on the back of the XMP3i.


Record the XM Radio ID in the space provided below. Refer to these numbers whenever you call your dealer regarding this product.

Radio Model Number: XMP3i

XM Radio ID: \_\_\_\_\_

# Indoor/Outdoor Antenna Template

# Indoor/Outdoor Antenna Template

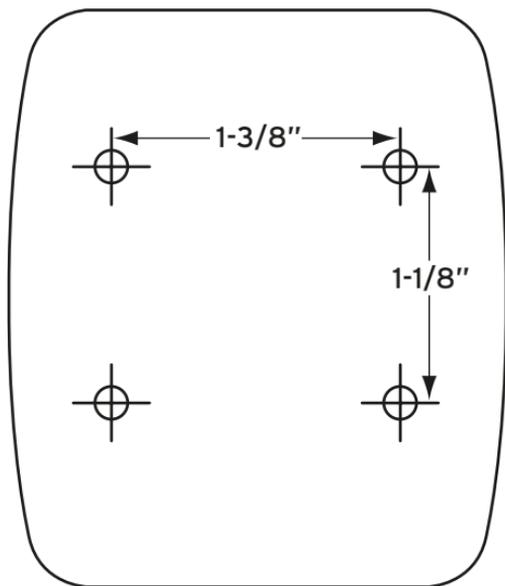



**xmradio.com**

**SIRIUS XM Radio Inc.  
1221 Avenue of the Americas  
New York, NY 10020**

**1.800.967.2346**

© 2010 SIRIUS XM Radio Inc.

XMP3i User Guide\_XMP3IUG0210\_021710