

Remote Codes

GB

CABLE CODES

ABC	5002, 5003, 5004, 5005, 5006, 5009, 5053
ANTRONIX	5008, 5009
ARCHER	5008, 5009, 5010, 5011
CABLETENNA	5008
CABLEVIEW	5008
CENTURY	5011
CITIZEN	5011
COLOUR VOICE	5012, 5013
COMTRONICS	5014, 5015
CONTEC	5016
EASTERN	5017
GARRARD	5011
GC ELECTRONICS	5009
GEMINI	5018, 5019, 5049
GENERAL INSTRUMENT	5003
HAMLIN	5020, 5021, 5022, 5035, 5045
HITACHI	5003
HYTEX	5002
JASCO	5011
JERROLD	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
MAGNAVOX	5025
MEMOREX	5026
MOVIE TIME	5002, 5027, 5028
NSC	5002, 5027, 5028
OAK	5002, 5016, 5029
PANASONIC	5048, 5052
PARAGON	5026
PHILIPS	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
PIIONEER	5033, 5034
PULSAR	5026
RCA	5047, 5049, 5052
REALISTIC	5009, 5049
REGAL	5022, 5035
REGENCY	5017
REMBRANDT	5003
RUNCO	5026
SAMSUNG	5014, 5034
SCIENTIFIC ATLANTA	5006, 5036, 5037, 5038
SIGNAL	5014, 5018
SIGNATURE	5003
SL MARX	5014
SPRUCER	5052
STARCOM	5007, 5018, 5053
STARGATE	5014, 5018
STARQUEST	5018
TANDY	5040
TELEVIEW	5014
TOCOM	5004, 5023, 5041
TOSHIBA	5026
TUSA	5018
TV86	5027
UNIKA	5008, 5009, 5011
UNITED ARTISTS	5002
UNITED CABLE	5053
UNIVERSAL	5008, 5009, 5010, 5011
VIDEOWAY	5044
VIEWSTAR	5015, 5025, 5027, 5040
ZENITH	5026, 5050, 5051

VCR CODES

ADMIRAL	2131
ADVENTURA	2026
AIKO	2027
AIWA	2002, 2026
AKAI	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
AMERICAN HIGH	2021
ASHA	2013
AUDIO DYNAMICS	2009, 2010
AUDIOVOX	2014
BELL & HOWELL	2011
BEAUMARK	2013
BROKSONIC	2012, 2025
CALIX	2014
CANDLE	2013, 2014, 2015, 2016, 2017, 2018, 2019
CANON	2021, 2022, 2114
CAPEHART	2020, 2110
CARVER	2062
CCE	2027, 2061
CITIZEN	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
COLORTYME	2009
COLT	2061
CRAIG	2013, 2014, 2023, 2061
CURTIS-MATHES	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
CYBERNEX	2013
DAEWOO	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
DAYTRON	2110
DBX	2009, 2010
DIMENSIA	2000
DYNATECH	2002, 2026
ELECTROHOME	2014, 2029
ELECTROPHONIC	2014
EMERSON	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
FISHER	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
FUJI	2021, 2119
FUNAI	2002, 2026
GARRARD	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
GOLDSTAR	2009, 2014, 2018, 2054, 2121
GRADIENTE	2026
HARLEY DAVIDSON	2026
HARMAN KARDON	2009
HARWOOD	2061
HEADQUARTER	2011
HITACHI	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
HI-Q	2023
INSTANT REPLAY	2021
JCI	2021
JC PENNEY	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
JENSEN	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
KENWOOD	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
KODAK	2014, 2021
LLOYD	2002, 2026
LOGIK	2061
LXI	2014
MAGNAVOX	2021, 2022, 2062, 2063, 2104, 2108, 2124
MAGNIN	2013
MARANTZ	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
MARTA	2014
MASUSHITA	2021
MEI	2021

Remote Codes

GB

MEMOREX 2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
 MGA 2029, 2065, 2113
 MGN TECHNOLOGY 2013
 MIDLAND 2053
 MINOLTA 2055, 2056, 2107
 MITSUBISHI 2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
 MONTGOMERY WARD 2075, 2131
 MOTOROLA 2021, 2131
 MTC 2002, 2013, 2026
 MULTITECH 2002, 2013, 2016, 2026, 2053, 2061
 NEC 2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
 NIKKO 2014
 NOBLEX 2013
 OLYMPUS 2021
 OPTIMUS 2014, 2131
 OPTONICA 2096
 ORION 2035
 PANASONIC 2021, 2022, 2109, 2125, 2126, 2127
 PENTAX 2016, 2055, 2056, 2107, 2120
 PENTEX RESEARCH 2018
 PHILCO 2021, 2022, 2062, 2063
 PHILIPS 2021, 2062, 2096, 2124
 PILOT 2014
 PIONEER 2010, 2055, 2080, 2081, 2123
 PORTLAND 2016, 2017, 2019, 2110
 PROSCAN 2000, 2001
 PROTEC 2061
 PULSAR 2104
 QUARTER 2011
 QUARTZ 2011
 QUASAR 2021, 2022, 2125
 RCA 2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125, 2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
 RADIOSHACK/REALISTIC 2014
 RADIX 2014
 RANDEX 2128
 RICOH 2104
 RUNCO 2005, 2013, 2015, 2033, 2053, 2112
 SAMSUNG 2104, 2131
 SANKY 2010, 2092, 2111, 2123
 SANSUI 2011, 2013, 2023
 SANYO 2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
 SCOTT 2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
 SEARS 2002, 2017, 2029, 2094, 2095, 2096, 2131
 SHARP 2004, 2056, 2061, 2098
 SHINTOM 2013
 SHOGUN 2002, 2131
 SIGNATURE 2021, 2061, 2128
 SINGER 2002, 2004, 2098, 2099, 2119, 2128
 SONY 2021, 2107
 STS 2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
 SYLVANIA 2002, 2026
 SYMPHONIC 2002, 2011
 TANDY 2014
 TASHIKO 2058, 2111
 TATUNG 2002, 2026, 2058, 2085, 2111
 TEAC 2021, 2109
 TECHNICS 2002, 2014, 2021, 2026, 2100, 2129
 TEKNIKA 2013, 2024, 2047
 TMK 2015, 2049, 2051, 2055, 2065, 2093, 2116
 TOSHIBA 2013, 2014
 TOTEVISION 2013
 UNITECH 2009, 2010, 2015, 2016
 VECTOR RESEARCH 2010
 VICTOR 2009, 2010, 2015, 2016, 2113
 VIDEO CONCEPTS 2013
 VIDEOSONIC 2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131

XR-1000 2021, 2026, 2061
 YAMAHA 2009, 2010, 2011, 2018, 2058, 2111
 ZENITH 2004, 2098, 2104, 2119, 2128

TV CODES

ABEX 1172
 ADMIRAL 1001, 1173
 ADVENTURA 1174
 AIKO 1016
 AKAI 1002
 ALLERON 1046
 AMTRON 1038
 ANAM NATIONAL 1003, 1038
 AOC 1004, 1005, 1006, 1007, 1175, 1176
 AUDIOVOX 1038
 BELCOR 1004
 BELL & HOWELL 1001, 1083, 1162
 BRADFORD 1038
 BROKWOOD 1004
 CANDLE 1004, 1006, 1008, 1174
 CAPEHART 1175
 CELEBRITY 1002
 CENTURION 1009
 CITIZEN 1004, 1006, 1008, 1016, 1038, 1105, 1171, 1174, 1177
 CLAIRTONE 1176
 COLORTYME 1004, 1006
 CONCERTO 1004, 1006
 CONTEC/CONY 1012, 1013, 1014, 1038, 1176
 CRAIG 1038
 CROWN 1038, 1171
 CURTIS MATHES 1000, 1004, 1006, 1015, 1105, 1162, 1171
 CXC 1038
 DAEWOO 1004, 1005, 1006, 1016, 1017, 1018, 1127, 1171
 DAYTRON 1004, 1006, 1171
 DIMENSIA 1000
 DUMONT 1004, 1151
 DYNATECH 1178
 ELECTROBAND 1002, 1176
 ELECTROHOME 1003, 1004, 1006, 1019, 1022
 EMERSON 1004, 1006, 1012, 1014, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1041, 1042, 1043, 1044, 1046, 1047, 1123, 1124, 1162, 1171, 1176, 1177, 1179, 1191
 ENVISION 1004, 1006
 FISHER 1048, 1049, 1050, 1051, 1162, 1180
 FUJITSO 1046
 FUNAI 1038, 1046
 FUTURETEC 1038
 GE 1000, 1003, 1004, 1006, 1022, 1052, 1054, 1055, 1087, 1164, 1165, 1166, 1167, 1168, 1181
 GIBRALTER 1004, 1151
 GOLDSTAR 1004, 1005, 1006, 1012, 1019, 1056, 1057, 1058, 1155, 1156, 1171, 1172
 GRUNDY 1038, 1046, 1171
 HALLMARK 1004, 1006
 HARVARD 1038
 HITACHI 1004, 1006, 1012, 1013, 1059, 1060, 1061, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143, 1144, 1145, 1146, 1148, 1150, 1179
 IMA 1038
 INFINITY 1062
 JANEIL 1174
 JBL 1062
 JCB 1002
 JC PENNY 1000, 1004, 1005, 1006, 1008, 1022, 1052, 1054, 1058, 1063, 1064, 1072, 1087, 1105, 1128, 1171, 1172, 1181
 JENSEN 1004, 1006
 JVC 1012, 1013, 1054, 1060, 1065, 1066, 1067, 1089, 1157, 1158, 1159, 1182

Remote Codes

GB

KAWASHO	1002, 1004, 1006
KAYPANI	1175
KENWOOD	1004, 1006, 1019
KLOSS NOVABEAM	1068, 1069, 1174, 1183
KTV	1038, 1070, 1171, 1176, 1177
LOEWE	1062
LOGIK	1083
LUXMAN	1004, 1006
LXI	1000, 1006, 1049, 1062, 1071, 1072, 1073, 1162, 1181
MAGNAVOX	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1089, 1130, 1131, 1132, 1133, 1134, 1183, 1184
MAJESTIC	1083
MARANTS	1062
MARANTZ	1004, 1006, 1062, 1078
MEGATRON	1006, 1059
MEI	1176
MEMOREX	1001, 1006, 1082, 1083, 1162
MGA	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1082
MIDLAND	1054, 1151, 1171, 1172, 1181
MINUTZ	1052
MITSUBISHI	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1082, 1083, 1125
MONTGOMERY WARD	1083
MOTOROLA	1003, 1173
MTC	1004, 1005, 1006, 1105, 1176, 1178
MULTITECH	1038, 1178
MULTIVISION	1084
NAD	1006, 1071, 1072, 1185
NEC	1003, 1004, 1005, 1006, 1089
NIKKO	1006, 1016
NTC	1016
ONWA	1038
OPTIMUS	1185
OPTONICA	1095, 1173
ORION	1035, 1191
PANASONIC	1003, 1054, 1062, 1170
PHILCO	1003, 1004, 1005, 1006, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1077, 1183, 1184
PHILIPS	1003, 1004, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1086, 1087, 1088, 1089
PILOT	1004, 1171
PIONEER	1004, 1006, 1090, 1091, 1092, 1179, 1185
PORTLAND	1004, 1005, 1006, 1016, 1171
PRICE CLUB	1105
PRISM	1054
PROSCAN	1000, 1181
PROTON	1004, 1006, 1012, 1093, 1175
PULSAR	1151
PULSER	1004
QUASAR	1003, 1054, 1070, 1094
RADIO SHACK/REALISTIC	1000, 1004, 1006, 1012, 1038, 1049, 1095, 1162, 1171, 1172
RCA	1000, 1003, 1004, 1005, 1006, 1007, 1019, 1096, 1098, 1099, 1100, 1101, 1102, 1103, 1129, 1179, 1181, 1187, 1188, 1190
RHAPSODY	1176
RUNCO	1151
SAMPO	1004, 1006, 1171, 1172, 1175
SAMSUNG	1004, 1005, 1006, 1012, 1015, 1019, 1104, 1105, 1106, 1171, 1172
SAMSUX	1171
SANSUI	1191
SANYO	1004, 1048, 1049, 1050, 1080, 1107, 1108, 1162, 1169, 1180, 1189
SCOTCH	1006
SCOTT	1004, 1006, 1012, 1024, 1035, 1038, 1046
SEARS	1000, 1004, 1006, 1013, 1019, 1046, 1048, 1049, 1050, 1051, 1066, 1071, 1072, 1109, 1110, 1162, 1180, 1181, 1189
SHARP	1004, 1006, 1012, 1029, 1095, 1111, 1112, 1113, 1122, 1171, 1173
SHOGUN	1004
SIGNATURE	1001, 1083, 1115

SIMPSON	1008
SONIC	1176
SONY	1002
SOUNDESIGN	1004, 1006, 1008, 1038, 1046
SQUAREVIEW	1189
SSS	1004, 1038
STARLITE	1038
SUPRE-MACY	1174
SUPREME	1002
SYLVANIA	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1116, 1161, 1183, 1184
SYMPHONIC	1033, 1038, 1189
TANDY	1173
TATUNG	1003, 1178
TECHNICS	1054
TECHWOOD	1004, 1006, 1054
TEKNIKA	1004, 1005, 1006, 1008, 1012, 1013, 1016, 1038, 1046, 1076, 1082, 1083, 1105, 1170, 1171
TELECAPTION	1117
TMK	1004, 1006
TOSHIBA	1049, 1071, 1072, 1089, 1105, 1109, 1117, 1118, 1160, 1162
TOTEVISION	1171
UNIVERSAL	1052, 1087
VICTOR	1066, 1182
VIDTECH	1004, 1005, 1006
VIKING	1174
WARDS	1000, 1001, 1004, 1005, 1006, 1019, 1024, 1033, 1046, 1052, 1062, 1069, 1074, 1075, 1076, 1083, 1087, 1088, 1095, 1119, 1120, 1184
YAMAHA	1004, 1005, 1006, 1019
ZENITH	1004, 1083, 1151, 1152, 1153, 1154

Satellite Receivers

CHAPPARAL	5056, 5057
DRAKE	5058, 5059
GE SATELLITE RECEIVER	5000, 5001
GENERAL INSTRUMENTS	5060, 5061, 5062
PANASONIC SATELLITE RECEIVER	
	5075
PRIMESTAR DBS	5076
PROSCAN SATELLITE RECEIVER	
	5000, 5001
RCA SATELLITE RECEIVER	5000, 5001
REALISTIC	5063
SONY SATELLITE RECEIVER	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
TOSHIBA	5068
TOSHIBA SATELLITE RECEIVER	5073
UNIDEN SATELLITE RECEIVER	5069

Audio (RCA/Dimensia only)

AM/FM	4003
AUX	4004
PHONO	4005
CD	4007
TAPE	4006

Laserdisc Players

PROSCAN	2001
RCA	2001

Using the Remote to Control additional components

You can set your remote to control components other than the receiver itself (like CD, TV, DVD, TAPE, etc.). What you need is to program your remote to control them in advance:

1. Turn on the component to be programmed.
2. Look up the brand and corresponding code number in the code list on page 16.
3. While keeping the component button (like VCR1, VCR2, TV, DVD) on the remote pressed, enter the code from the code list.
4. Release the component button, then press POWER to see if the component responds to the remote commands. If it doesn't work, try pressing the component button, then POWER again.
5. Repeat steps 3 through 4 using the next code listed for the brand of your component until the component responds to the remote commands.

This remote may not operate all models of the brands shown. If a battery is removed from the battery compartment of the remote control, all control key functions will return to original, and you need to re-enter all previous programmed codes again.

The buttons on the remote operate may not work on all other brands of components. Experiment with the remote and your components to see which buttons work. If only a few functions operate, check to see if another code set will work with more buttons.